


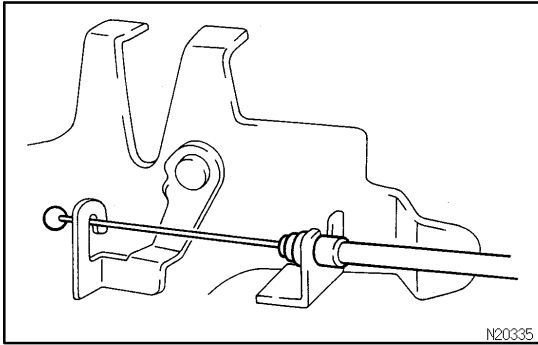

HOOD LOCK CONTROL REMOVAL


B03EF-01

1. REMOVE RADIATOR GRILLE

Remove the 5 screws and radiator grille.

2. REMOVE HOOD LOCK

- (a) Remove the 3 screws, protector and hood lock.
- (b) Disconnect the cable from the lock.

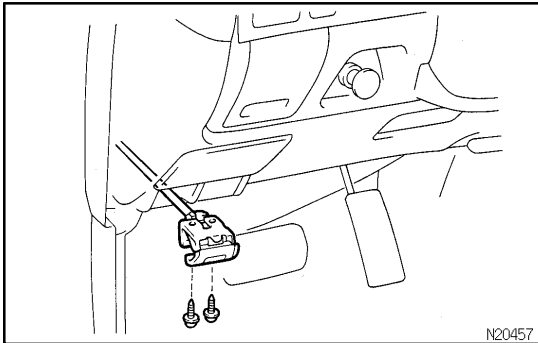

3. REMOVE HOOD LOCK RELEASE LEVER

- (a) Remove the 2 screws and hood lock release lever.
- (b) Disconnect the cable from the lever.

4. REMOVE HOOD LOCK CONTROL CABLE

- (a) Using a screwdriver, disconnect the cable from clamps.

HINT:

Tape a screwdriver tip before use.

- (b) Separate the wire harness and cable.
- (c) Pull the cable from engine room to remove it.

