



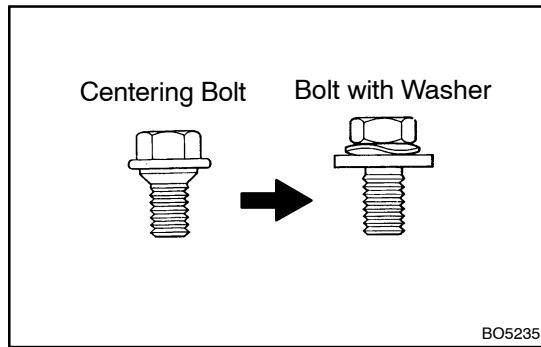

## ADJUSTMENT

### HINT:


Since the centering bolt is used as the hood hinge set bolt, the hood cannot be adjusted with it on. Substitute the bolt with washer for the centering bolt.

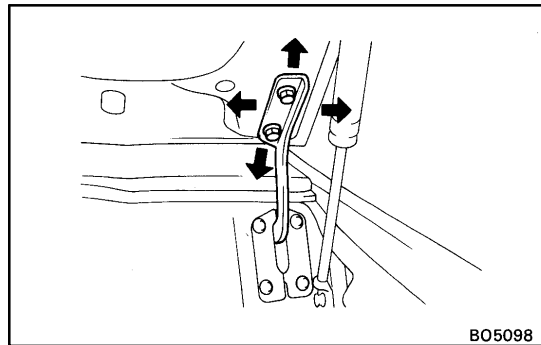

### 1. ADJUST HOOD IN FORWARD/REARWARD AND LEFT /RIGHT DIRECTIONS


Adjust the hood by loosening the hood side hinge bolts.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

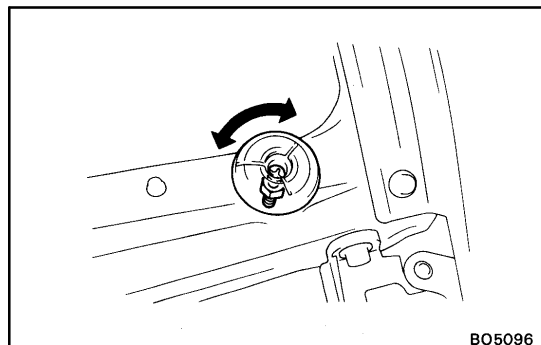


### 2. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTIONS

- (a) Loosen the lock nut.
- (b) Adjust the hood by turning the cushions.

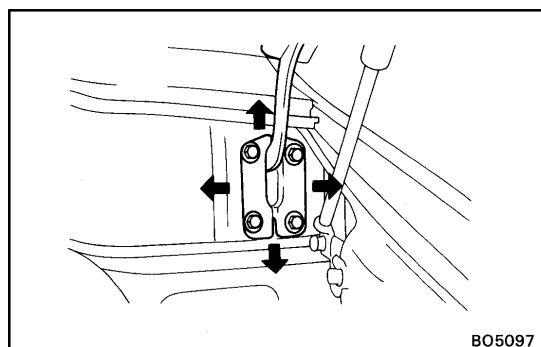

### 3. ADJUST REAR EDGE OF HOOD IN VERTICAL DIRECTIONS

Adjust the hood by loosening the body side hinge bolts.

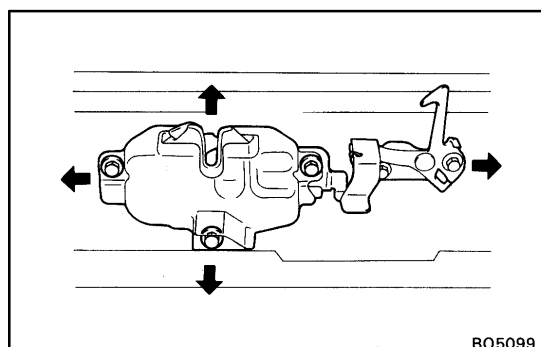

### 4. ADJUST HOOD LOCK

Adjust the hood lock by loosening the mounting bolts.

**Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)**