


DISASSEMBLY


1. REMOVE THESE PARTS:

- (a) Glove compartment door reinforcement
- (b) No.4 heater to register duct
- (c) No.5 heater to register duct
- (d) No.2 register
- (e) Glove compartment door lock striker plate
- (f) No.1 side defroster nozzle duct
- (g) No.2 side defroster nozzle duct
- (h) No.1 side defroster nozzle

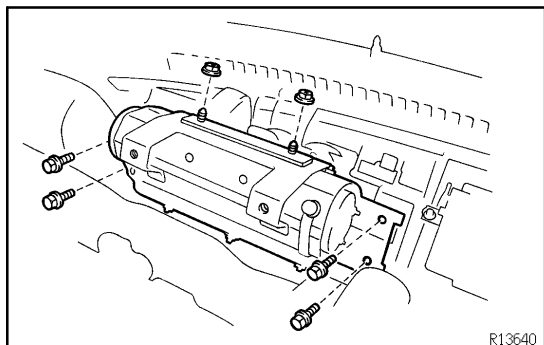

2. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY (See page RS-22)

- (a) Remove the 4 bolts, 2 nuts, and remove front passenger airbag assembly.

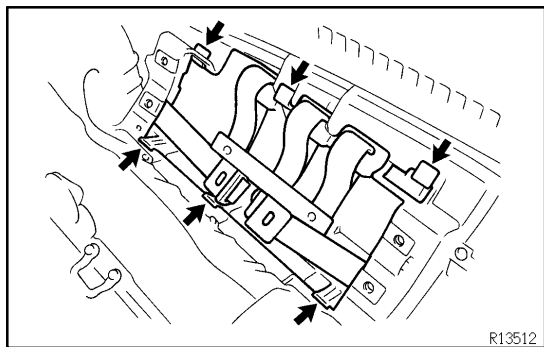

- (b) Pry up the 6 clips as shown in the illustration and remove the airbag door.

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment direction facing down.
- Never disassemble the front passenger airbag assembly.

3. REMOVE THESE PARTS:

- (a) No.6 console mounting bracket
- (b) No.1 heater to register duct
- (c) No.2 stay
- (d) Instrument panel safety pad sub-assembly