



REMOVAL

1. **REMOVE STEERING WHEEL** (See page [SR-11](#))

2. **REMOVE THESE PARTS:**


- (a) Column cover
- (b) Assist grips
- (c) Front pillar garnishes
- (d) Front door scuff plate
- (e) Hood lock release lever
- (f) Fuel lid release lever
- (g) Fuse box opening cover
- (h) Lower finish panel
- (i) Lower instrument panel
- (j) No.2 heater to register duct
- (k) Combination switch

3. **LOOSEN DLC 3 AND FUSE BLOCK**

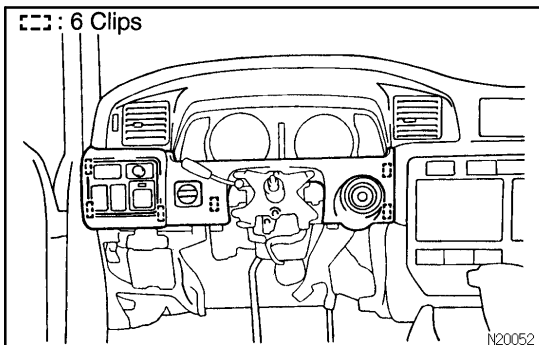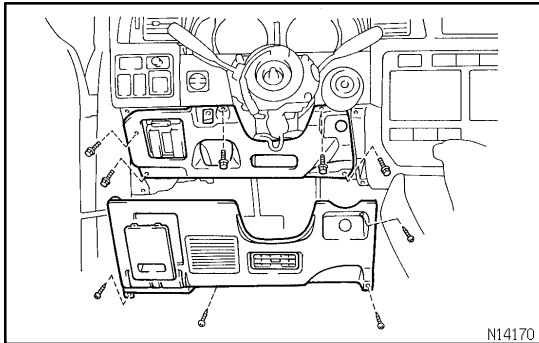


4. **REMOVE NO.2 CENTER CLUSTER FINISH PANEL**

5. **REMOVE STEERING COLUMN** (See page [SR-11](#))

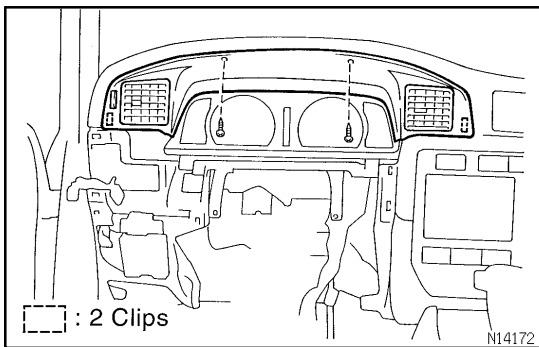


6. **REMOVE THESE PARTS:**

- (a) Cluster finish panel
- (b) Combination meter

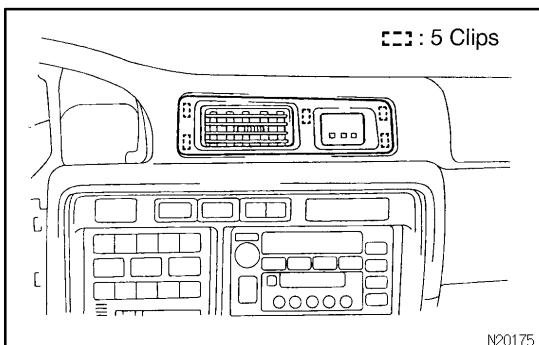

(c) Center cluster finish panel assembly with clock

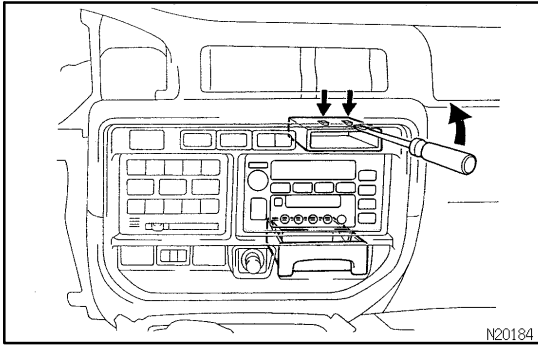


7. REMOVE CENTER CLUSTER FINISH PANEL WITH HEATER CONTROL ASSEMBLY

- (a) Using a screwdriver, take off the 2 claws, then remove the cup holder hole cover.

HINT:

Tape the screwdriver tip before use.

- (b) Take off the ash tray.

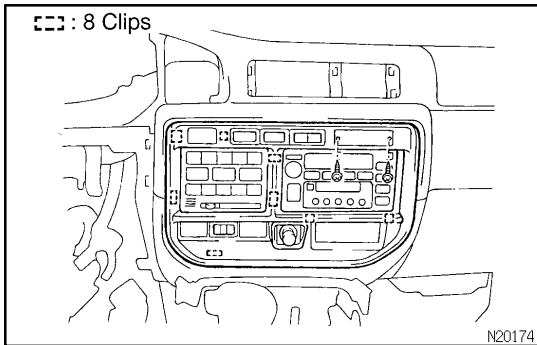


- (c) Remove the center cluster finish panel with heater control assembly, then disconnect the connectors.

- (d) Remove the 2 screws and heater control assembly from the center cluster finish panel.

8. REMOVE THESE PARTS:

- (a) Radio assembly

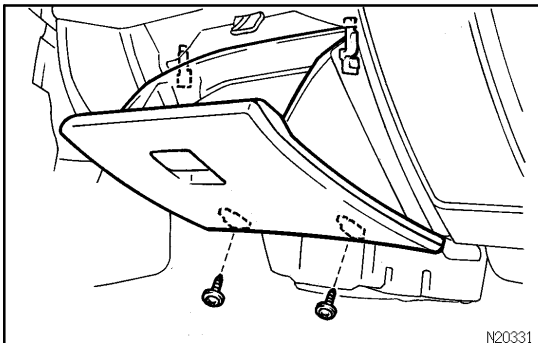

- (b) Glove compartment door

- (c) Glove compartment door stopper

- (d) Speaker panel


- (e) Speaker

- (f) Transfer shift knob

- (g) Front console box

- (h) Rear console box garnish

- (i) Rear console box

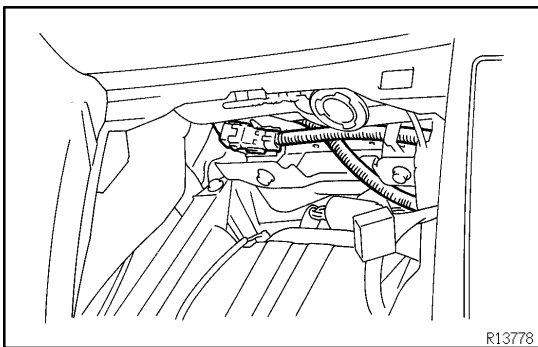


9. DISCONNECT AIRBAG CONNECTOR

- (a) Remove the airbag connector from the airbag bracket.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (b) Disconnect the airbag connector (See page [RS-22](#)).

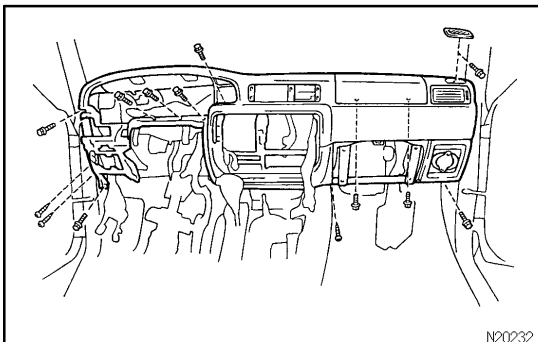


10. REMOVE INSTRUMENT PANEL

- (a) Remove the No.2 side defroster nozzle

- (b) Remove the 10 bolts and 3 screws.

- (c) Remove the instrument panel.

Torque: Passenger airbag assembly bolts
20 N·m (210 kgf·cm, 15 ft·lbf)

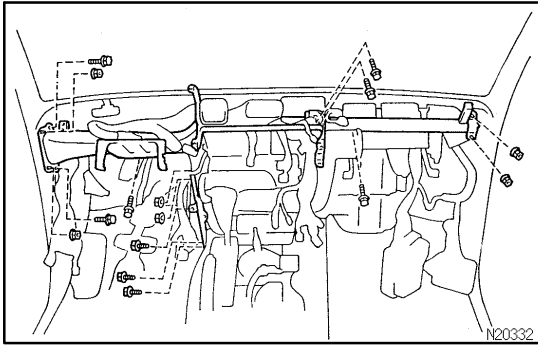**11. REMOVE INSTRUMENT PANEL REINFORCEMENT**

- (a) Remove the 2 bolts and lower instrument panel reinforcement.
- (b) Remove a bolt and No.2 finish panel mounting bracket.
- (c) Remove the 2 bolts, 2 nuts and No.1 brace.
- (d) Remove the 4 bolts, 4 nuts and instrument panel reinforcement.

12. REMOVE THESE PARTS:

- (a) No.3 heater to register duct
- (b) Defroster nozzle assembly