



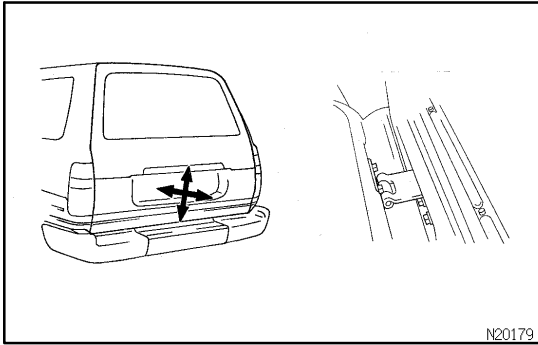

ADJUSTMENT


1. ADJUST DOOR IN FORWARD /REARWARD AND LEFT /RIGHT DIRECTIONS

Adjust the door by loosening the door side hinge bolts.

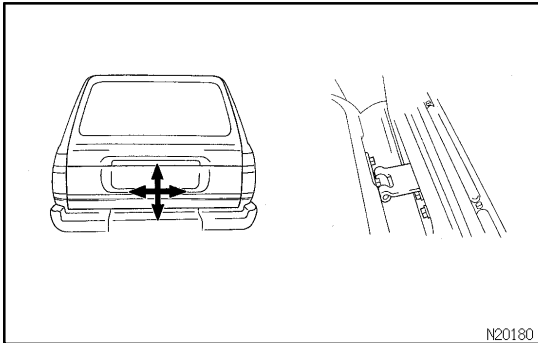

2. ADJUST DOOR IN LEFT /RIGHT AND VERTICAL DIRECTIONS

Adjust the door by loosening the body side hinge bolts.

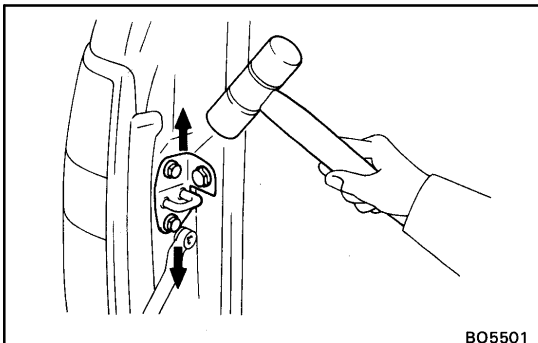

3. ADJUST DOOR LOCK STRIKER

- (a) Check that the door fit and door lock linkages are adjusted correctly.
- (b) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer.
- (c) Tighten the striker mounting screws again.