


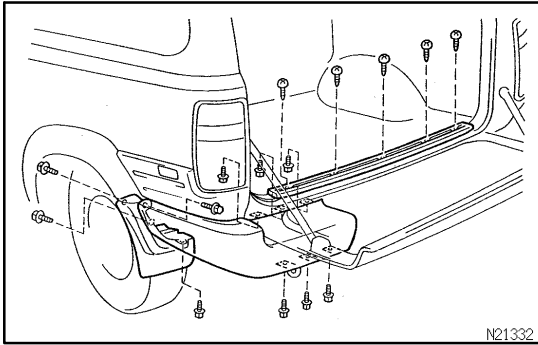

QUARTER OUTSIDE MOULDING REMOVAL


BO9G0-01

1. REMOVE REAR MUDGUARD


Remove the 6 screws and rear mudguard.

2. REMOVE THESE PARTS:


- (a) Rear bumper extension
- (b) Back door scuff plate

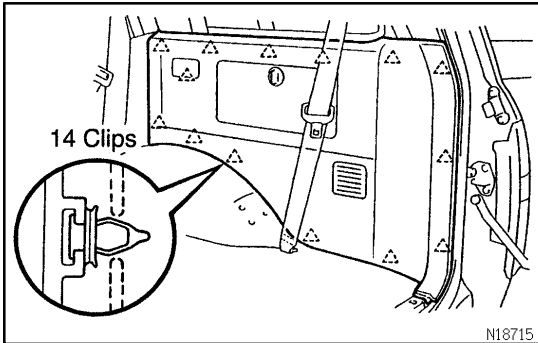

- (c) Quarter trim (RH)

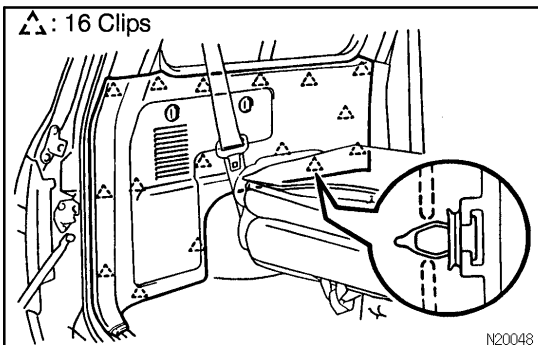


- (d) Quarter trim (LH)

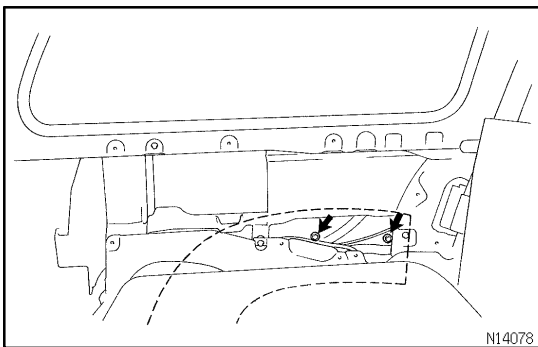


3. REMOVE QUARTER OUTSIDE MOULDING

- (a) Remove the 2 nuts.

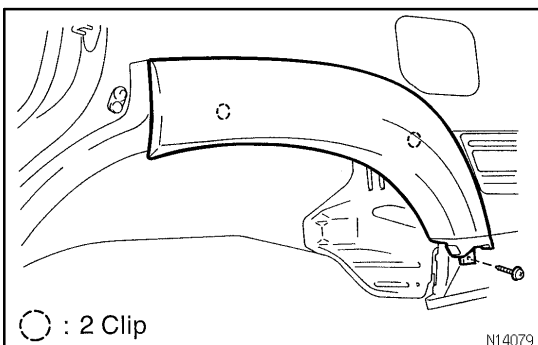

- (b) Remove the screw.

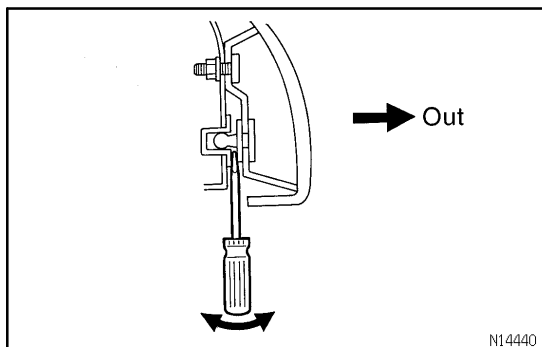

- (c) Insert the screwdriver pry out the rear wheel opening extension.