



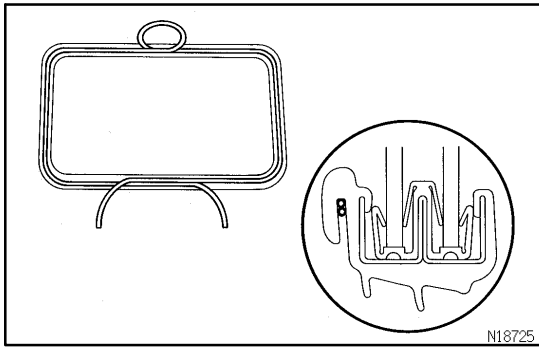

INSTALLATION

1. INSTALL QUARTER WINDOW GLASS


- (a) Insert a cord into the groove of the weatherstrip all the way around with the ends overlapping.

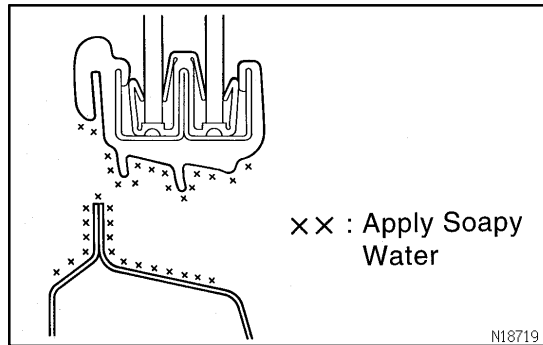


- (b) Apply soapy water to contact surface of the weatherstrip lip and to the body flange.

HINT:

Begin installation in the middle of the lower part of the quarter window glass.

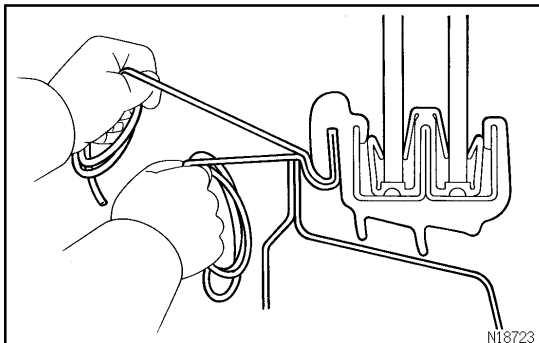

- (c) Hold the glass in position on the body.

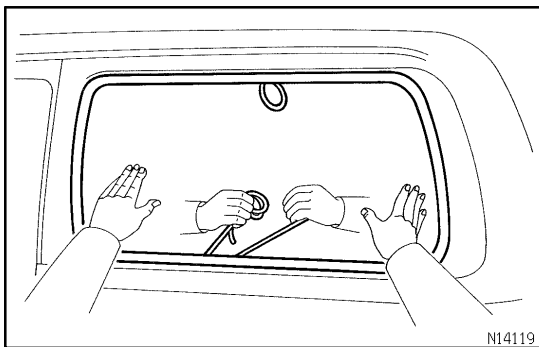

- (d) From the inside, pull on one cord at an angle so it pulls the lip over the flange. From the outside, press the glass along the weatherstrip until the glass is installed.

2. INSPECT FOR LEAKS AND REPAIR

- (a) Do a leak test.
- (b) Seal any leak with auto glass sealer.

3. INSTALL THESE PARTS:

- (a) Roof headlining
- (b) Assist grip
- (c) Rear pillar garnish
- (d) Quarter pillar garnish
- (e) Rear seat side garnish
- (f) Rear door scuff plate
- (g) Quarter trim
- (h) Back door scuff plate
- (i) No.2 rear seat

Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)