


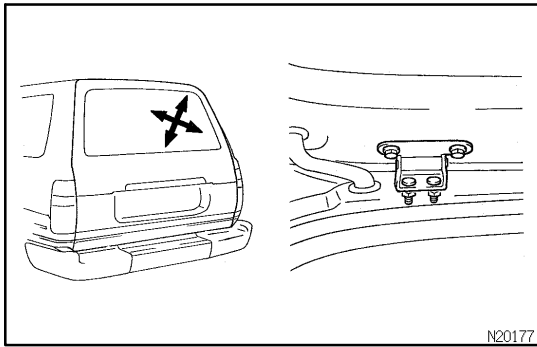


ADJUSTMENT

1. ADJUST DOOR IN FORWARD /REARWARD AND LEFT /RIGHT DIRECTIONS

Adjust the door by loosening the door side hinge bolts.


Torque: 12 N·m (120 kgf·cm, 8.7 ft·lbf)

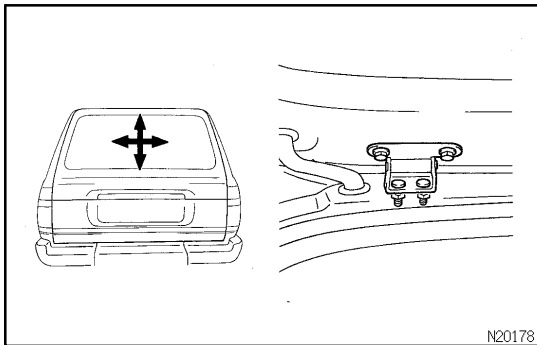

2. ADJUST DOOR IN LEFT /RIGHT AND VERTICAL DIRECTIONS

Adjust the door by loosening the body side hinge bolts.

Torque: 28 N·m (290 kgf·cm, 21 ft·lbf)

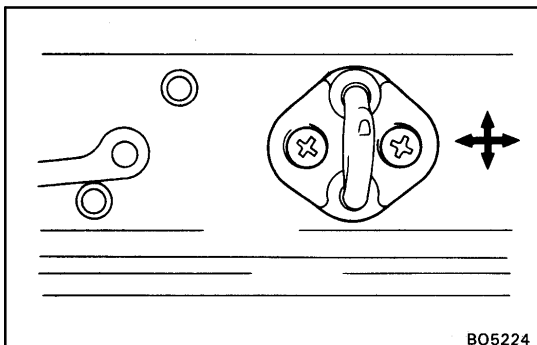

3. ADJUST DOOR LOCK STRIKER

- (a) Check that the door fit and door lock linkage are adjusted correctly.
- (b) Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer. Tighten the striker mounting screw again.

Torque: 12 N·m (120 kgf·cm, 8.7 ft·lbf)