


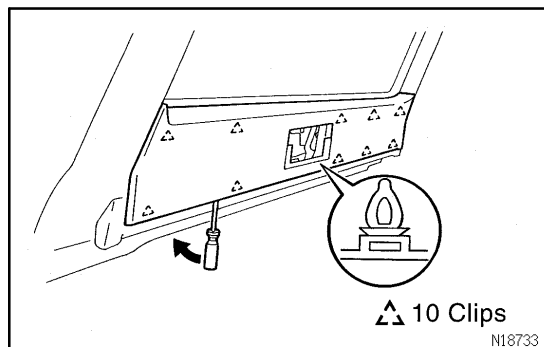

DISASSEMBLY

1. REMOVE PULL HANDLE AND PULL HANDLE BEZEL
2. REMOVE BACK DOOR TRIM
 - (a) Insert a screwdriver, between the door and back door trim to pry it loose.


NOTICE:

Be careful not to damage the door and door trim.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the back door trim.

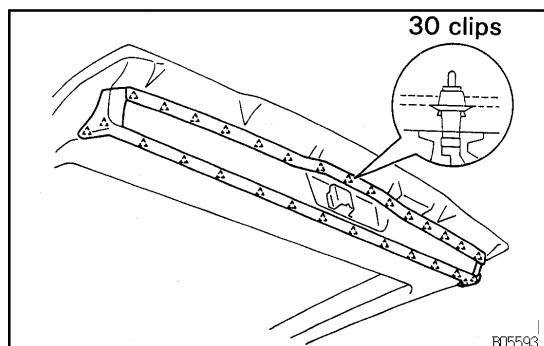

3. REMOVE THESE PARTS:

- (a) Door weatherstrip

NOTICE:


Do not pull strongly on the weatherstrip as it may tear.

- (b) Weatherstrip upper


NOTICE:

Do not pull strongly off the weatherstrip as it may tear.

- (c) Door inside handle

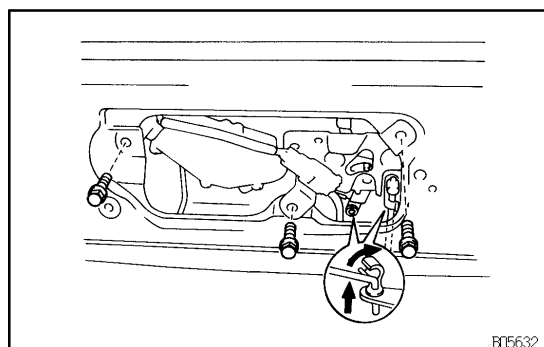

- (d) Door lock control
- (e) Outside handle
- (f) Door lock cylinder
- (g) Wiper arm

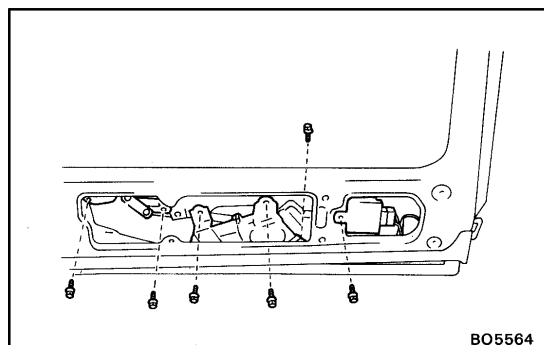

- (h) Wiper motor
Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)
- (i) Wiper control relay
- (j) Door lock
Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

HINT:

At the time of reassembly, apply MP grease to the sliding surface of the door lock.

- (k) Damper stay