


INSTALLATION

1. INSTALL BRAKE BOOSTER

- Install the booster and a new gasket.
- Install the clevis to the operating rod.
- Install and torque the booster installation nuts.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)


- Install the clevis pin into the clevis and brake pedal, and install the clip to the clevis pin.
- Install the pedal return spring.

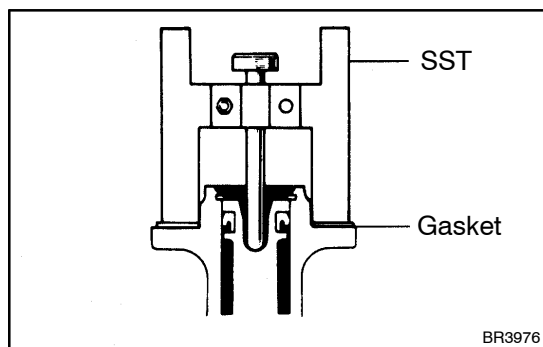

2. ADJUST LENGTH OF BOOSTER PUSH ROD

- Install a new gasket on the master cylinder.
- Set the SST on the gasket, and lower the pin until its tip slightly touches the piston.

SST 09737-00010

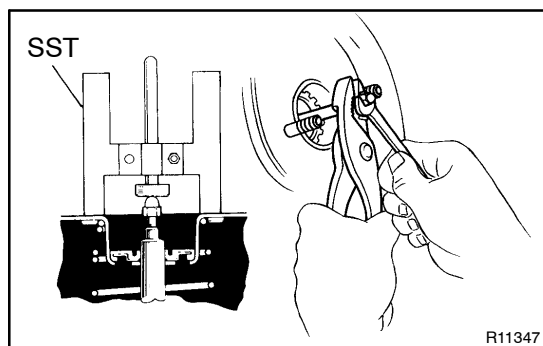

- Turn the SST upside down, and set it on the booster.
SST 09737-00010
- Measure the clearance between the booster push rod and pin head (SST).
Clearance: 0 mm (0 in.)
- Adjust the booster push rod length until the push rod lightly touches the pin head.

HINT:

When adjusting the push rod, depress the brake pedal enough so that push rod stick out.

- INSTALL MASTER CYLINDER** (See page [BR-9](#))
- FILL BRAKE RESERVOIR WITH BRAKE FLUID AND BLEED BRAKE SYSTEM** (See page [BR-4](#))
- CHECK FOR FLUID LEAKAGE**
- CHECK AND ADJUST BRAKE PEDAL**
(See page [BR-6](#))
- DO OPERATIONAL CHECK** (See page [BR-15](#))