


REMOVAL

1. REMOVE MASTER CYLINDER
(See page [BR-9](#))

2. REMOVE THESE PARTS:

- Return spring
- Clip and clevis pin

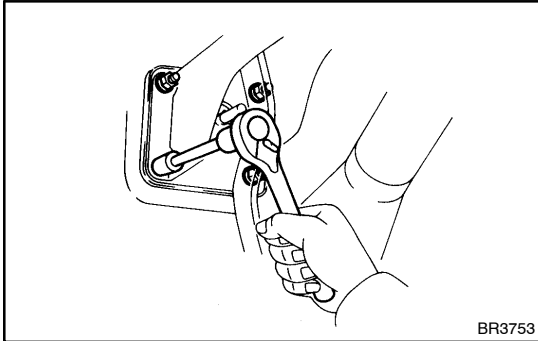

3. REMOVE BRAKE BOOSTER

- (a) Disconnect the vacuum hose.
- (b) Remove the 4 booster installation nuts and clevis.
- (c) Remove the booster and gasket.