



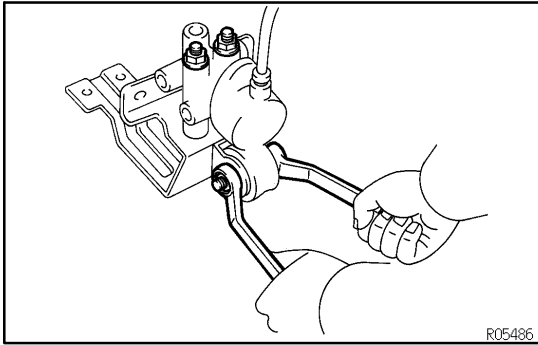

DISASSEMBLY


1. REMOVE VALVE BRACKET

- (a) Remove the nut, bolt and 2 plate washers.
- (b) Remove the 2 nuts, bracket and set plate from the valve body.

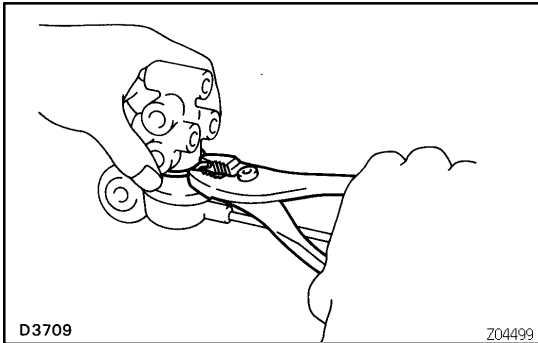


2. DISCONNECT SPRING FROM VALVE

Using pliers, remove the clip, and remove the spring from the valve.

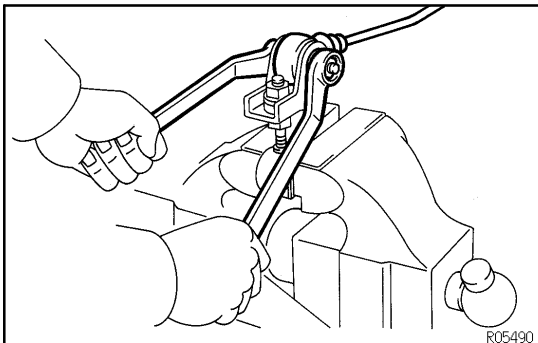

3. REMOVE SHACKLE NO.1 AND NO.2

- (a) Remove the bolt and nut, then remove the these parts:
 - Load sensing spring
 - 2 plate washers
- (b) Loosen the 2 nuts, and remove the shackle No.1 from the shackle No.2.

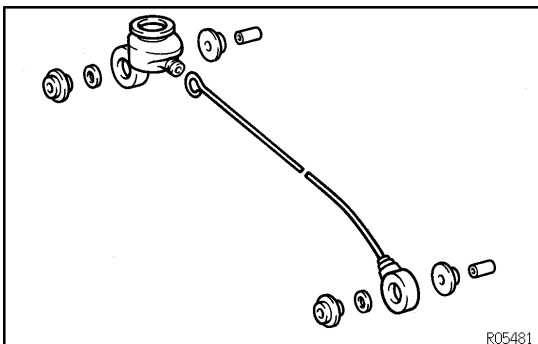

4. DISASSEMBLE LOAD SENSING SPRING

Disassembly the these parts:

- 4 bushings
- 2 collars
- 2 rubber plates
- Load sensing valve boot
- Load sensing spring boot