



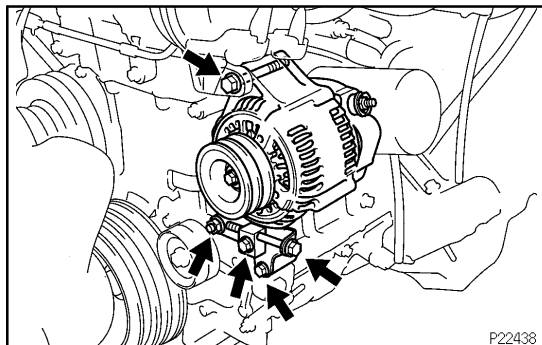

INSTALLATION

1. INSTALL GENERATOR

- (a) Mount the generator on the generator bracket with the pivot bolt. Do not tighten the bolt yet.
- (b) Install the drive belt adjusting bar with the bolt and nut.
Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)
- (c) Temporarily install the lock bolt.
- (d) Connect the generator connector.
- (e) Connect the generator wire with the nut and rubber cap.
- (f) Connect the generator wire clamp to the generator.

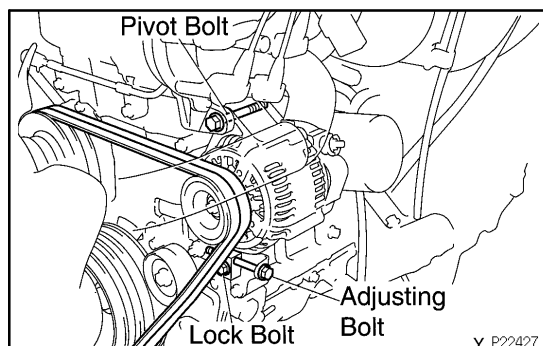

2. INSTALL DRIVE BELTS

- (a) Install the drive belt.
 - (b) Adjust the drive belt with the adjusting bolt (See page [CH-1](#)).
 - (c) Tighten the pivot and adjusting lock bolts.
Torque:
59 N·m (600 kgf·cm, 43 ft·lbf) for pivot bolt
21 N·m (210 kgf·cm, 15 ft·lbf) for adjusting lock bolt
3. CONNECT PS RESERVOIR
 4. INSTALL BATTERY TRAY AND BATTERY
 5. PERFORM ON-VEHICLE INSPECTION
(See page [CH-1](#))