


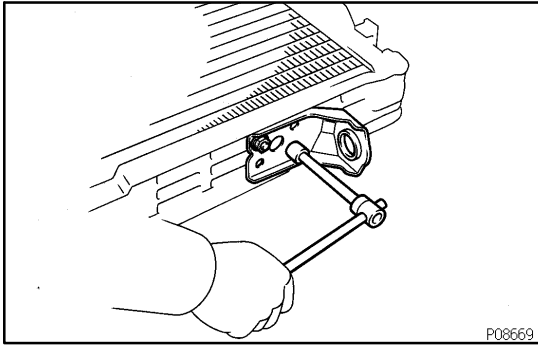


INSTALLATION

1. INSTALL RADIATOR BRACKETS TO RADIATOR

Install the radiator bracket with the 2 nuts. Install the 2 radiator brackets.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

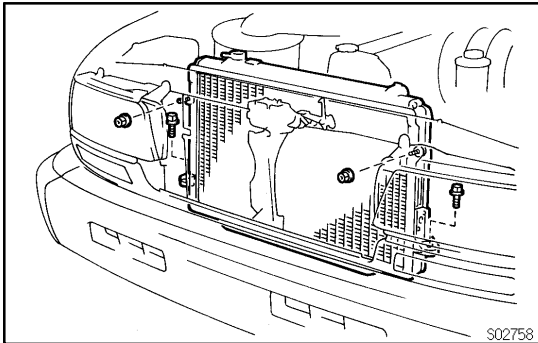


2. INSTALL RADIATOR

(a) Install the radiator with the 2 bolts and 2 nuts.

Torque:

18 N·m (185 kgf·cm, 13 ft·lbf) for bolt


12 N·m (120 kgf·cm, 9 ft·lbf) for nut

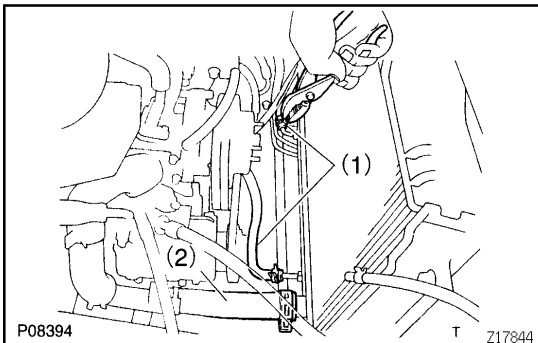

(b) Connect the hoses to the lower side of the radiator.

(1) Connect the 2 A/T oil cooler hoses.

(2) Connect the radiator outlet hose.

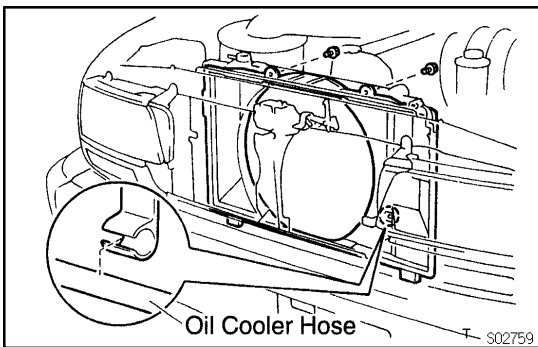


(c) Place the fan with fluid coupling, water pump pulley and fan shroud in position.

(d) Temporarily install the fan pulley mounting nuts.

(e) Install the fan shroud with the 2 bolts.

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)


(f) Connect the oil cooler hose to the clamp on the fan shroud.

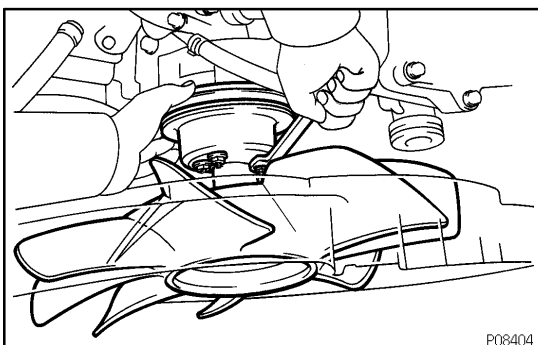

(g) Install the drive belts with the adjusting bolt and pivot bolt.

(h) Stretch the belts tight, and tighten the 4 water pump pulley mounting nuts.

(i) Adjust the drive belts (See page [CH-1](#)).

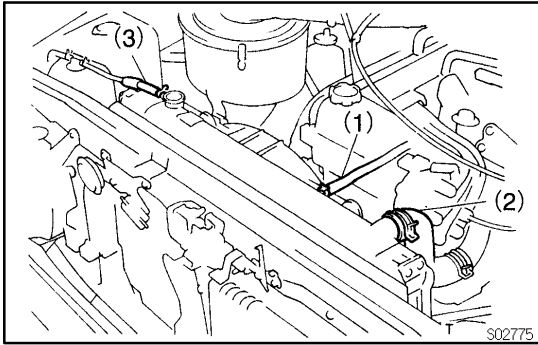

- (j) Connect the hoses to the upper side of the radiator.
- (1) Connect the No. 3 water bypass hose.
 - (2) Connect the radiator inlet hose.
 - (3) Connect the radiator reservoir hose
- 3. INSTALL RADIATOR GRILLE**
 - 4. INSTALL BATTERY AND BATTERY TRAY**
 - 5. FILL WITH ENGINE COOLANT**
 - 6. START ENGINE AND CHECK FOR LEAKS**
 - 7. CHECK A/T FLUID LEVEL**