



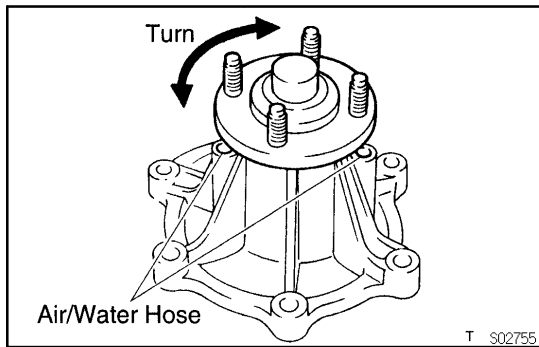

INSPECTION

1. INSPECT WATER PUMP

- (a) Visually check the air and water holes for coolant leakage. If leakage is found, replace the water pump.
 - (b) Turn the pulley seat, and check that the water pump bearing is not rough or noisy.
- If necessary, replace the water pump.

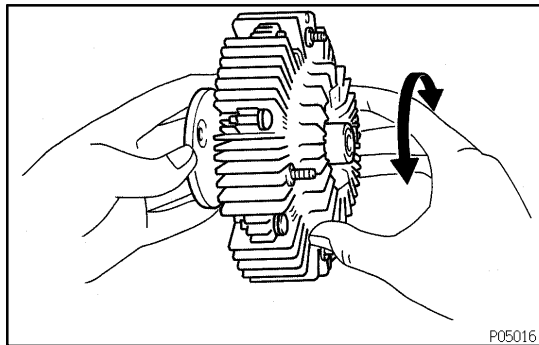

2. INSPECT FLUID COUPLING

Check the fluid coupling for damage and silicon oil leakage. If necessary, replace the fluid coupling.