


TERMINALS OF ECM

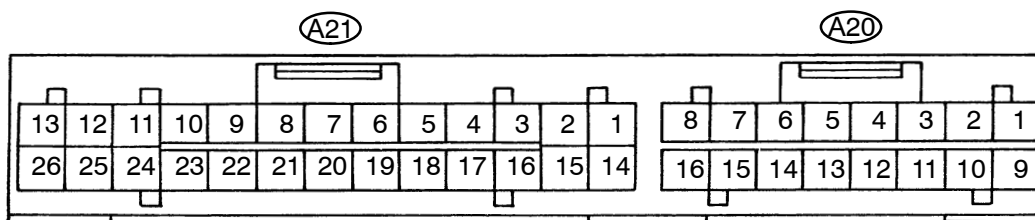

R00463

Symbols (Terminals No.)	STD Voltage (V)	Condition
BAT (A21 - 25) - GND (A21 - 2, 15)	10 - 14	Always
IG1 (A21 - 12) - GND (A21 - 2, 15)	10 - 14	IG switch ON
SR (A21 - 11) - R- (A21 - 24)	9 - 14	IG switch ON, ABS warning light OFF
MR (A21 - 23) - R- (A21 - 24)	Below 1.0	IG switch ON
SFR (A21 - 1) - GND (A21 - 2, 15)	10 - 14	IG switch ON, ABS warning light OFF
SFL (A21 - 13) - GND (A21 - 2, 15)	10 - 14	IG switch ON, ABS warning light OFF
SRR (A21 - 26) - GND (A21 - 2, 15)	10 - 14	IG switch ON, ABS warning light OFF
AST (A21 - 18) - GND (A21 - 2, 15)	10 - 14	IG switch ON, ABS warning light OFF
WA (A20 - 13) - GND (A21 - 2, 15)	Below 2.0	IG switch ON, ABS warning light ON
	10 - 14	IG switch ON, ABS warning light OFF
PKB (A20 - 14) - GND (A21 - 2, 15)	Below 1.5	IG switch ON, PKB switch ON
	8 - 14	IG switch ON, PKB switch OFF
STP (A20 - 6) - GND (A21 - 2, 15)	Below 1.5	Stop light switch OFF
	8 - 14	Stop light switch ON
Tc (A21 - 5) - GND (A21 - 2, 15)	8 - 14	IG switch ON
Ts (A20 - 15) - GND (A21 - 2, 15)	8 - 14	IG switch ON
FR+ (A21 - 16) - FR- (A21 - 3)	AC generation	IG switch ON Slowly turn right front wheel
FL+ (A21 - 9) - FL- (A21 - 22)	AC generation	IG switch ON Slowly turn left front wheel
RR+ (A20 - 8) - RR- (A20 - 16)	AC generation	IG switch ON Slowly turn right rear wheel
RL+ (A20 - 9) - RL- (A20 - 1)	AC generation	IG switch ON Slowly turn left rear wheel
GS1 (A20 - 12) - GND (A21 - 2, 15)	4 - 6 or 7 - 11	IG switch ON
GS2 (A20 - 3) - GND (A21 - 2, 15)	4 - 6	IG switch ON