

CIRCUIT INSPECTION


DTC	P0100	Mass Air Flow Circuit Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The mass air flow meter uses a platinum hot wire. The hot wire air flow meter consists of a platinum hot wire, thermistor and a control circuit installed in a plastic housing. The hot wire air flow meter works on the principle that the hot wire and thermistor located in the intake air bypass of the housing detect any changes in the intake air temp.

The hot wire is maintained at the set temp. by controlling the current flow through the hot wire. This current flow is then measured as the output voltage of the air flow meter.

The circuit is constructed so that the platinum hot wire and thermistor provide a bridge circuit, with the power transistor controlled so that the potential of A and B remains equal to maintain the set temp.

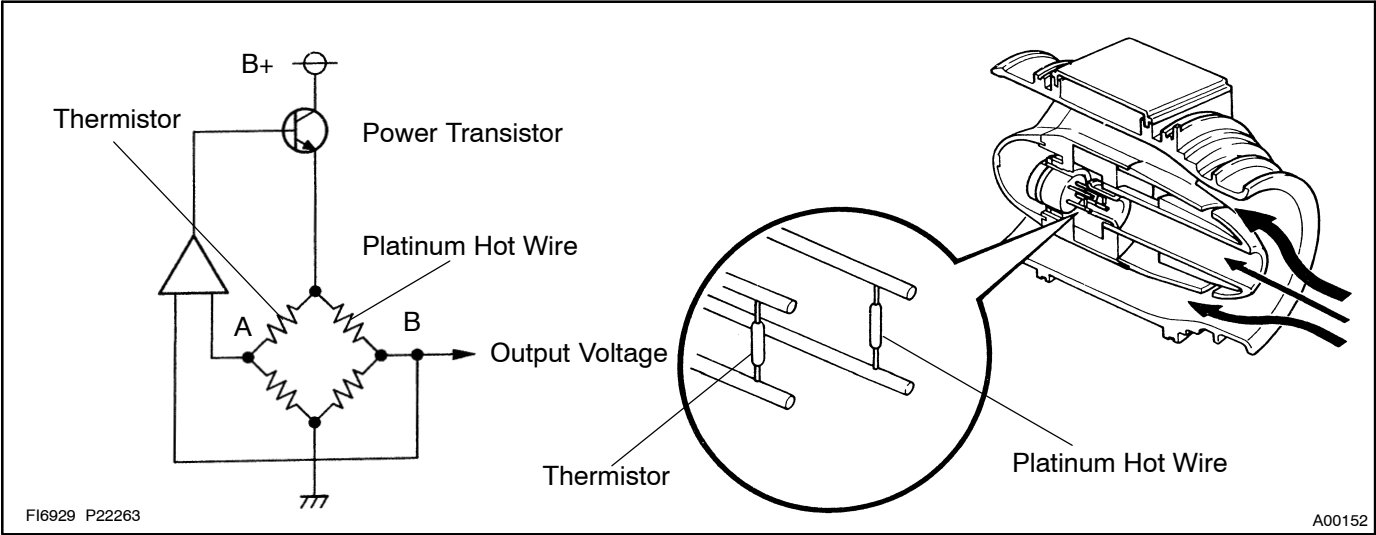

DTC No.	DTC Detection Condition	Trouble Area
P0100	Open or short in mass air flow meter circuit with engine speed 4,000 rpm or less	• Open or short in mass air flow meter circuit • Mass air flow meter • ECM


If the ECM detects DTC P0100, it operates the fail safe function, keeping the ignition timing and injection volume constant and marking it possible to drive the vehicle.

HINT:

After confirming DTC P0100, use the OBD II scan tool or LEXUS hand-held tester to confirm the mass air flow ratio from the CURRENT DATA.

Mass Air Flow Value (gm/sec.)	Malfunction
Approx. 0	• Mass air flow meter power source circuit open • VG circuit open or short
439.0 or more	• E21 circuit open

WIRING DIAGRAM

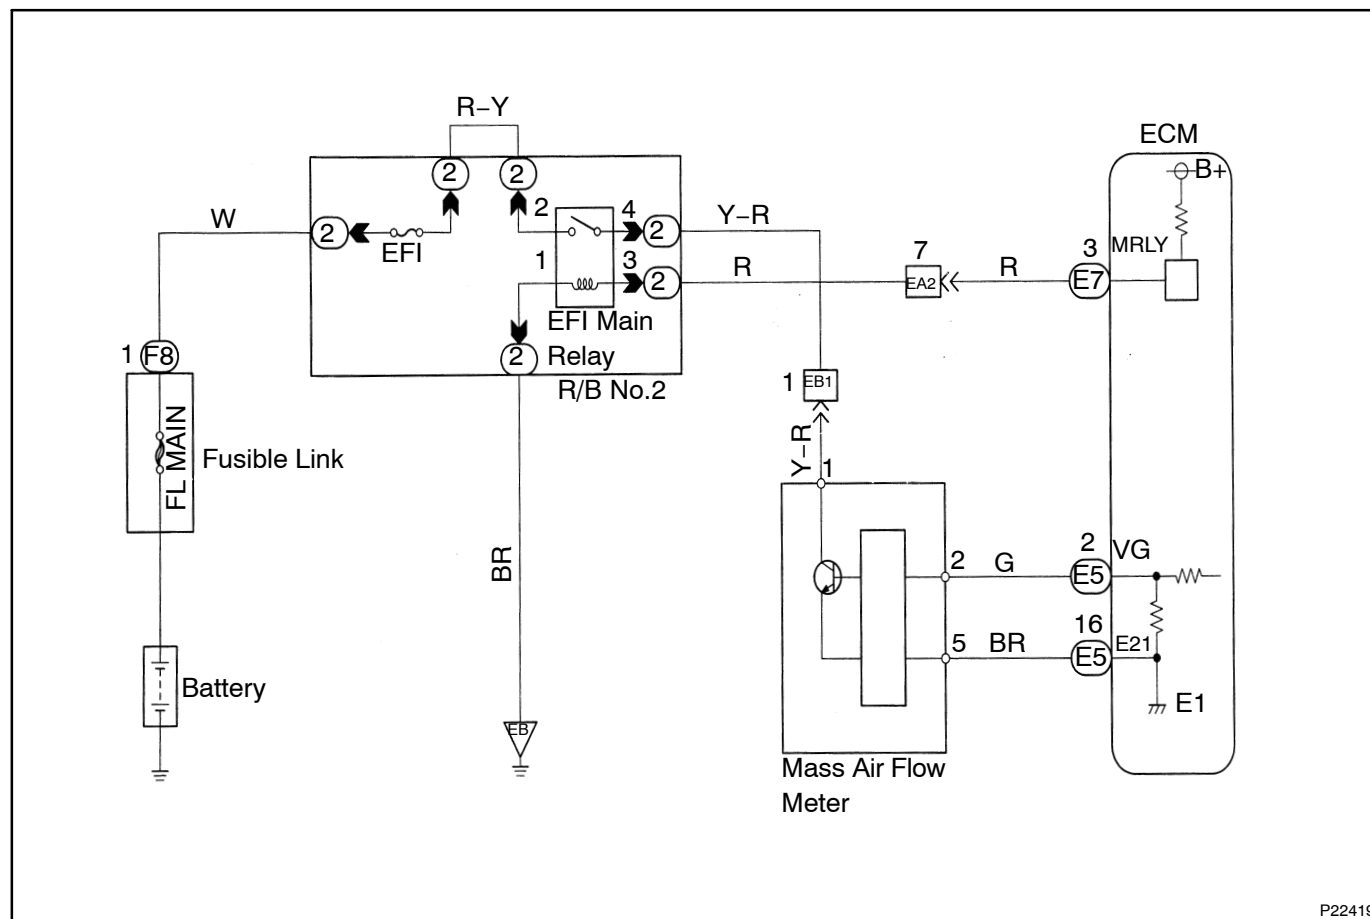

P22419

INSPECTION PROCEDURE

1	Connect the OBD II scan tool or LEXUS hand-held tester, and read value of mass air flow rate.
---	---

PREPARATION:

- Remove the fuse cover on the instrument panel.
- Connect the OBD II scan tool or LEXUS hand-held tester to the DLC3.
- Turn the ignition switch ON and push the OBD II scan tool or LEXUS hand-held tester main switch ON.
- Start the engine.

CHECK:

Read the mass air flow rate on the OBD II scan tool or LEXUS hand-held tester.

RESULT:

	Type I	Type II
Mass air flow rate (gm/sec.)	Approx. 0	439.0 gm/sec. or more


Type I

Go to step 2.

Type II

Go to step 5.

2 Check voltage of mass air flow meter power source.

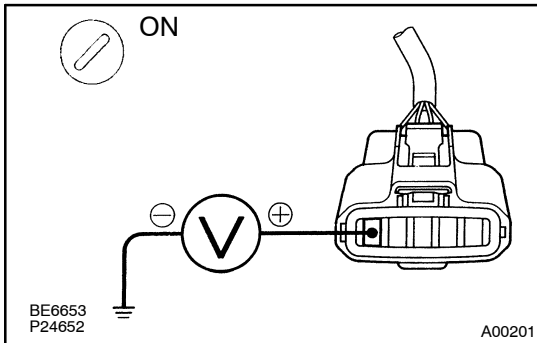

PREPARATION:

- Disconnect the mass air flow meter connector.
- Turn the ignition switch ON.

CHECK:

Measure the voltage between terminal 1 of mass air flow meter connector and body ground.

OK:


Voltage: 9 – 14 V

NG

Check for open in harness and connector between EFI main relay (Marking: EFI) and mass air flow meter (See page IN-27).

OK

3 Check voltage between terminals VG of ECM connector and body ground.

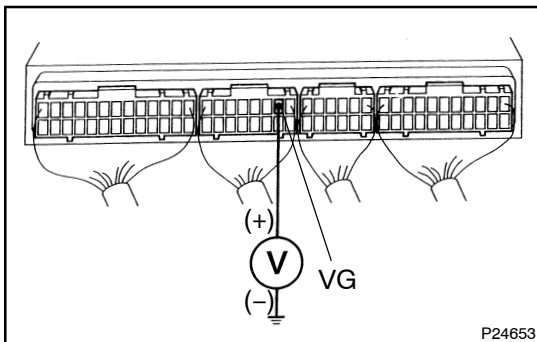

PREPARATION:

- Remove the instrument panel speaker No.1 panel (See page SF-63).
- Start the engine.

CHECK:

Measure the voltage between terminal VG of ECM and body ground while the engine is idling.

OK:

Voltage:

1.1 – 1.5 V (P or N position and A/C switch OFF)

OK

Check and replace ECM (See page IN-27).

NG

4 Check for open and short in harness and connector between mass air flow meter and ECM (See page IN-27).


NG

Repair or replace harness or connector.

OK

Replace mass air flow meter.

5 Check continuity between terminal E21 of ECM connector and body ground.

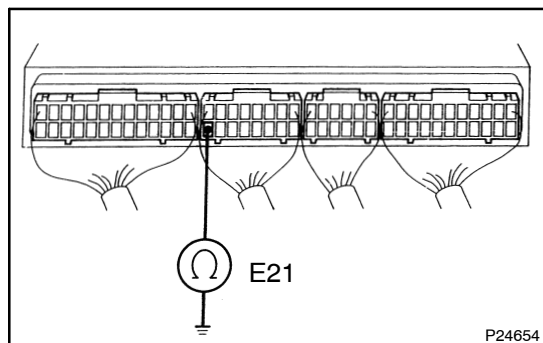

PREPARATION:

Remove the instrument panel speaker No.1 panel
(See page [SF-63](#)).

CHECK:

Check the continuity between terminal E21 of ECM connector and body ground.

OK:

Continuity (1 Ω or less)

NG

Check and replace ECM (See page [IN-27](#)).

OK

**6 Check for open in harness and connector between mass air flow meter and ECM
(See page [IN-27](#)).**

NG

Repair or replace harness or connector.

OK

Replace mass air flow meter.