


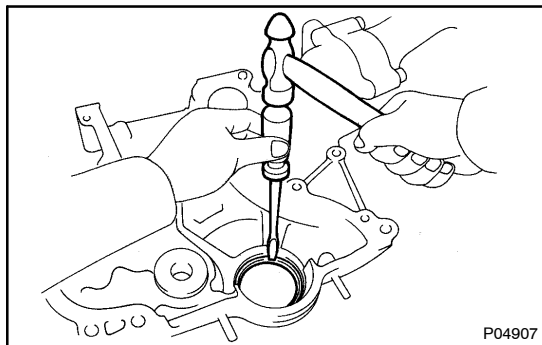


REPLACEMENT

HINT:

There are 2 methods (1 and 2) to replace the oil seal which are as follows:

1. REPLACE CRANKSHAFT FRONT OIL SEAL (IF TIMING CHAIN COVER IS REMOVED FROM CYLINDER BLOCK)

If timing chain cover is removed from cylinder block

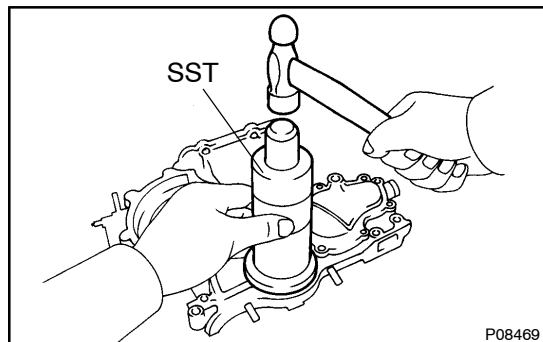


- (a) Using a screwdriver and a hammer, tap out the oil seal.
- (b) Using SST and a hammer, tap in a new oil seal until its surface is flush with the timing chain cover edge.
SST 09316-60010 (09316-00010, 09316-00050)
- (c) Apply MP grease to the oil seal lip.

NOTICE:

Do not let foreign matter get onto the lip of the oil seal.

If timing chain cover is installed to cylinder block:

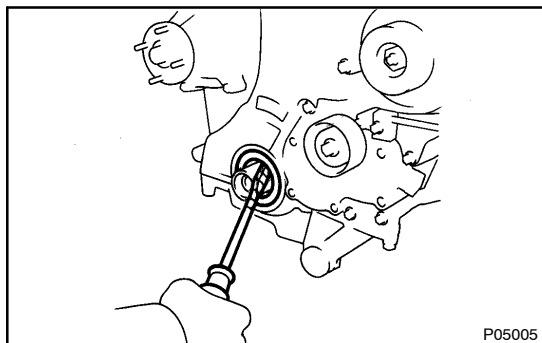

2. REPLACE CRANKSHAFT FRONT OIL SEAL (IF TIMING CHAIN COVER IS INSTALLED TO CYLINDER BLOCK)

- (a) Using a screwdriver, pry out the oil seal.


NOTICE:

Be careful not to damage the crankshaft. Tape the screwdriver tip.

- (b) Apply MP grease to a new oil seal lip.

NOTICE:

Do not let foreign matter get onto the lip of the oil seal.

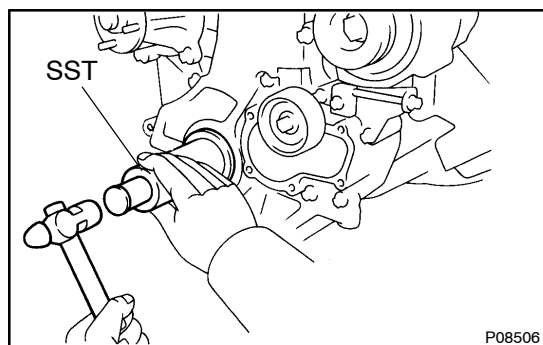

- (c) Using SST and a hammer, tap in the oil seal until its surface is flush with the timing chain cover edge.
SST 09316-60011 (09316-00011, 09316-00051)