


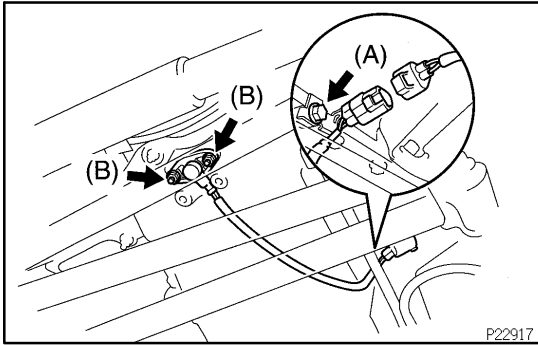

INSTALLATION

1. INSTALL CRANKSHAFT POSITION SENSOR

Install the sensor with the bolt and 2 nuts.

Torque:

20 N·m (200 kgf·cm, 14 ft·lbf) for bolt

9 N·m (90 kgf·cm, 78 in·lbf) for nut

2. CONNECT CRANKSHAFT POSITION SENSOR BRACKET AND CONNECTOR

3. INSTALL CRANKSHAFT POSITION SENSOR PROTECTOR

Install the protector with the 3 bolts.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

4. INSTALL ENGINE UNDER COVER