

REMOVAL

1. **REMOVE ENGINE UNDER COVER**
2. **REMOVE CRANKSHAFT POSITION SENSOR PROTECTOR**

Remove the 3 bolts and sensor protector.

3. **DISCONNECT CRANKSHAFT POSITION SENSOR BRACKET AND CONNECTOR**
4. **REMOVE CRANKSHAFT POSITION SENSOR**

Remove the bolt, 2 nuts and sensor.