 
 
 
 
 
 
 
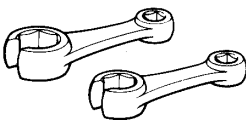 
 


 
 
 
 
 
 
 
 
 
STEERING

 
 
 
 
SST (Special Service Tools)

PP390-01

	09527-10011	Rear Axle Shaft Bearing Remover	PS vane pump
	09610-55012	Pitman Arm Puller	Steering linkage
	09611-22012	Tie Rod End Puller	Steering linkage
	09616-00011	Steering Worm Bearing Adjusting Socket	PS gear
	09628-62011	Ball Joint Puller	Steering linkage
	09630-00014	Power Steering Gear Housing Overhaul Tool Set	
	(09631-00051)	No.3 Wrench	PS gear
	(09631-00121)	Teflon Ring Former	PS gear
	(09631-00142)	Overhaul Stand	PS gear
	09631-10030	Oil Seal Remover	PS vane pump
	09631-22020	Power Steering Hose Nut 14 x 17 mm Wrench Set	PS gear
	09640-10010	Power Steering Pressure Gauge Set	

PREPARATION - STEERING

	(09641-01010) Gauge Assy	On-vehicle inspection
	(09641-01030) Attachment B	On-vehicle inspection
	(09641-01060) Attachment E	On-vehicle inspection
	09910-00015 Puller Set	
	(09911-00011) Puller Clamp	Tilt steering column
	(09912-00010) Puller Slide Hammer	Tilt steering column
	09950-40011 Puller B Set	
	(09957-04010) Attachment	Tilt steering column
	(09958-04011) Holder	Tilt steering column
	09950-50012 Puller C Set	
	(09951-05010) Hanger 150	Tilt steering column
	(09952-05010) Slide Arm	Tilt steering column
	(09953-05020) Center Bolt 150	Tilt steering column

	(09954-05020) Claw No.2	Tilt steering column
	09950-60010 Replacer Set	
	(09951-00360) Replacer 36	PS gear
	(09951-00410) Replacer 41	PS gear
	(09952-06010) Adapter	PS gear
	09950-70010 Handle Set	
	(09951-07200) Handle 200	PS gear