



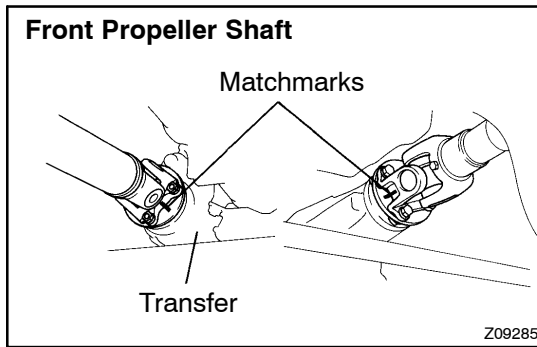

REMOVAL

1. REMOVE FRONT PROPELLER SHAFT

- Place matchmarks on the propeller shaft flange and transfer.
- Remove the 4 nuts and washers.
Torque: 74 N·m (750 kgf·cm, 54 ft·lbf)
- Place matchmarks on the propeller shaft flange and differential.
- Remove the 4 nuts, bolts and washers.
Torque: 74 N·m (750 kgf·cm, 54 ft·lbf)
- Remove the front propeller shaft.

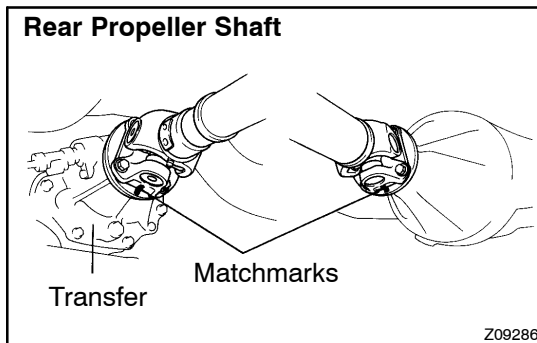

2. REMOVE REAR PROPELLER SHAFT

- Place matchmarks on the propeller shaft flange and transfer.
- Remove the 4 nuts and washers.
Torque: 88 N·m (900 kgf·cm, 65 ft·lbf)
- Place matchmarks on the propeller shaft flange and differential.
- Remove the 4 nuts, bolts and washers.
Torque: 88 N·m (900 kgf·cm, 65 ft·lbf)
- Remove the rear propeller shaft.