


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

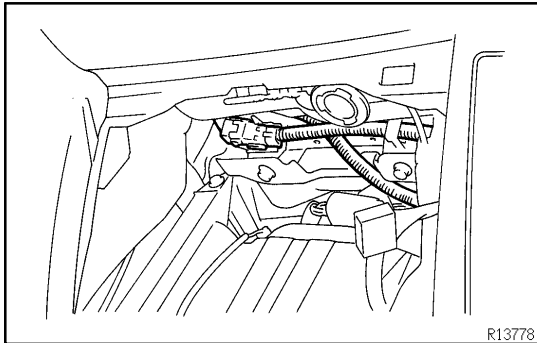


1. DISCONNECT AIRBAG CONNECTOR

- (a) Remove the glove compartment door.
(See page [BO-98](#))
- (b) Remove the airbag connector from the airbag bracket.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

- (c) Disconnect the airbag connector.

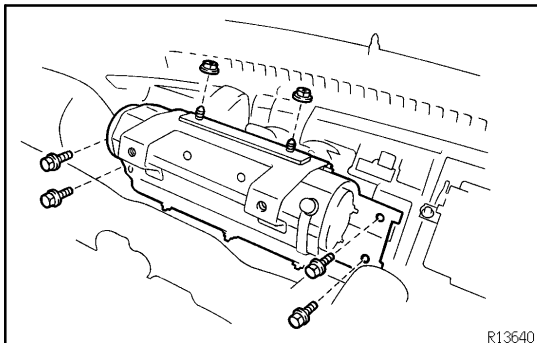


2. REMOVE INSTRUMENT PANEL

(See pages [BO-98](#))

3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 4 bolts and 2 nuts, and remove front passenger airbag assembly.

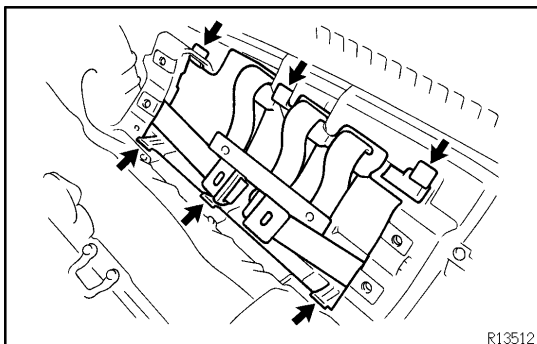

- (b) Pry up the 6 clips shown in the illustration and remove the airbag door.

CAUTION:

Do not store the front passenger airbag assembly with the airbag deployment direction facing down. Never disassemble the front passenger airbag assembly.