



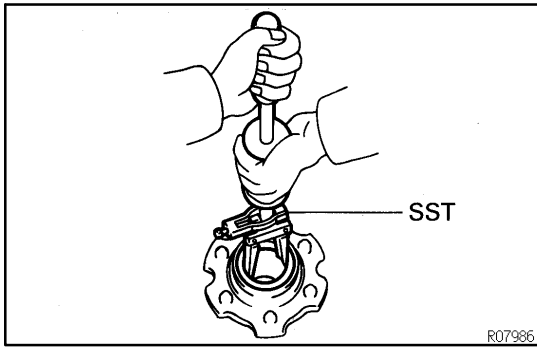

REPLACEMENT

1. REMOVE OIL SEAL AND INNER BEARING

- (a) Using SST, remove the oil seal.
SST 09308-00010
- (b) Remove the inner bearing from the hub.

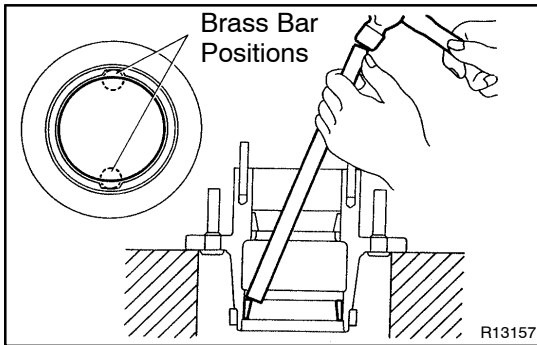


2. REMOVE BEARING OUTER RACE

Using a brass bar and hammer, remove the bearing outer races.


NOTICE:

Be careful not to damage the ABS speed sensor rotor.

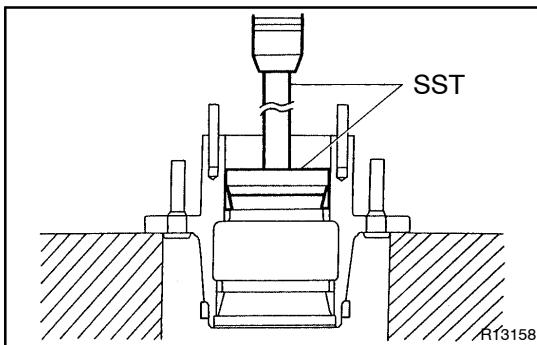

3. INSTALL BEARING OUTER RACE


- (a) Outside race:
Using SST and a press, install new bearing outer races.
SST 09950-60020 (09951-00710),
09950-70010 (09951-07150)
- (b) Inside race:
Using SST and a press, install new bearing outer races.
SST 09950-60020 (09951-00810),
09950-70010 (09951-07150)

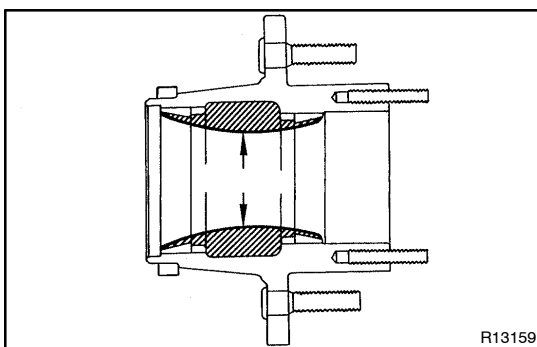

4. PACK BEARINGS WITH MP GREASE

- (a) Place MP grease on the palm of your hand.
- (b) Pack grease into the bearing until the grease ooze out from the other side.
- (c) Do the same around the bearing circumference.

5. COAT INSIDE OF HUB WITH MP GREASE

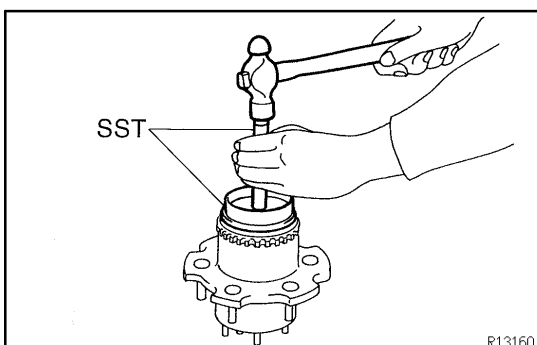

6. INSTALL INNER BEARING AND OIL SEAL

- (a) Place inner bearing into the hub.
- (b) Using SST, install a new oil seal into the hub.
SST 09223-15020, 09950-70010 (09951-07150)
- (c) Apply MP grease to the oil seal lip.