

REMOVAL

REMOVE STABILIZER BAR

- (a) Loosen the 2 bolts and nuts.

Torque: 25 N·m (260 kgf·cm, 19 ft·lbf)

HINT:

At the time of installation, after stabilizing the suspension, torque the nut.


- (b) Remove the nuts and disconnect the stabilizer bar with the links from the bracket.

Torque: 15 N·m (153 kgf·cm, 11 ft·lbf)

HINT:

At the time of installation, after stabilizing the suspension, torque the nut.

- (c) Remove the 2 bolts, nuts and links from the stabilizer bar.

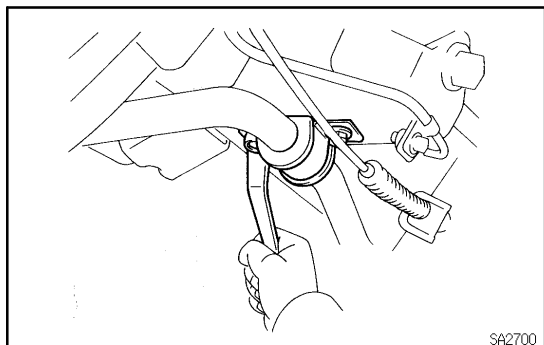


- (d) Remove the 4 bolts and stabilizer bar from the axle housing with the covers.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

HINT:

At the time of installation, after stabilizing the suspension, torque the bolt.

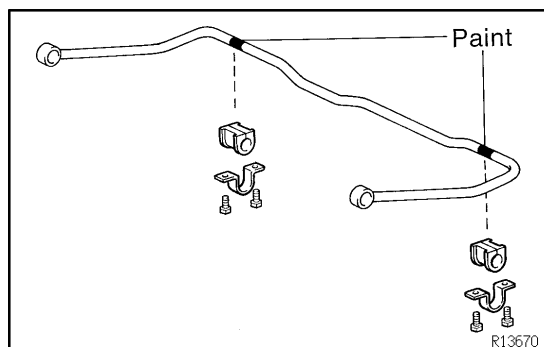

- (e) Remove the 2 covers and cushions from the stabilizer bar.

HINT:

At the time of installation, install the cushions and brackets touching the line painted on the stabilizer bar.