


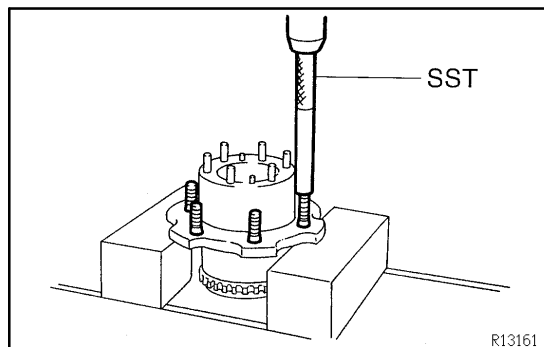

## REAR WHEEL HUB BOLT REPLACEMENT

SA1VC-01

1. REMOVE REAR AXLE HUB (See page [SA-68](#))
2. REMOVE HUB BOLT

Using SST and a press, remove hub bolt from the axle hub.

SST 09950-70010 (09951-07150)

### NOTICE:

**Be careful not to damage the ABS speed sensor rotor.**

3. INSTALL HUB BOLT

Using SST and a press, install the hub bolt.

SST 09950-70010 (09951-07150)

4. INSTALL REAR AXLE HUB (See page [SA-70](#))

