



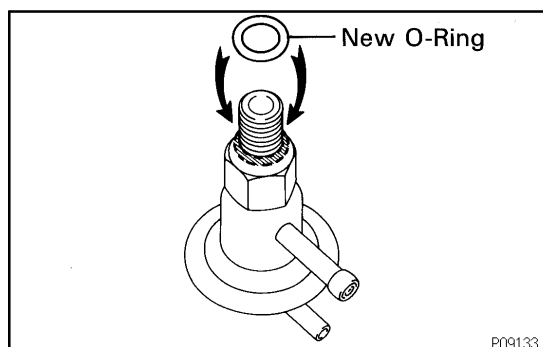

INSTALLATION

1. INSTALL FUEL PRESSURE REGULATOR

- (a) Fully loosen the lock nut on the pressure regulator.
- (b) Apply a light coat of gasoline to a new O-ring, and install it to the pressure regulator.
- (c) Insert the pressure regulator into the delivery pipe by hand completely.

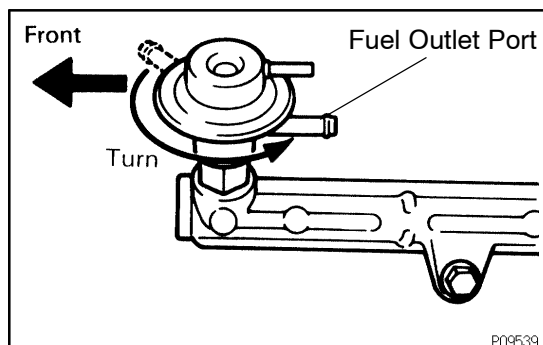

- (d) Turn the pressure regulator counterclockwise until the fuel outlet port faces in the direction indicated in the illustration.
- (e) Tighten the lock nut.

Torque: 25 N·m (250 kgf·cm, 18 ft·lbf)

2. **CONNECT FUEL RETURN HOSE TO FUEL PRESSURE REGULATOR**
3. **CONNECT VACUUM SENSING HOSE TO FUEL PRESSURE REGULATOR**
4. **CHECK FOR FUEL LEAKS (See page [SF-1](#))**