


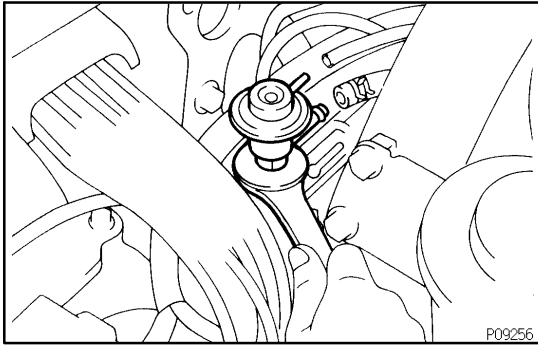

REMOVAL

1. **DISCONNECT VACUUM SENSING HOSE FROM FUEL PRESSURE REGULATOR**
2. **DISCONNECT FUEL RETURN HOSE FROM FUEL PRESSURE REGULATOR**

CAUTION:

Put a shop towel under the pressure regulator.

3. **REMOVE FUEL PRESSURE REGULATOR**

- (a) Loosen the lock nut, and remove the pressure regulator.
- (b) Remove the O-ring from the pressure regulator.