


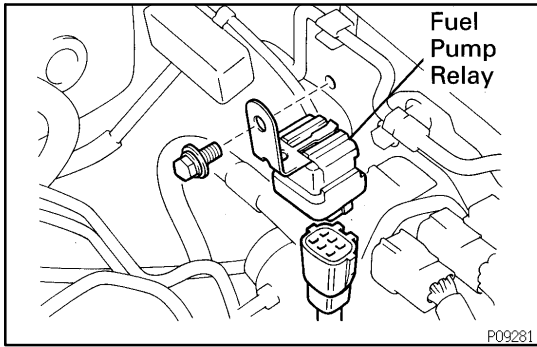


FUEL PUMP RELAY INSPECTION

SF1F7-03

1. REMOVE FUEL PUMP RELAY

- Disconnect the fuel pump relay connector.
- Remove the bolt and fuel pump relay.

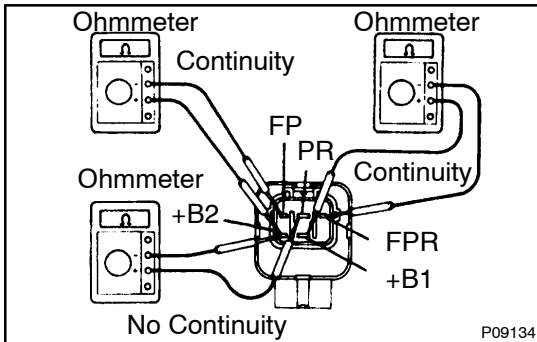

2. INSPECT FUEL PUMP RELAY CONTINUITY

- Using an ohmmeter, check that there is continuity between terminals +B1 and FPR.

If continuity is not as specified, replace the relay.

- Check that there is continuity between terminals +B2 and FP.

If continuity is not as specified, replace the relay.

- Check that there is no continuity between terminals +B2 and PR.

If continuity is not as specified, replace the relay.

3. INSPECT FUEL PUMP RELAY OPERATION

- Apply battery voltage across terminals +B1 and FPR.
- Using an ohmmeter, check that there is no continuity between the +B2 and FP.

If operation is not as specified, replace the relay.

- Check that there is continuity between terminals +B2 and PR.

If operation is not as specified, replace the relay.

4. REINSTALL FUEL PUMP RELAY

