


INSPECTION

1. REMOVE SECOND SEATS
2. REMOVE SCUFF PLATE
3. REMOVE SIDE GARNISH
4. REMOVE STEP PLATE
5. DISCONNECT FLOOR MATS
6. REMOVE FLOOR SERVICE HOLE COVER
Remove the 3 screws and service hole cover.
7. DISCONNECT FUEL PUMP AND SENDER GAUGE CONNECTOR

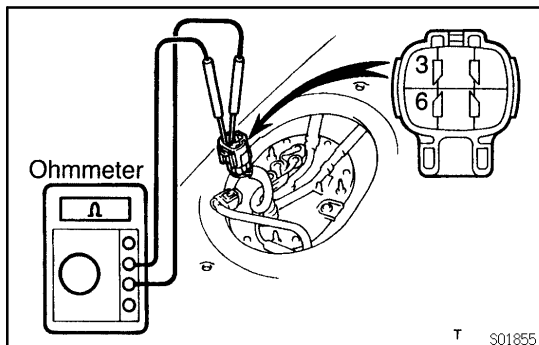


8. INSPECT FUEL PUMP RESISTANCE

Using an ohmmeter, measure the resistance between the terminals 3 and 6.

Resistance: 0.2 – 3.0 Ω at 20°C (68°F)

If the resistance is not as specified, replace the fuel pump.

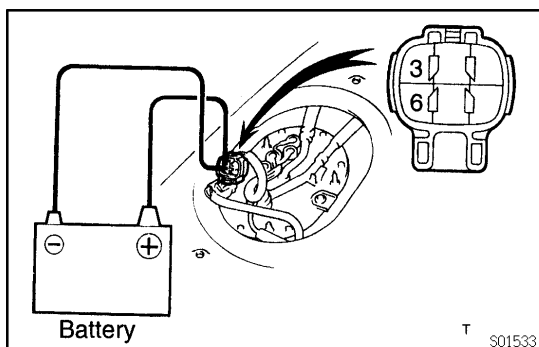

9. INSPECT FUEL PUMP OPERATION

Connect the positive (+) lead from the battery to terminal 3 of the connector, and the negative (-) lead to terminal 6. Check that the fuel pump operates.

NOTICE:

- These tests must be performed quickly (within 10 seconds) to prevent the coil from burning out.
- Keep the fuel pump as far away from the battery as possible.
- Always perform switching at the battery side.

If operation is not as specified, replace the fuel pump.

10. RECONNECT FUEL PUMP AND SENDER GAUGE CONNECTOR
11. REINSTALL FLOOR SERVICE HOLE COVER
Install the service hole cover with the 3 screws.
12. REINSTALL FLOOR MATS
13. REINSTALL STEP PLATE
14. REINSTALL SIDE GARNISH

15. REINSTALL SCUFF PLATE
16. REINSTALL SECOND SEATS