


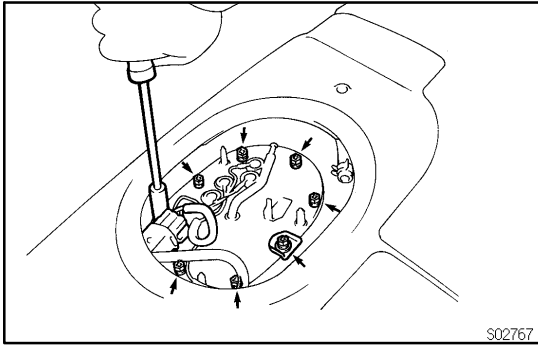


INSTALLATION

1. INSTALL FUEL PUMP AND SENDER GAUGE ASSEMBLY TO FUEL TANK

- Install a new gasket to the pump bracket.
- Insert the fuel pump and sender gauge assembly into the fuel tank.
- Connect the fuel pump and fuel sender gauge connector.
- Install the fuel pump bracket with the 8 bolts.

Torque: 3.9 N·m (40 kgf·cm, 35 in·lbf)

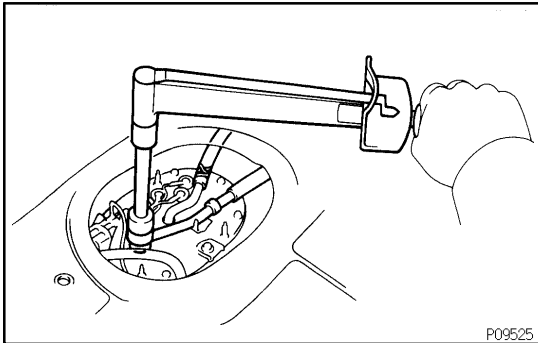

2. CONNECT FUEL PIPE AND HOSE TO FUEL PUMP BRACKET

- Connect the return hose to the pump bracket.
- Connect the outlet pipe to the pump bracket with 2 new gaskets and the union bolt.

Torque: 29 N·m (300 kgf·cm, 22 ft·lbf)

3. CHECK FOR FUEL LEAKS (See page [SF-1](#))

4. INSTALL FLOOR SERVICE HOLE COVER

Install the service hole cover with the 3 screws.

5. INSTALL FLOOR MATS

6. INSTALL STEP PLATE

7. INSTALL SIDE GARNISH

8. INSTALL SCUFF PLATE

9. INSTALL SECOND SEATS

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)