

REMOVAL

CAUTION:

Do not smoke or work near an open flame when working on the fuel pump.

1. REMOVE SECOND SEATS
2. REMOVE SCUFF PLATE
3. REMOVE SIDE GARNISH
4. REMOVE STEP PLATE
5. DISCONNECT FLOOR MATS
6. REMOVE FLOOR SERVICE HOLE COVER


Remove the 3 screws and service hole cover.

7. DISCONNECT FUEL PIPE AND HOSE FROM FUEL PUMP BRACKET


CAUTION:

Remove the fuel filter cap to prevent the fuel from flowing out.

- (a) Disconnect the fuel pump and sender gauge connector.

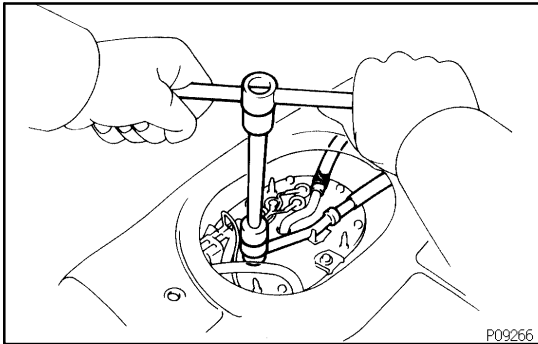

- (b) Remove the union bolt and gaskets, and disconnect the outlet pipe from the pump bracket.
- (c) Disconnect the return hose from the pump bracket.

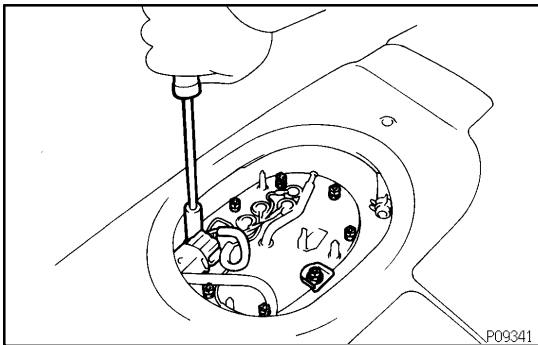

8. REMOVE FUEL PUMP AND SENDER GAUGE ASSEMBLY FROM FUEL TANK

- (a) Remove the 8 bolts.
- (b) Pull out the pump and sender gauge assembly.

NOTICE:

- Do not damage the fuel pump filter.
 - Be careful that the arm of the sender gauge should not bent.
- (c) Remove the gasket from the pump bracket.