
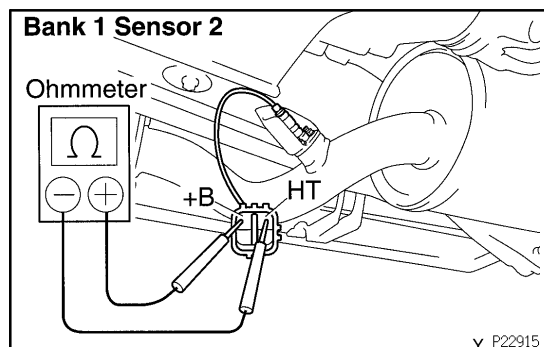


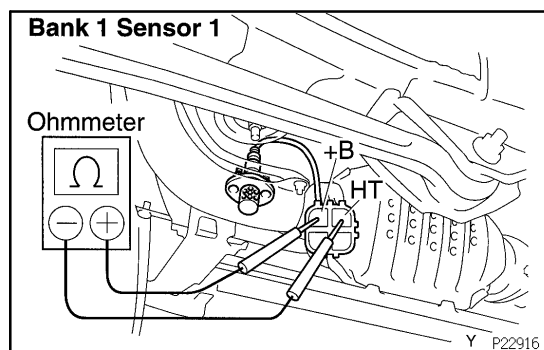

INSPECTION

1. INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSORS (BANK 1, SENSOR 1, 2)

- Disconnect the sensor connector.
- Using an ohmmeter, measure the resistance between terminals +B and HT.

Resistance: 11 – 16 Ω at 20°C (68°F)

If resistance is not as specified, replace the heated oxygen sensor.

- Reconnect the heated oxygen sensor connector.

2. INSPECT OPERATION HEATED OXYGEN SENSORS (BANK 1, SENSOR 1, 2) (See page [DI-40](#))