



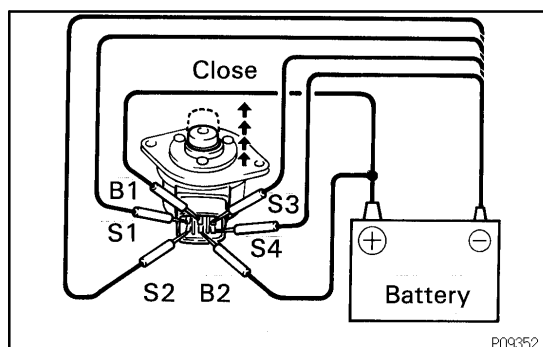

## INSPECTION

### INSPECT IDLE AIR CONTROL VALVE OPERATION

- (a) Apply battery voltage to terminal B1 and B2, and while repeatedly grounding S1-S2-S3-S4-S1 in sequence, check that the valve moves toward the closed position.

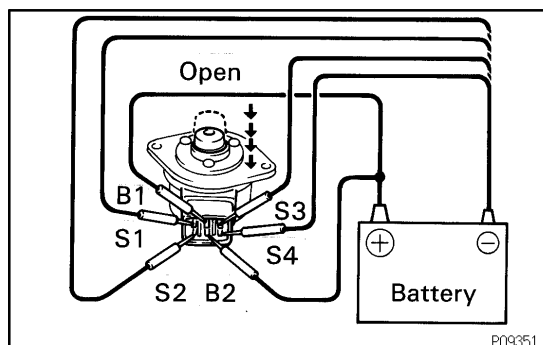

- (b) Apply battery voltage to terminal B1 and B2, and while repeatedly grounding S4-S3-S2-S1-S4 in sequence, check that the valve moves toward the open position. If operation is not as specified, replace the IAC valve.