


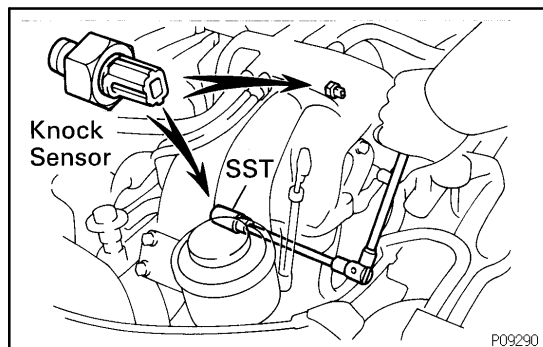


KNOCK SENSOR INSPECTION

SF11P-01

1. REMOVE KNOCK SENSOR 1, 2

- (a) Disconnect the knock sensor connector.
- (b) Using SST, remove the knock sensor.

SST 09816-30010

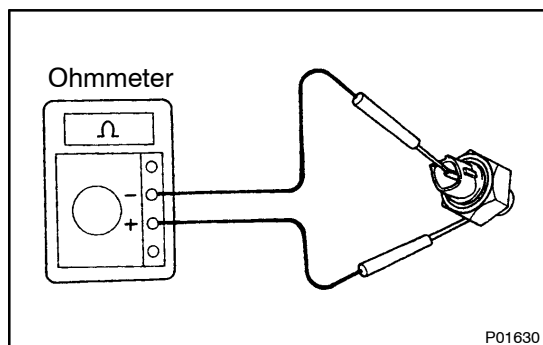

2. INSPECT KNOCK SENSOR 1, 2

Using an ohmmeter, check that there is no continuity between the terminal and body.

If there is continuity, replace the sensor.

3. REINSTALL KNOCK SENSOR 1,2

- (a) Using SST, install the knock sensor.

SST 09816-30010

Torque: 44 N·m (450 kgf·cm, 33 ft·lbf)

- (b) Connect the knock sensor connector.