


REMOVAL


1. DRAIN ENGINE COOLANT
2. DISCONNECT NO. 2 PCV HOSE FROM THROTTLE BODY
3. DISCONNECT AIR CLEANER HOSE
4. DISCONNECT CRUISE CONTROL CABLE
5. DISCONNECT ACCELERATOR CABLE
6. DISCONNECT THROTTLE CABLE
7. DISCONNECT THROTTLE POSITION SENSOR CONNECTOR
8. DISCONNECT IAC VALVE CONNECTOR

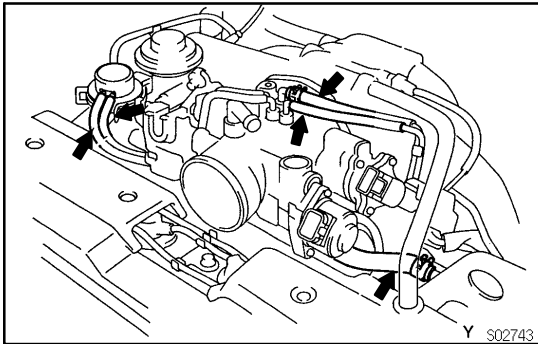


9. REMOVE THROTTLE BODY

(a) Disconnect these hoses:

- EVAP hose
- 3 vacuum hoses
- No. 2 water bypass hose

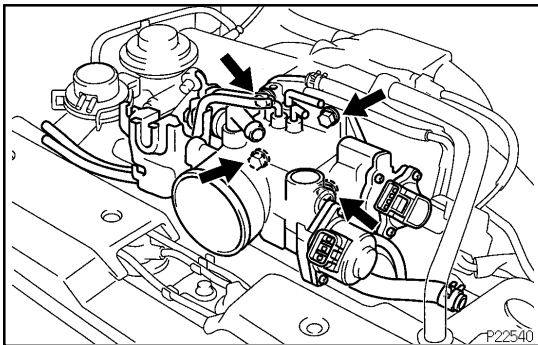

- (b) Remove the 4 bolts, and disconnect the throttle body from the air intake chamber.
- (c) Remove the throttle body gasket.

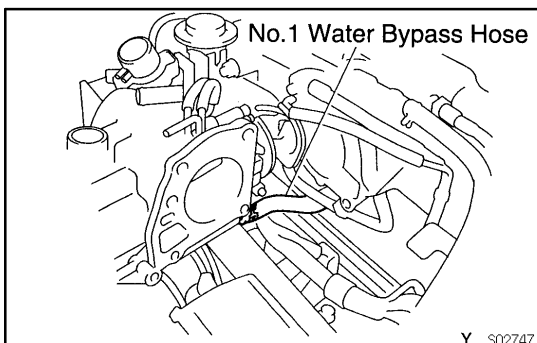

- (d) Disconnect the No. 1 water bypass hose from the throttle body, and remove the throttle body.
- (e) Disconnect the No. 2 water bypass hose from the throttle body.