


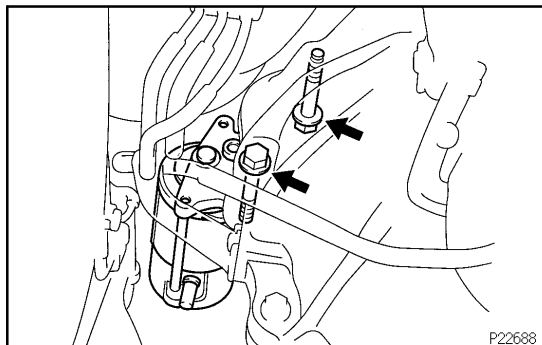

INSTALLATION

1. INSTALL STARTER

- (a) Install the starter with the 2 bolts.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

- (b) Connect the starter wire with the nut.

Torque: 8.8 N·m (90 kgf·cm, 78 in·lbf)

- (c) Connect the starter connector.

2. CHECK THAT ENGINE STARTS