


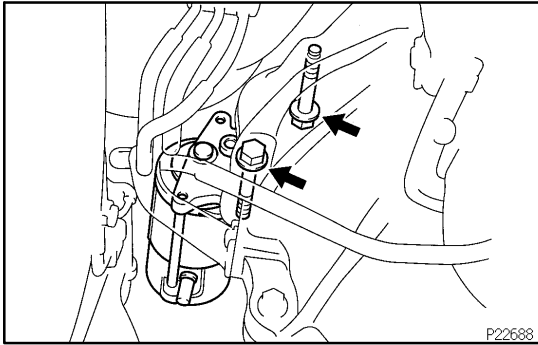

REMOVAL

REMOVE STARTER

- (a) Disconnect the starter connector.
- (b) Remove the nut, and disconnect the starter wire.
- (c) Remove the 2 bolts and starter.