


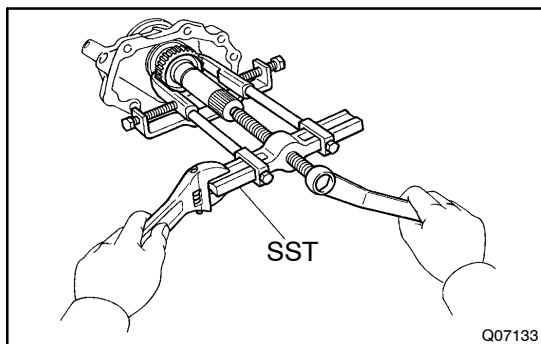


## DISASSEMBLY

### 1. REMOVE DRIVE CLUTCH HUB

- (a) Using a snap ring expander, remove the snap ring.
- (b) Using SST, remove the drive clutch hub.

SST 09950-40010

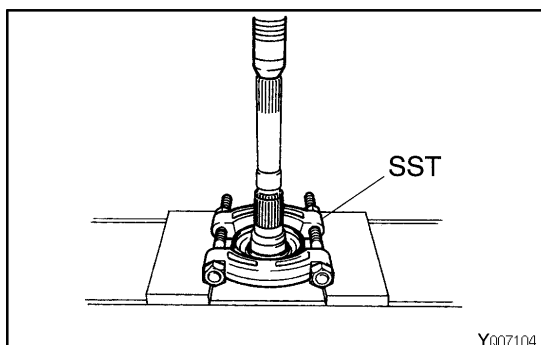


### 2. REMOVE FRONT OUTPUT SHAFT

Using a plastic hammer, drive out the front output shaft.


### 3. REMOVE DUST DEFLECTOR

- (a) Using SST and a press, remove the dust deflector.  
SST 09950-00020
- (b) Using a screwdriver and hammer, tap the dust deflector and remove it from the extension housing.

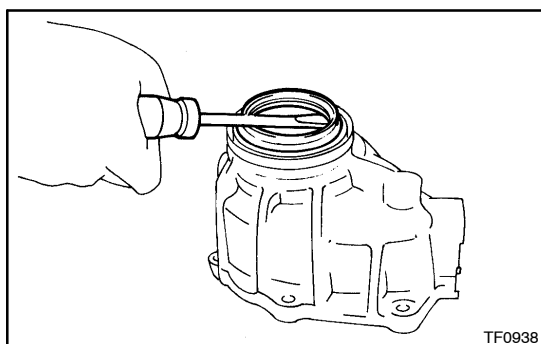

### 4. REMOVE OIL SEAL

Using a screwdriver, pry out the oil seal from the front extension housing.

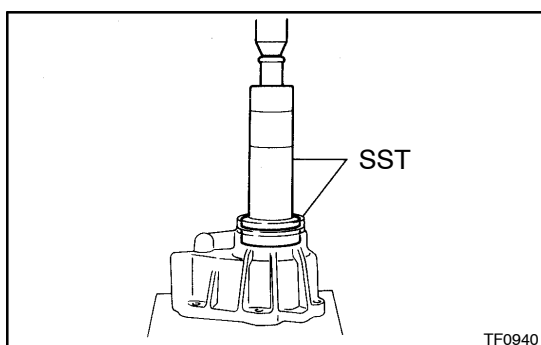

### 5. REMOVE BALL BEARING

- (a) Using a screwdriver, remove the snap ring.
- (b) Using SST and a press, remove the ball bearing.  
SST 09316-60011 (09316-00011, 09316-00071)