


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

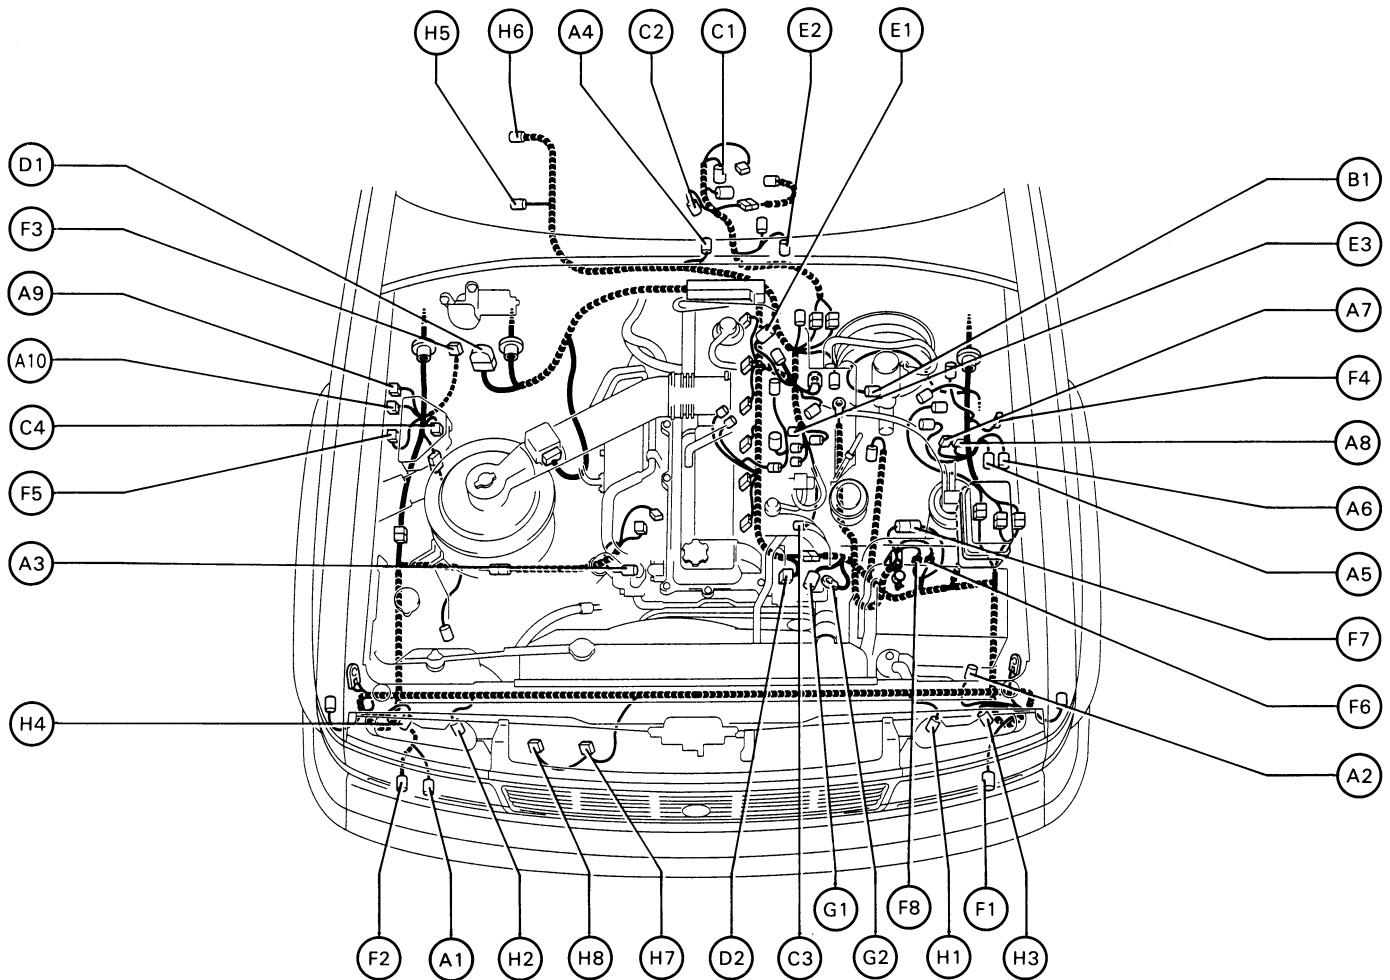

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Dual Pressure SW
- A 3 A/C Magnetic Clutch
- A 4 A/T Fluid Temp. Sensor
- A 5 ABS Actuator
- A 6 ABS Actuator
- A 7 ABS Relay
- A 8 ABS Relay
- A 9 Auto Antenna Relay
- A 10 Auto Antenna Motor

- B 1 Brake Fluid Level Warning SW

- C 1 Center Diff. Lock Control Motor
- C 2 Center Diff. Lock Indicator SW
- C 3 Crankshaft Position Sensor
- C 4 Cruise Control Actuator

- D 1 Data Link Connector 1
- D 2 Distributor


- E 1 EGR Gas Temp. Sensor
- E 2 Electronically Controlled Transmission Solenoid
- E 3 Engine Coolant Temp. Sensor

- F 1 Front Turn Signal Light LH
- F 2 Front Turn Signal Light RH
- F 3 Front Wiper Motor
- F 4 Fuel Pump Relay
- F 5 Fuel Pump Resistor
- F 6 Fusible Link (AM1)
- F 7 Fusible Link (AM2)
- F 8 Fusible Link (Main)

- G 1 Generator
- G 2 Generator

- H 1 Headlight Hi LH
- H 2 Headlight Hi RH
- H 3 Headlight Lo LH
- H 4 Headlight Lo RH
- H 5 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H 6 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 7 Horn LH
- H 8 Horn RH

Position of Parts in Engine Compartment

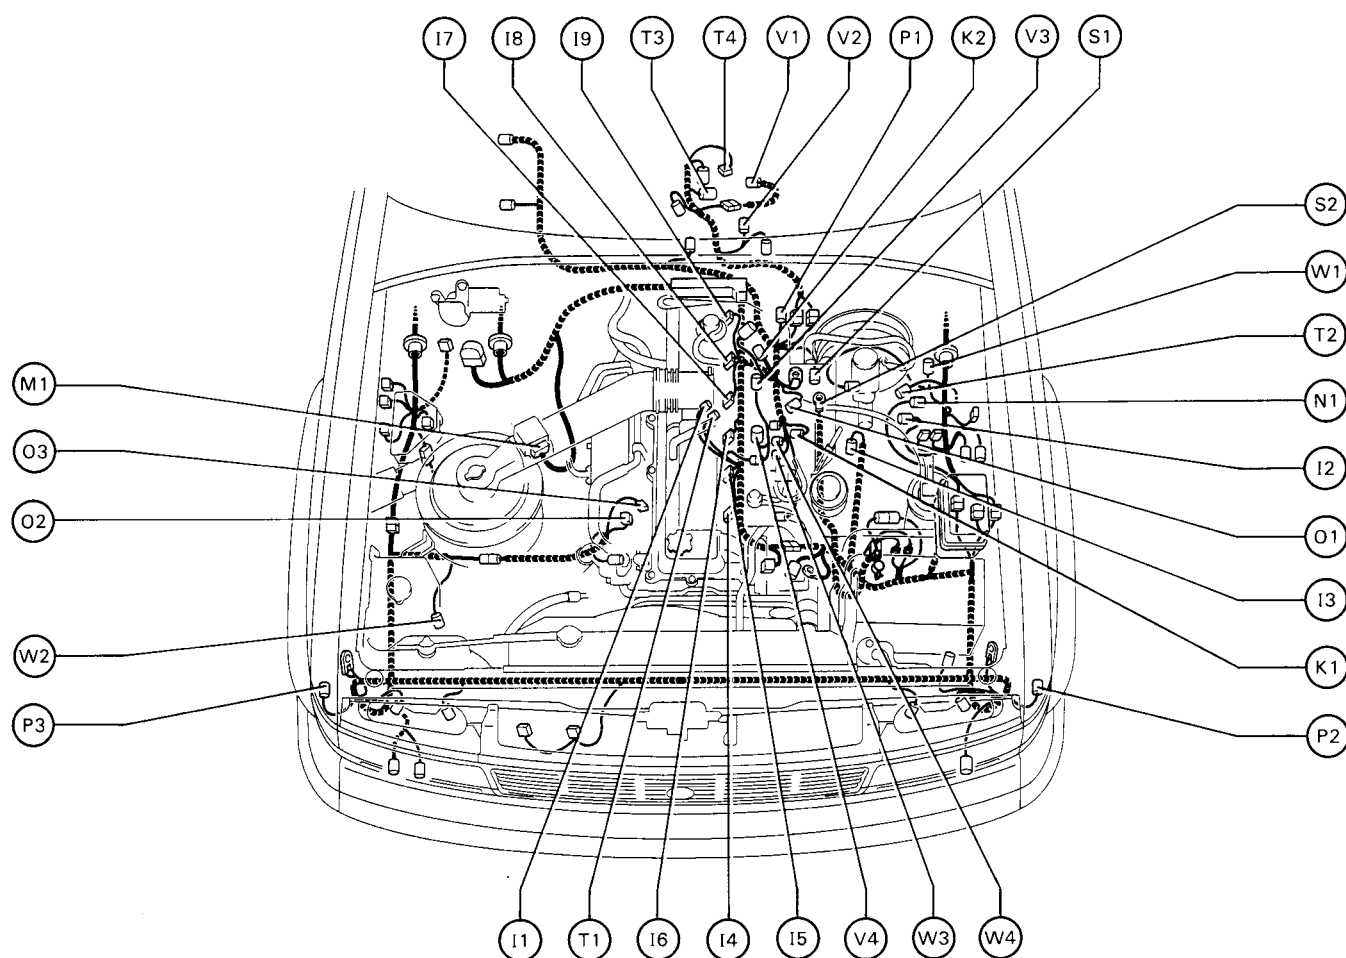

- I 1 Idle Air Control Valve
- I 2 Igniter
- I 3 Ignition Coil
- I 4 Injector No. 1
- I 5 Injector No. 2
- I 6 Injector No. 3
- I 7 Injector No. 4
- I 8 Injector No. 5
- I 9 Injector No. 6

- K 1 Knock Sensor 1
- K 2 Knock Sensor 2

- M 1 Mass Air Flow Meter

- N 1 Noise Filter (Ignition System)

- O 1 Oil Level Warning SW
- O 2 Oil Pressure Sender
- O 3 Oil Pressure Sender

- P 1 Park/Neutral Position SW, Back-Up Light SW and A/T Indicator SW

- P 2 Parking Light LH
- P 3 Parking Light RH

- S 1 Starter
- S 2 Starter


- T 1 Throttle Position Sensor
- T 2 Theft Deterrent Buzzer (Piezo Buzzer)
- T 3 Transfer L4 Position SW
- T 4 Transfer Neutral Position SW

- V 1 Vehicle Speed Sensor (Combination Meter)
- V 2 Vehicle Speed Sensor (Electronically Controlled Transmission)
- V 3 VSV (EGR)
- V 4 VSV (Fuel Pressure Control)

- W 1 Washer Change Valve
- W 2 Washer Motor
- W 3 Water Temp. Sender
- W 4 Water Temp. SW

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

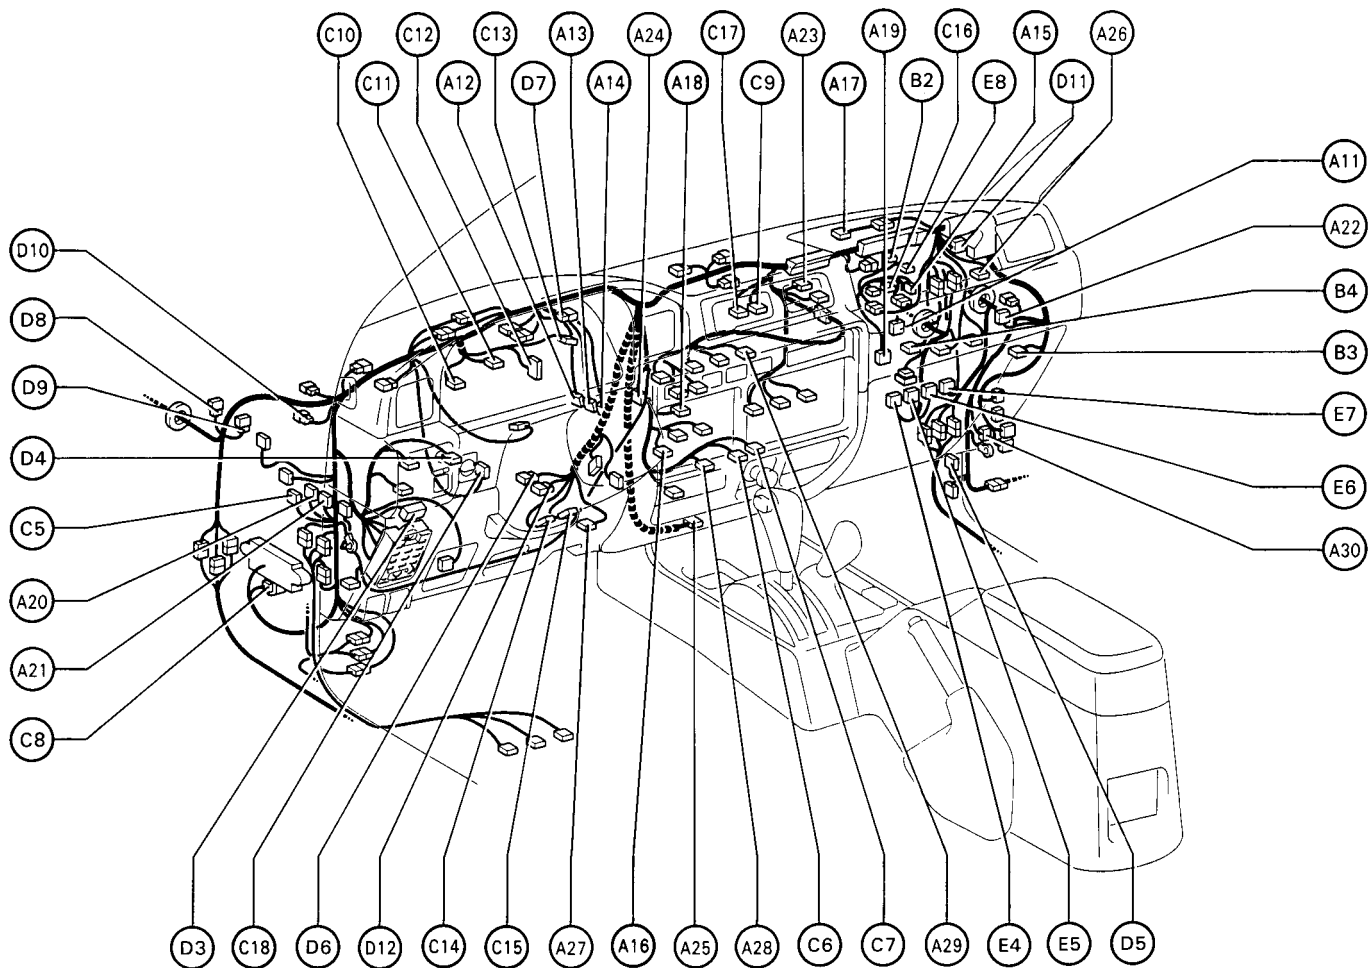

- A 11 A/C Amplifier
- A 12 A/C Automatic Amplifier
- A 13 A/C Automatic Amplifier
- A 14 A/C Automatic Amplifier
- A 15 A/C Power Transistor (Blower Control)
- A 16 A/C Room Temp. Sensor
- A 17 A/C Solar Sensor
- A 18 A/C System Amplifier
- A 19 A/C Thermistor
- A 20 ABS ECU
- A 21 ABS ECU
- A 22 Air Inlet Control Servo Motor
- A 23 Air Mix Control Servo Motor
- A 24 Air Vent Mode Control Servo Motor
- A 25 Airbag Sensor Assembly
- A 26 Airbag Squib (Front Passenger Airbag Assembly)
- A 27 Airbag Squib (Steering Wheel Pad)
- A 28 Ashtray Illumination
- A 29 Auto Antenna Control SW
- A 30 Auto Antenna ECU

- B 2 Blower Hi Relay
- B 3 Blower Motor (A/C)
- B 4 Blower Resistor


- C 5 Center Diff. Lock Control Relay
- C 6 Cigarette Lighter
- C 7 Cigarette Lighter Illumination

- C 8 Circuit Opening Relay
- C 9 Clock
- C 10 Combination Meter
- C 11 Combination Meter
- C 12 Combination Meter
- C 13 Combination Meter
- C 14 Combination SW
- C 15 Combination SW
- C 16 Compressor Relay
- C 17 Cooling Fan (Radio and Player)
- C 18 Cruise Control ECU

- D 3 Data Link Connector 3
- D 4 Diff. Lock Control SW
- D 5 Diff. Lock ECU
- D 6 Diode (Front Washer)
- D 7 Diode (Headlight)
- D 8 Diode (Interior Light)
- D 9 Diode (Interior Light)
- D 10 Diode (Interior Light)
- D 11 Diode (Neutral Detection)
- D 12 Diode (Rear Washer)

- E 4 Engine Control Module
- E 5 Engine Control Module
- E 6 Engine Control Module
- E 7 Engine Control Module
- E 8 Engine Coolant Temp. Cut Relay

Position of Parts in Instrument Panel

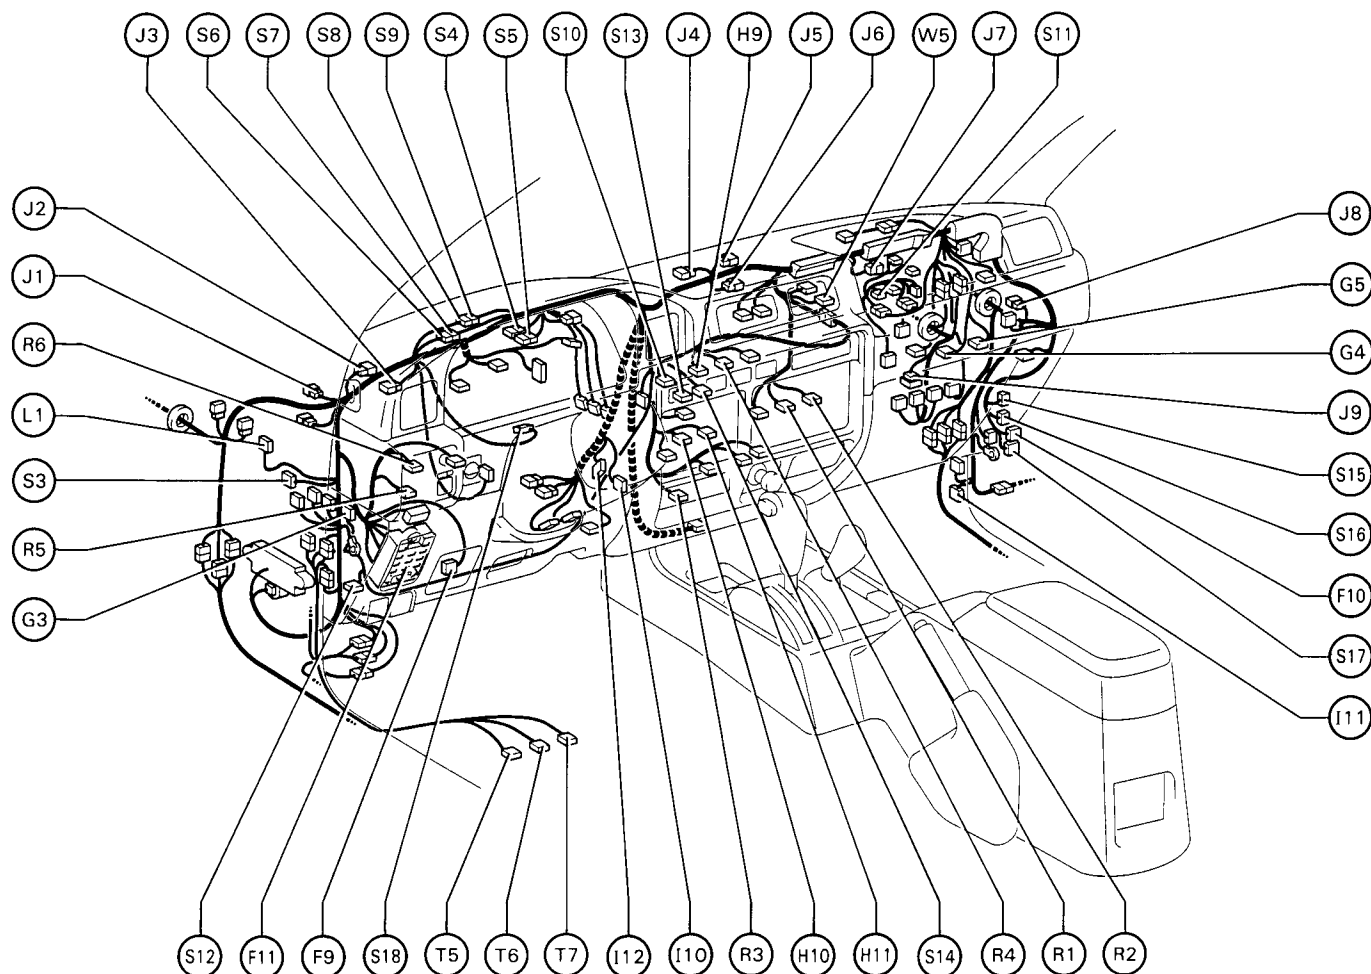


- | | |
|------|---|
| F 9 | Front Speaker LH |
| F 10 | Front Speaker RH |
| F 11 | Fuse Block |
| | |
| G 3 | Glass Breakage ECU |
| G 4 | Glove Box Light |
| G 5 | Glove Box Light SW |
| | |
| H 9 | Hazard SW |
| H 10 | Heater Control SW and A/C SW |
| H 11 | Heater Control SW and A/C SW |
| | |
| I 10 | Ignition Key Cylinder Light |
| I 11 | Ignition Key Cylinder Light Relay |
| I 12 | Ignition SW, Unlock Warning SW and Key Interlock Solenoid |
| | |
| J 1 | Junction Connector |
| J 2 | Junction Connector |
| J 3 | Junction Connector |
| J 4 | Junction Connector |
| J 5 | Junction Connector |
| J 6 | Junction Connector |
| J 7 | Junction Connector |
| J 8 | Junction Connector |
| J 9 | Junction Connector |
| | |
| L 1 | Light Retainer Relay |

- | | |
|------|-------------------------------------|
| R 1 | Radio and Player |
| R 2 | Radio and Player |
| R 3 | Rear Heater SW |
| R 4 | Rear Window Defogger SW |
| R 5 | Remote Control Mirror SW |
| R 6 | Rheostat |
| | |
| S 3 | Seat Belt Warning Relay |
| S 4 | Short Connector (A/C) |
| S 5 | Short Connector (A/C) |
| S 6 | Short Connector (SRS) |
| S 7 | Short Connector (SRS) |
| S 8 | Short Connector (SRS) |
| S 9 | Short Connector (SRS) |
| S 10 | Short Pin (Center Diff. Lock) |
| S 11 | Starter Cut Relay (A/C) |
| S 12 | Starter Cut Relay (Theft Deterrent) |
| S 13 | Status Monitor |
| S 14 | Status Monitor |
| S 15 | Stereo Component Amplifier |
| S 16 | Stereo Component Amplifier |
| S 17 | Stereo Component Amplifier |
| S 18 | Stop Light SW |
| | |
| T 5 | Theft Deterrent ECU |
| T 6 | Theft Deterrent ECU |
| T 7 | Theft Deterrent ECU |
| | |
| W 5 | Water Temp. Sensor |


G ELECTRICAL WIRING ROUTING

Position of Parts in Body

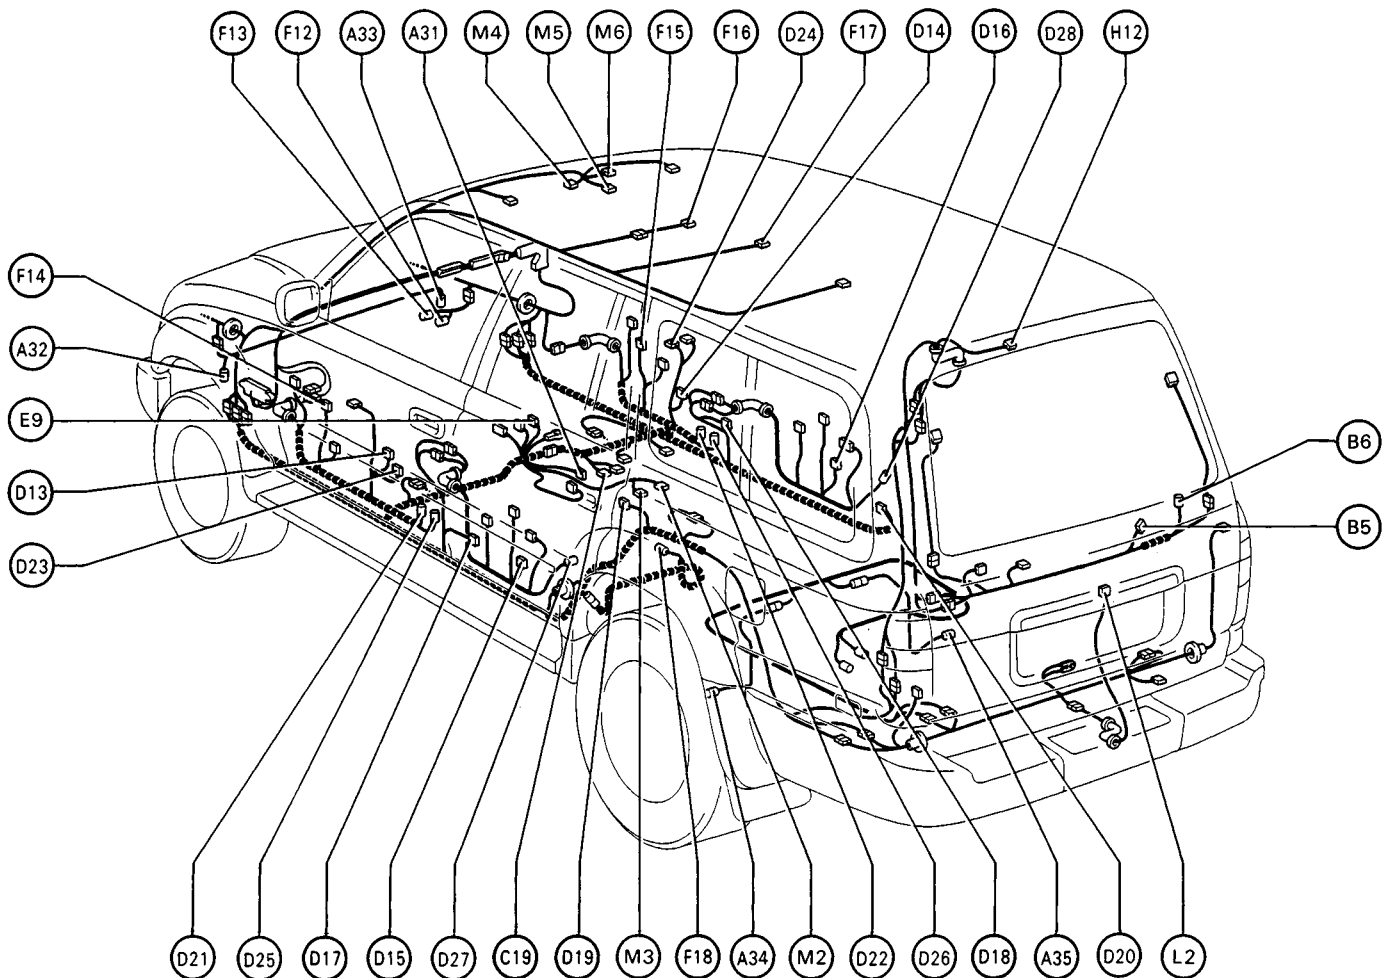

- | | | | |
|------|---|------|--|
| A 31 | ABS Deceleration Sensor | D 26 | Door Lock Motor and Door Unlock Detection SW Front RH |
| A 32 | ABS Speed Sensor Front LH | D 27 | Door Lock Motor Rear LH |
| A 33 | ABS Speed Sensor Front RH | D 28 | Door Lock Motor Rear RH |
| A 34 | ABS Speed Sensor Rear LH | E 9 | Electronically Controlled Transmission Pattern Select SW |
| A 35 | ABS Speed Sensor Rear RH | F 12 | Front Diff. Lock Control Motor |
| B 5 | Back Door Courtesy SW | F 13 | Front Diff. Lock Position SW |
| B 6 | Back Door Lock Motor | F 14 | Front Door Speaker LH |
| C 19 | CD Automatic Changer | F 15 | Front Door Speaker RH |
| D 13 | Door Courtesy Light Front LH | F 16 | Front Interior Light (w/ Moon Roof) |
| D 14 | Door Courtesy Light Front RH | F 17 | Front Interior Light (w/o Moon Roof) |
| D 15 | Door Courtesy Light Rear LH | F 18 | Fuel Sender and Pump |
| D 16 | Door Courtesy Light Rear RH | H 12 | High Mounted Stop Light |
| D 17 | Door Courtesy SW Front LH | L 2 | License Plate Light |
| D 18 | Door Courtesy SW Front RH | M 2 | Mobilephone |
| D 19 | Door Courtesy SW Rear LH | M 3 | Mobilephone |
| D 20 | Door Courtesy SW Rear RH | M 4 | Moon Roof Control Relay |
| D 21 | Door Key Lock and Unlock SW LH | M 5 | Moon Roof Control SW and Personal Light |
| D 22 | Door Key Lock and Unlock SW RH | M 6 | Moon Roof Limit SW and Motor |
| D 23 | Door Lock Control Relay | | |
| D 24 | Door Lock Control SW RH | | |
| D 25 | Door Lock Motor and Door Unlock Detection SW Front LH | | |

Position of Parts in Body

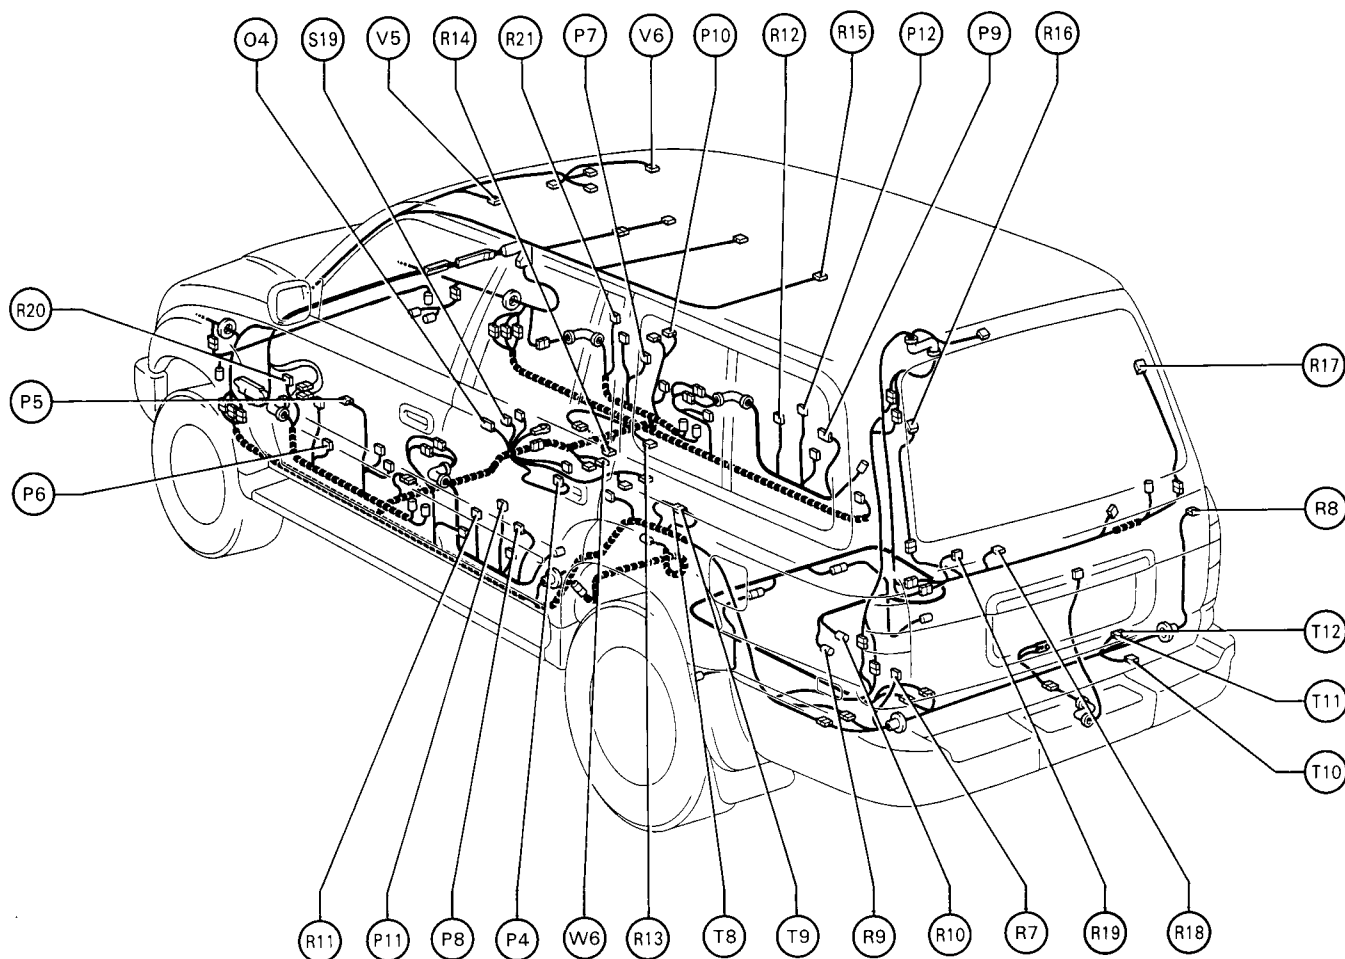

O 4 O/D Main SW

P 4 Parking Brake SW

P 5 Power Window Master SW

P 6 Power Window Motor Front LH

P 7 Power Window Motor Front RH

P 8 Power Window Motor Rear LH

P 9 Power Window Motor Rear RH

P 10 Power Window SW Front RH

P 11 Power Window SW Rear LH

P 12 Power Window SW Rear RH

R 7 Rear Combination Light LH

R 8 Rear Combination Light RH

R 9 Rear Diff. Lock Control Motor

R 10 Rear Diff. Lock Position SW

R 11 Rear Door Speaker LH

R 12 Rear Door Speaker RH

R 13 Rear Heater

R 14 Rear Heater Relay

R 15 Rear Interior Light

R 16 Rear Window Defogger (+)

R 17 Rear Window Defogger (-)

R 18 Rear Wiper Motor

R 19 Rear Wiper Relay

R 20 Remote Control Mirror LH

R 21 Remote Control Mirror RH

S 19 Shift Lock ECU

T 8 Telephone Transceiver and Speaker Relay

T 9 Telephone Transceiver and Speaker Relay

T 10 Trailer Socket (Tail and Stop Light)

T 11 Trailer Socket (Turn Signal Light)

T 12 Trailer Socket (Turn Signal Light)


V 5 Vanity Light LH

V 6 Vanity Light RH

W 6 Woofer Speaker

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

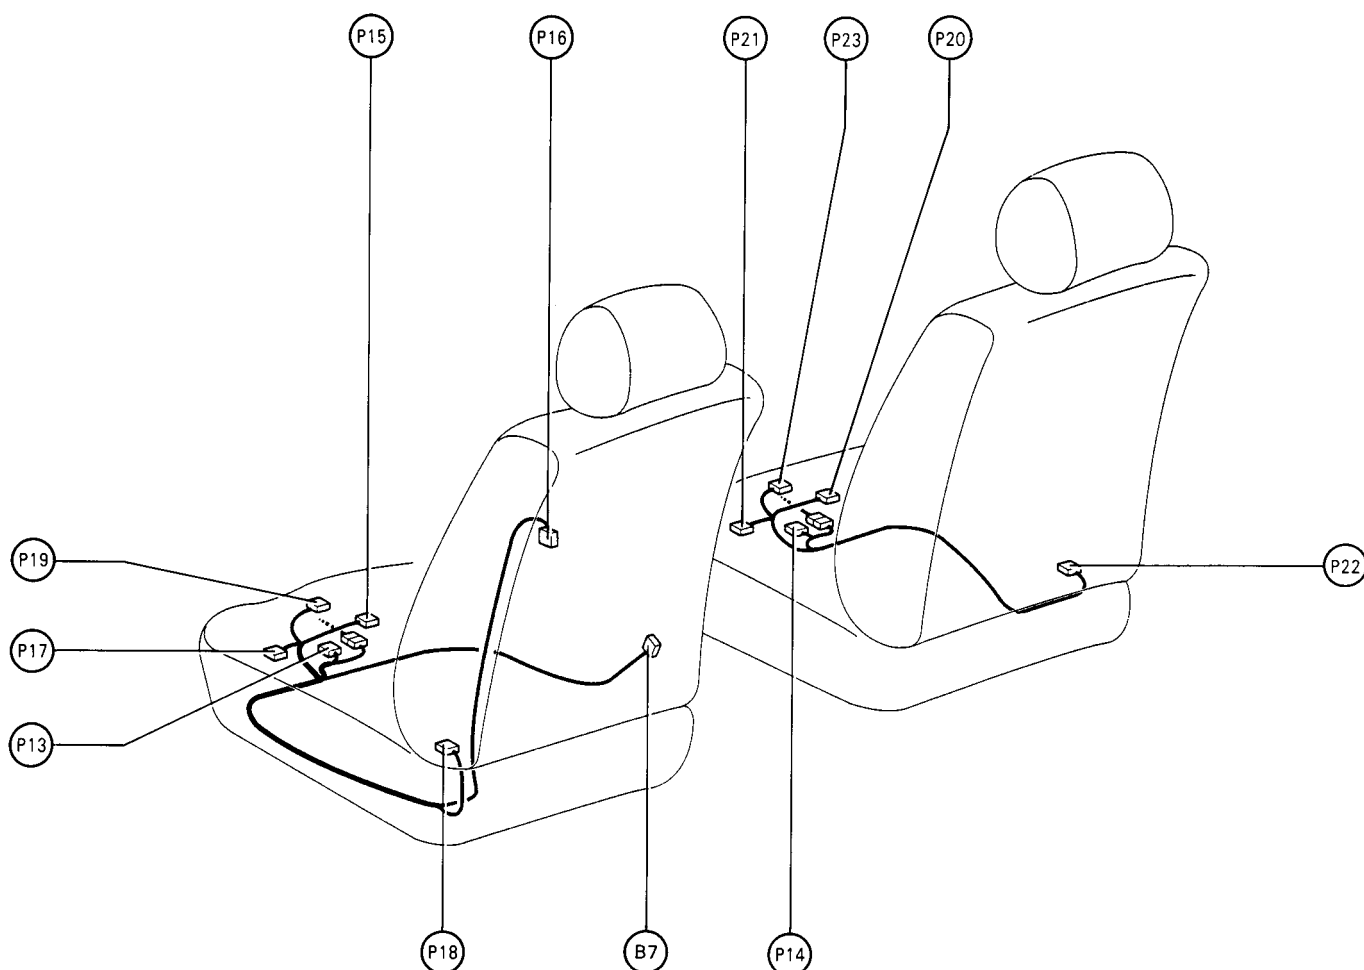

B 7 Buckle SW LH

- P 13 Power Seat Control SW (Driver's Seat)
- P 14 Power Seat Control SW (Front Passenger's Seat)
- P 15 Power Seat Motor (Driver's Seat Front Vertical Control)
- P 16 Power Seat Motor (Driver's Seat Lumbar Support Control)
- P 17 Power Seat Motor (Driver's Seat Rear Vertical Control)
- P 18 Power Seat Motor (Driver's Seat Reclining Control)
- P 19 Power Seat Motor (Driver's Seat Slide Control)
- P 20 Power Seat Motor (Front Passenger's Seat Front Vertical Control)
- P 21 Power Seat Motor (Front Passenger's Seat Rear Vertical Control)
- P 22 Power Seat Motor (Front Passenger's Seat Reclining Control)
- P 23 Power Seat Motor (Front Passenger's Seat Slide Control)

