



G ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

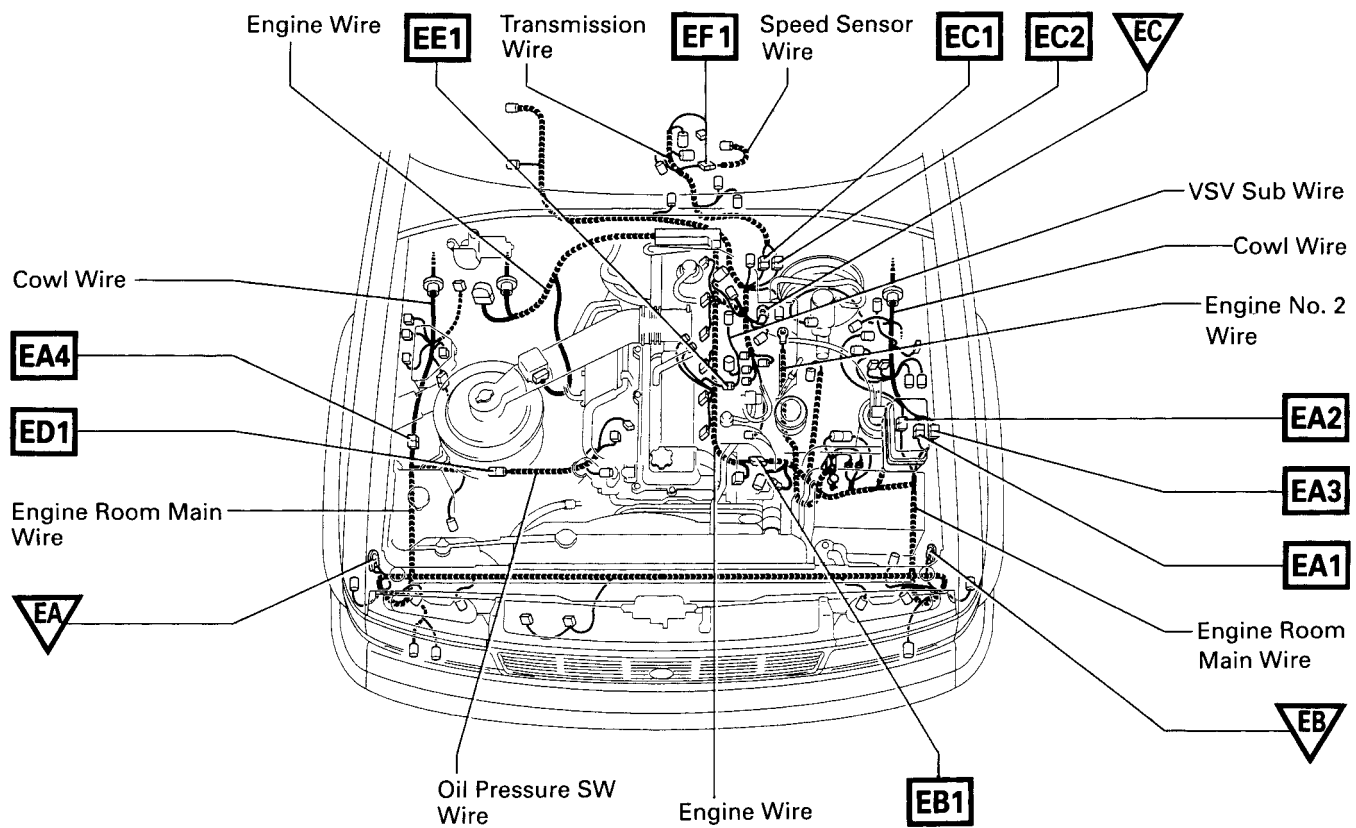

○ : Location of Splice Points

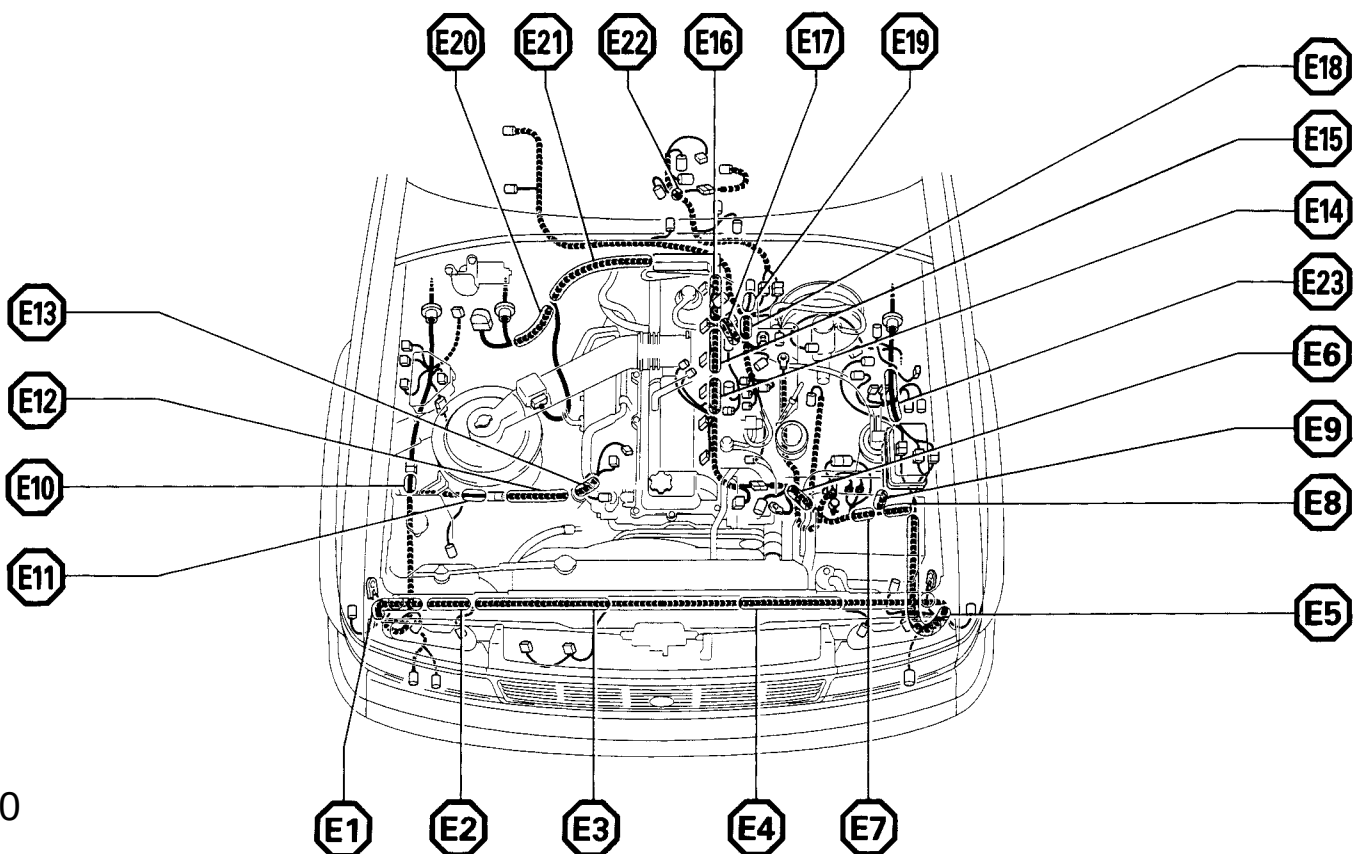


Connector Joining Wire Harness and Wire Harness

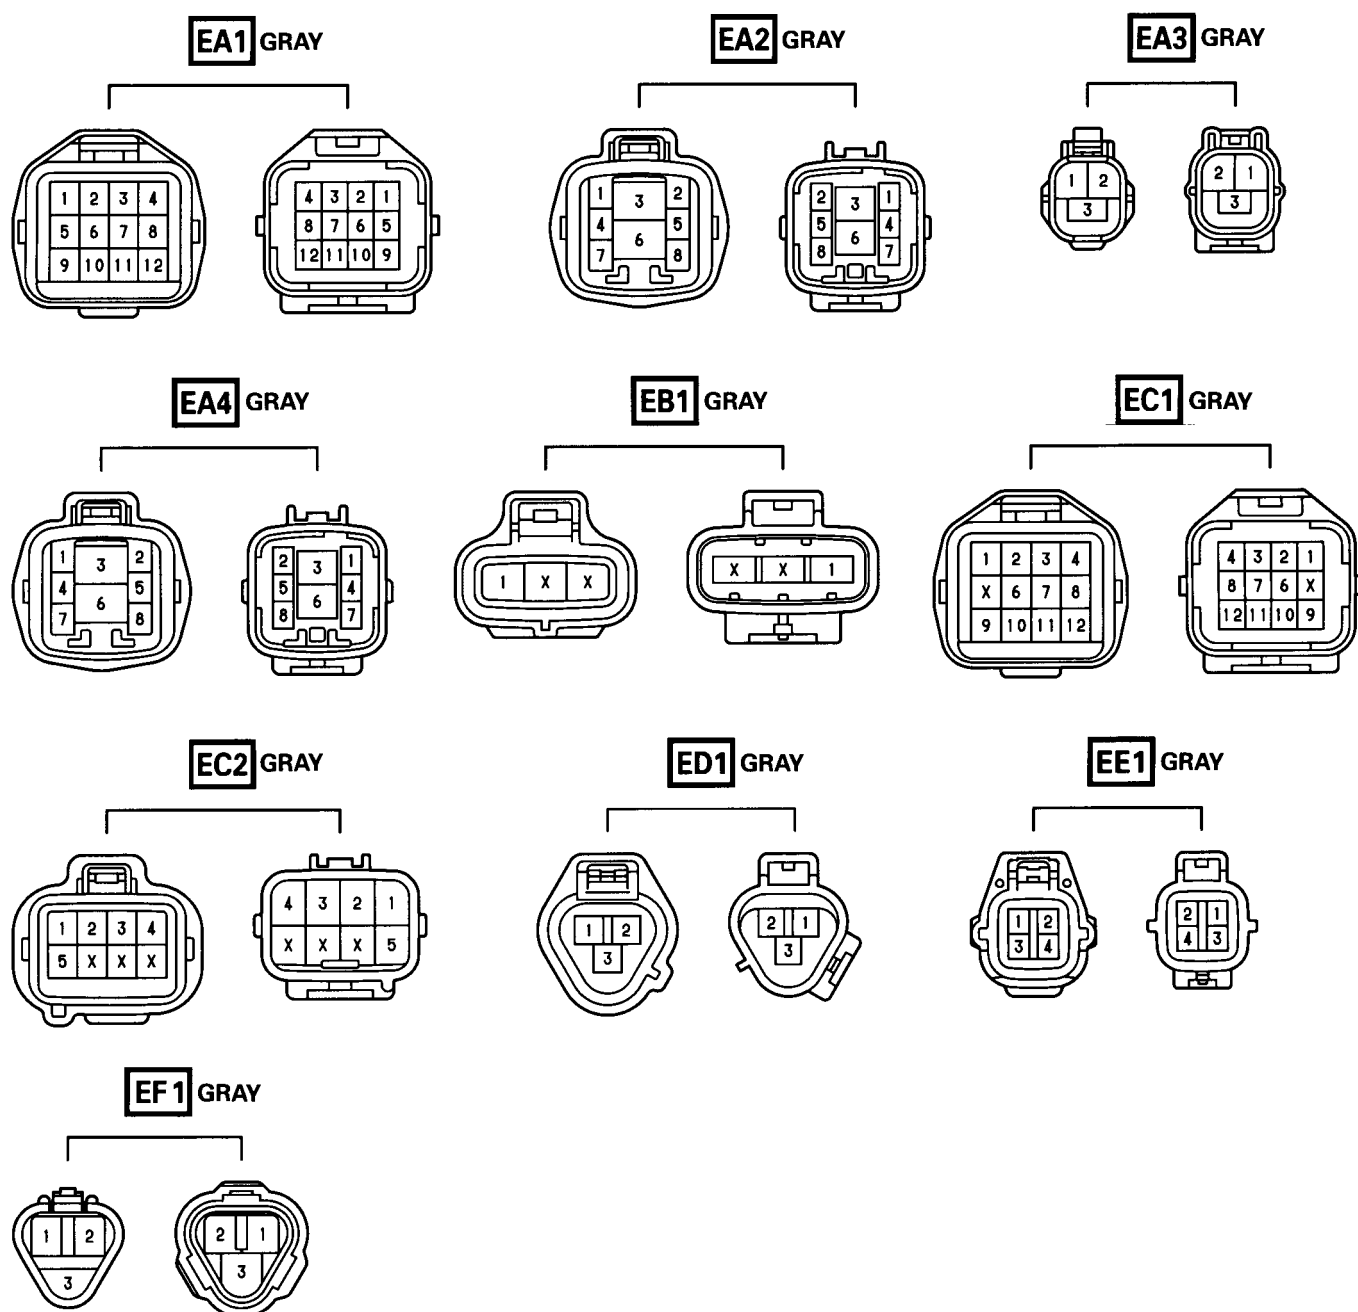


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2	
EA3	
EA4	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
EB1	ENGINE ROOM MAIN WIRE AND ENGINE WIRE (NEAR THE DISTRIBUTOR)
EC1	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
EC2	
ED1	OIL PRESSURE SWITCH WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE AIR CLEANER)
EE1	ENGINE WIRE AND VSV SUB WIRE (NEAR THE THROTTLE POSITION SENSOR)
EF1	TRANSMISSION WIRE AND SPEED SENSOR WIRE (NEAR THE TRANSMISSION)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

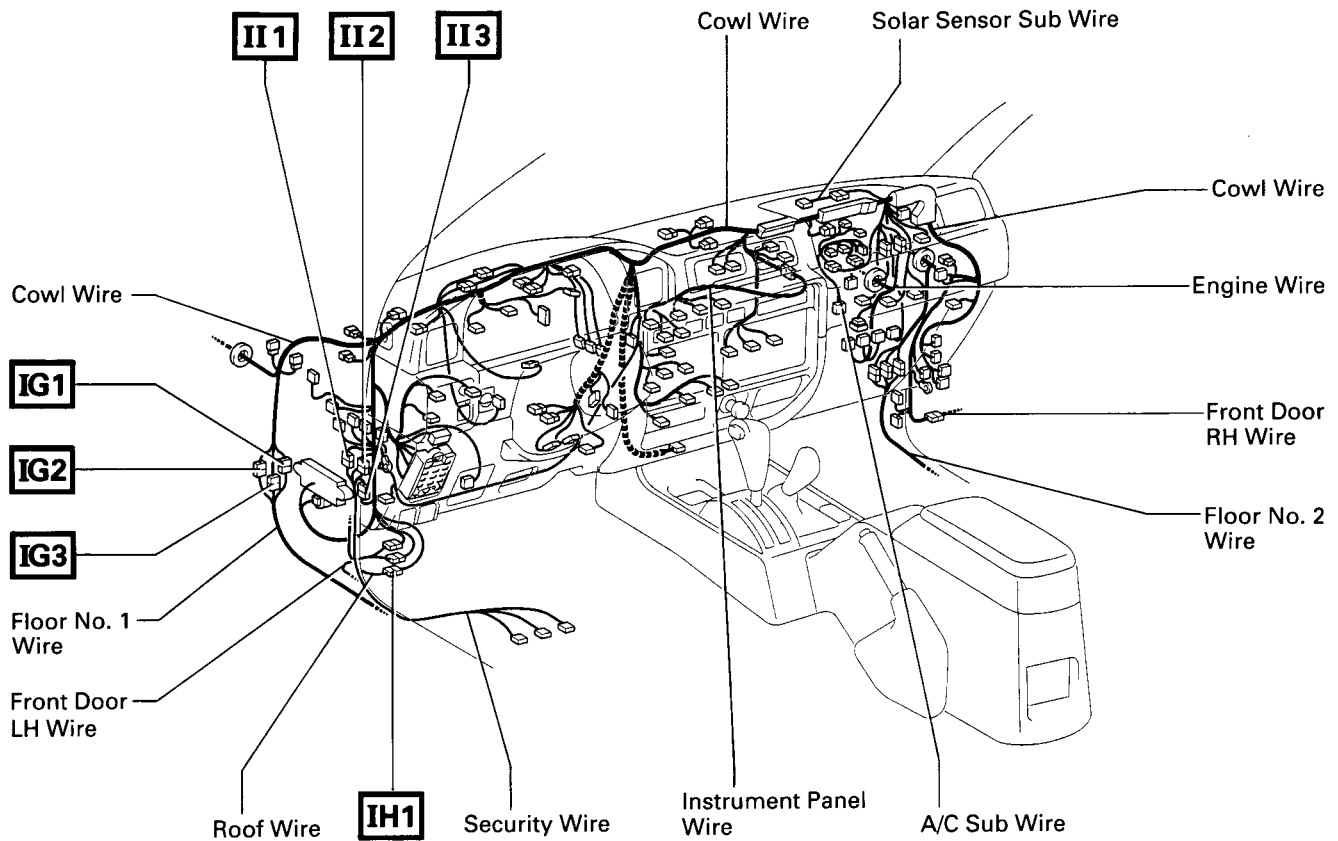

▽ : Location of Ground Points

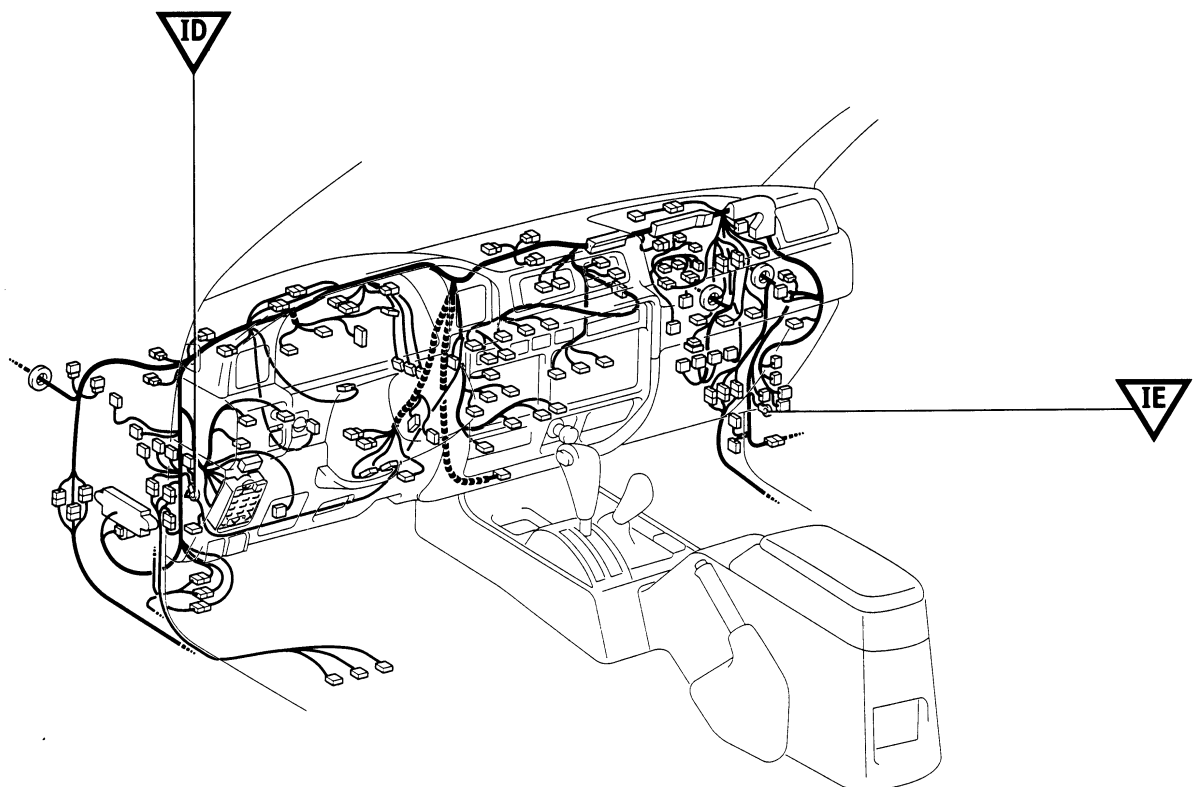


Connector Joining Wire Harness and Wire Harness

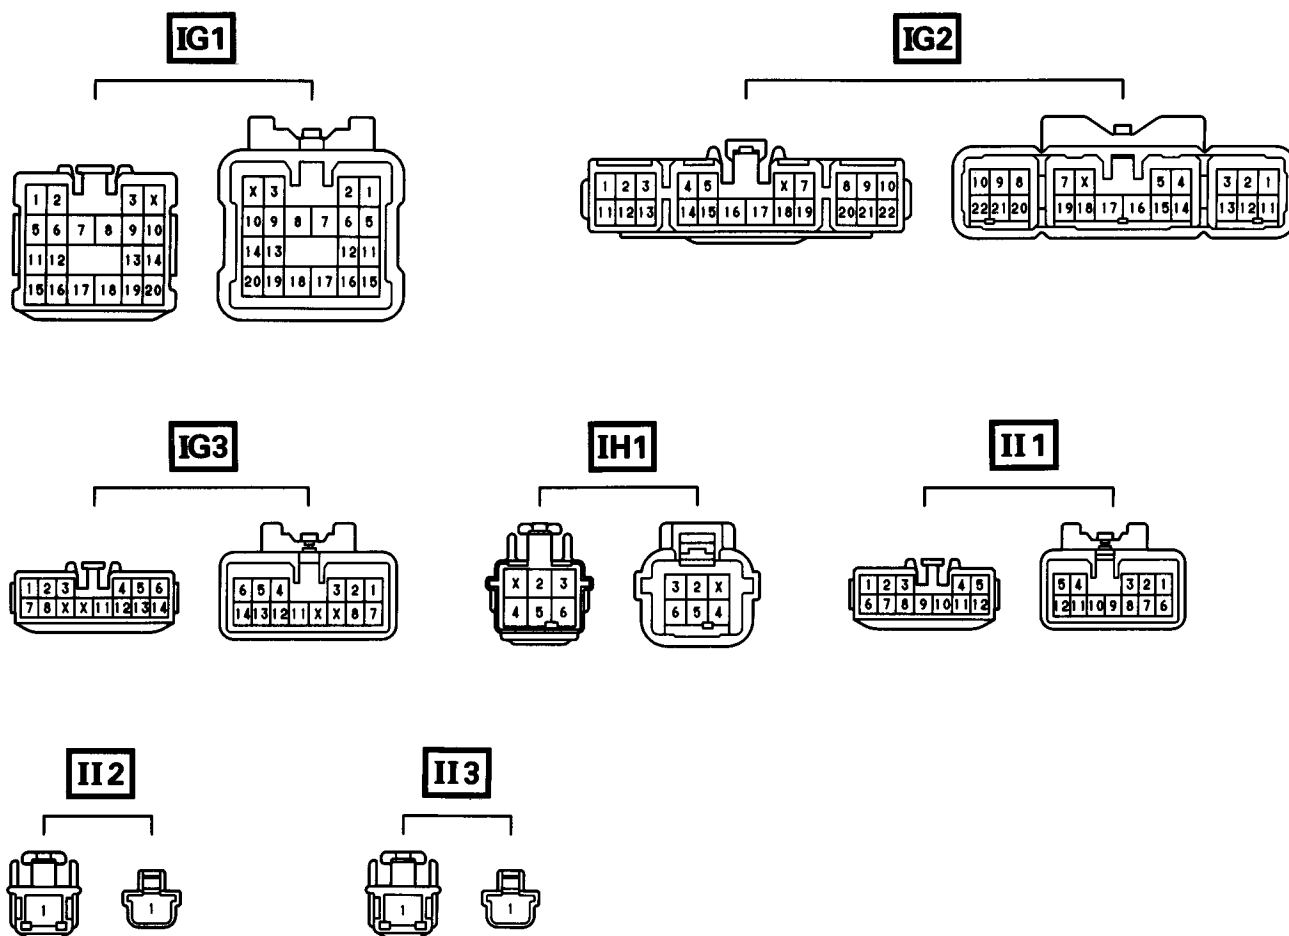


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG1	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IG2	
IG3	
IH1	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)
II1	COWL WIRE AND SECURITY WIRE (LEFT KICK PANEL)
II2	SECURITY WIRE AND COWL WIRE (LEFT KICK PANEL)
II3	COWL WIRE AND SECURITY WIRE (LEFT KICK PANEL)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

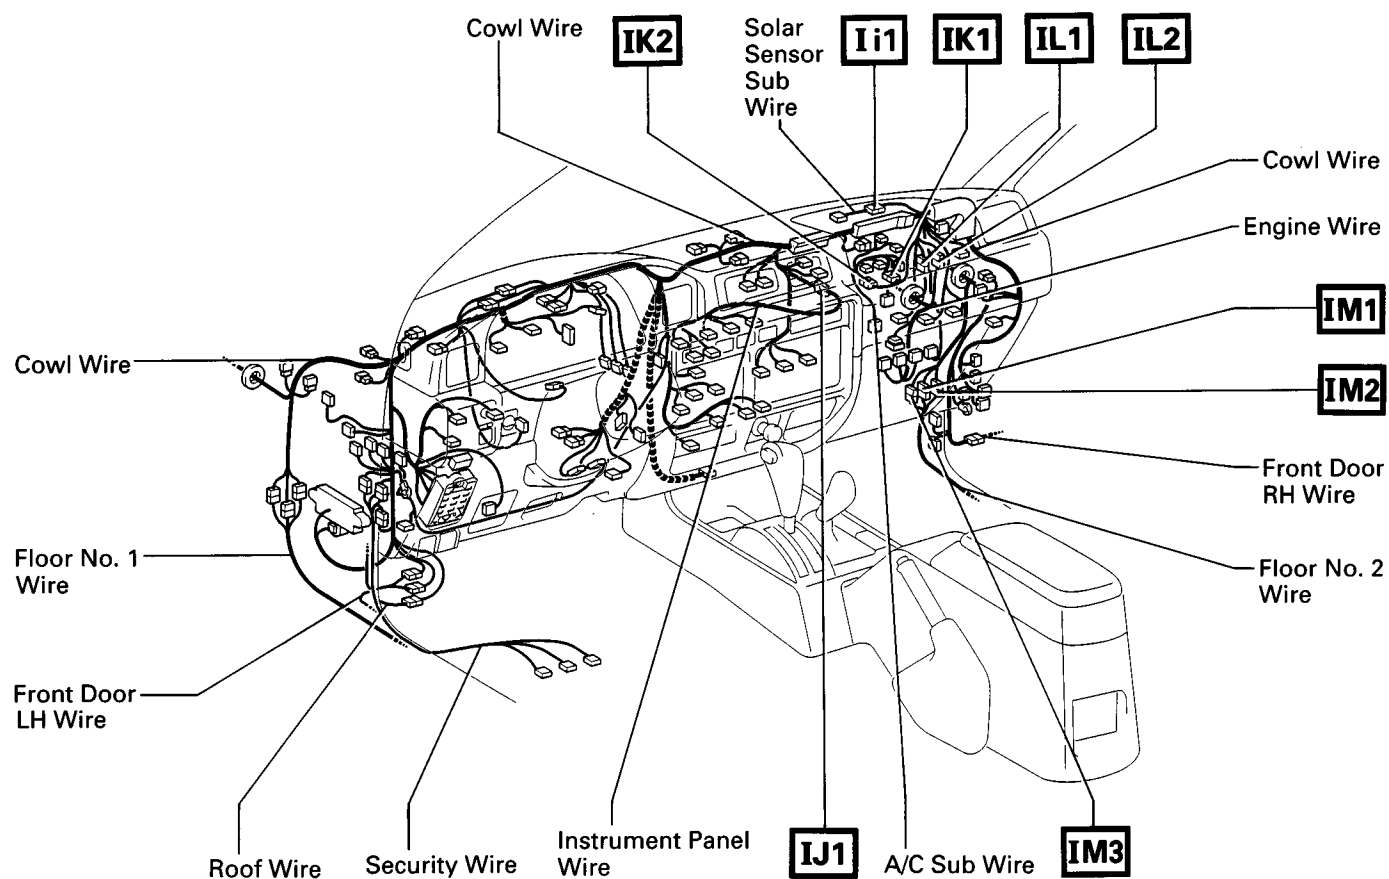

 : Location of Splice Points

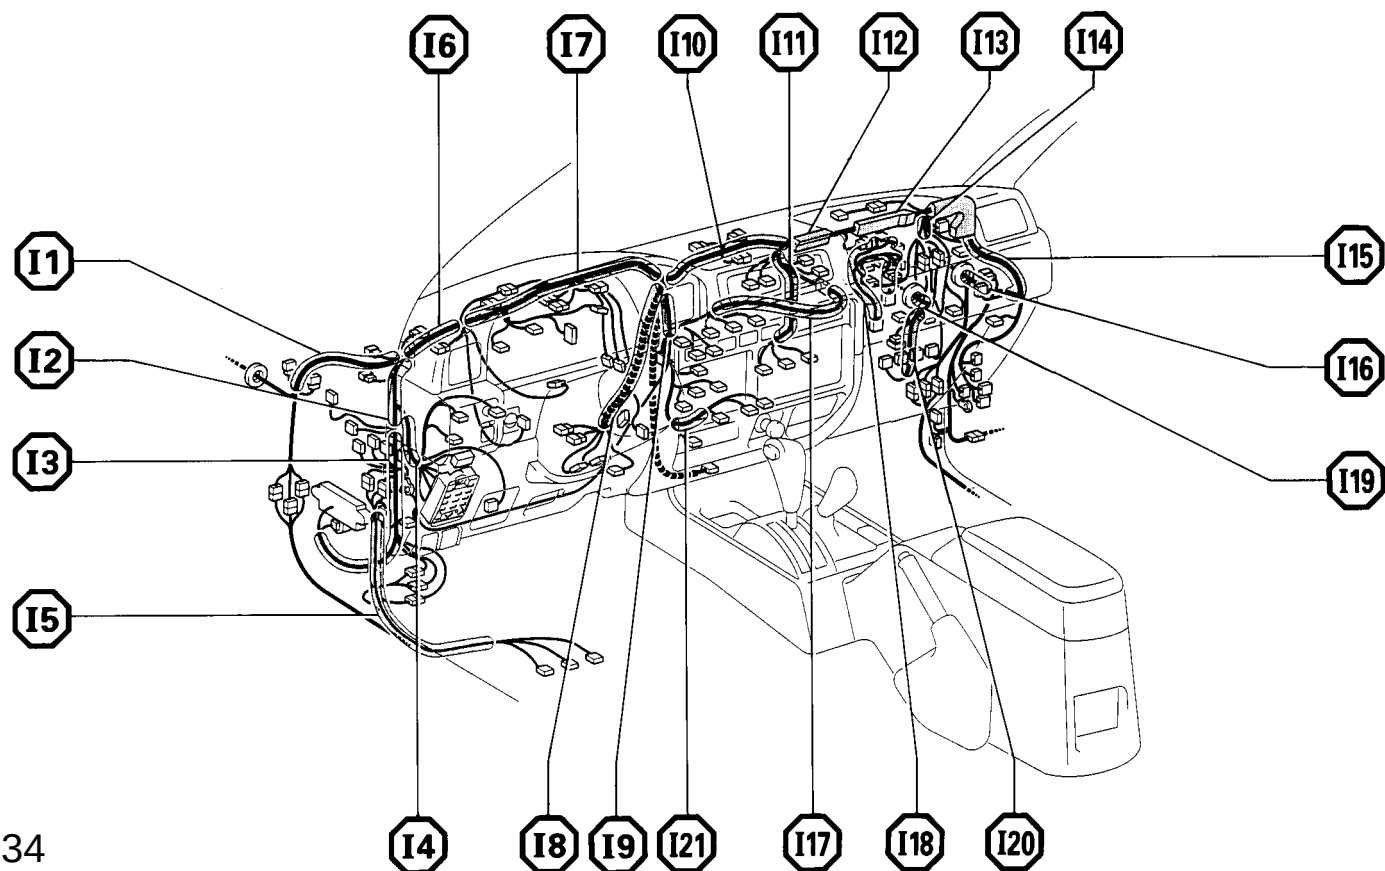


Connector Joining Wire Harness and Wire Harness

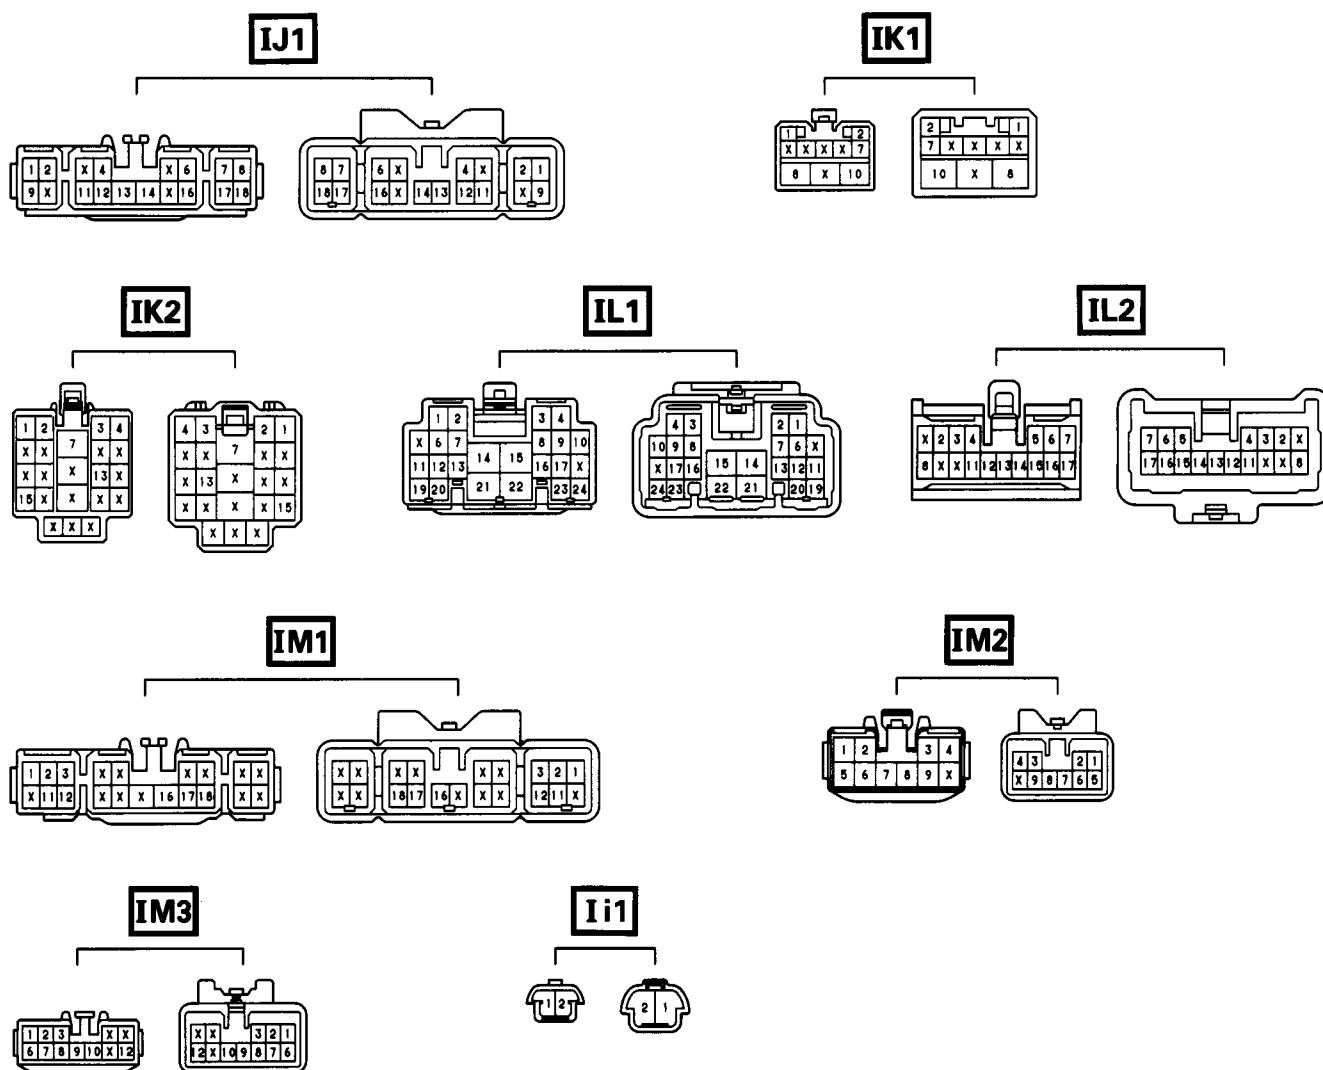


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IJ1	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
IK1	COWL WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IK2	
IL1	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IL2	
IM1	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
IM2	
IM3	
Ii1	SOLAR SENSOR SUB WIRE AND COWL WIRE (BEHIND GLOVE BOX)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

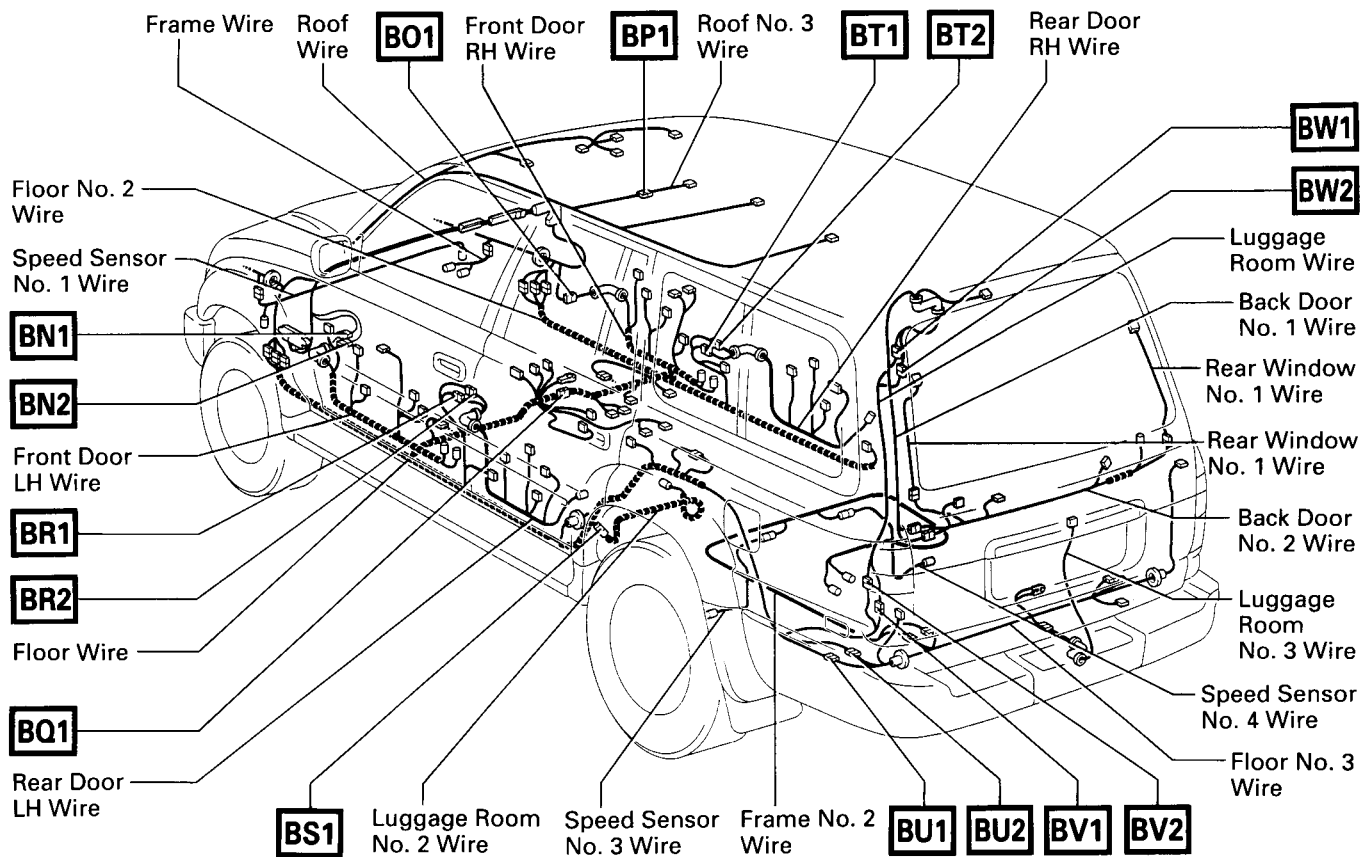

▽ : Location of Ground Points

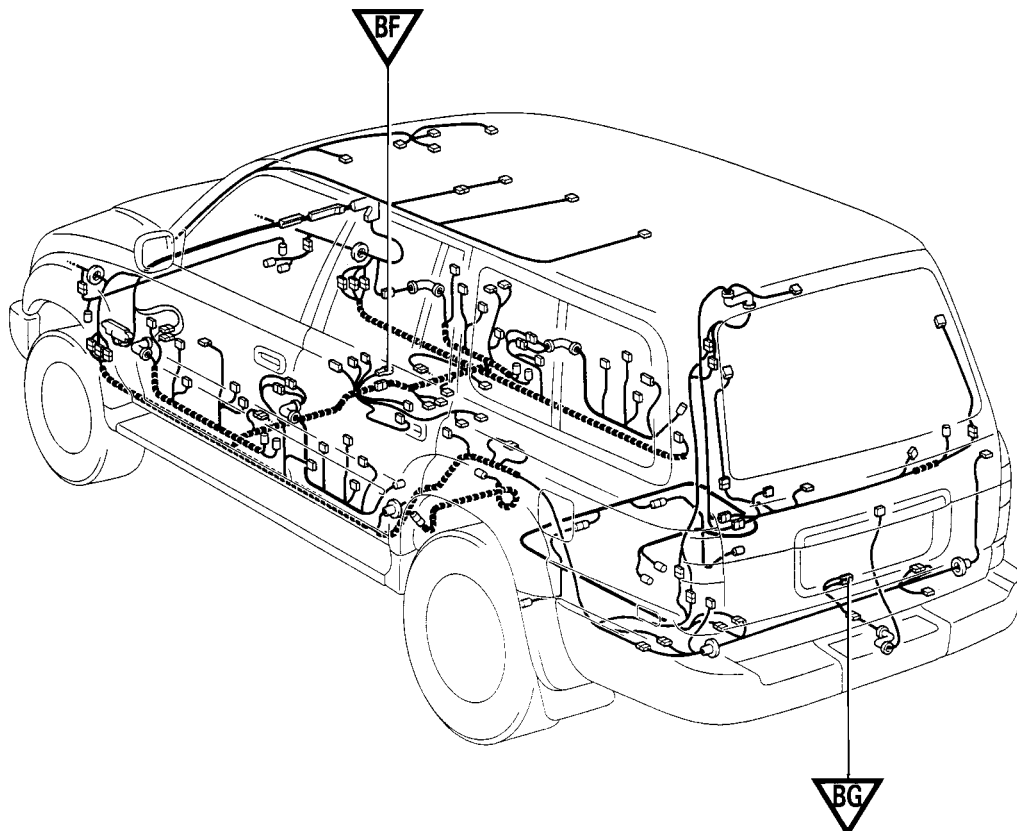


Connector Joining Wire Harness and Wire Harness

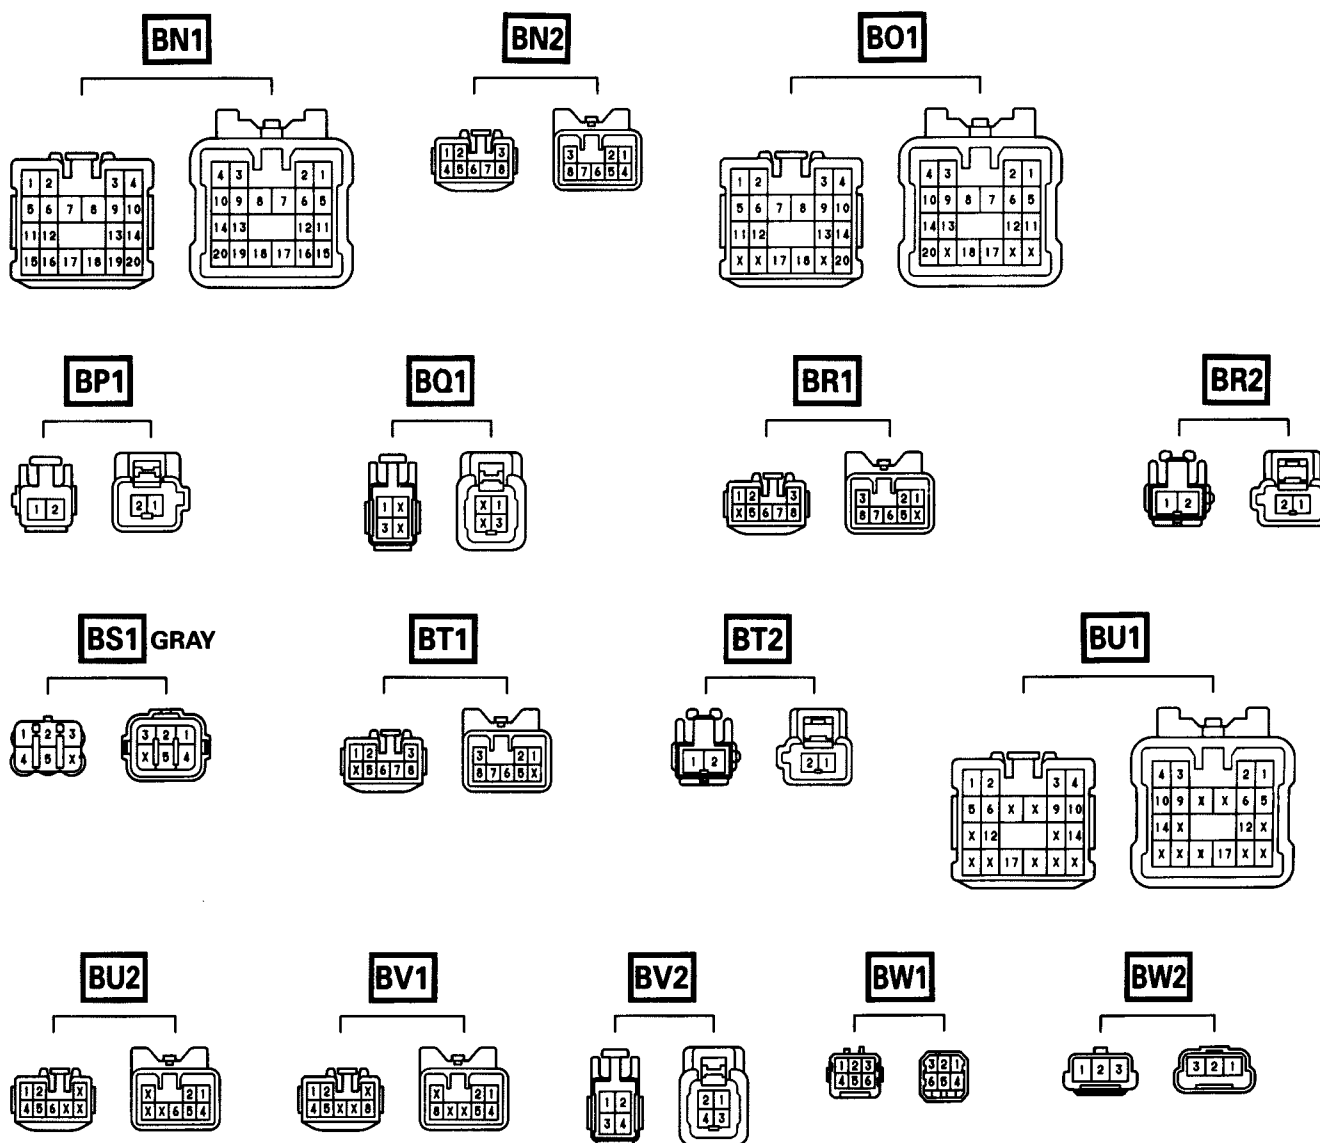


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BN1	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BN2	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BO1	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BP1	ROOF WIRE AND ROOF NO. 3 WIRE (ROOF LEFT)
BQ1	FLOOR NO. 2 WIRE AND FLOOR WIRE (UNDER THE CENTER CONSOLE)
BR1	REAR DOOR LH WIRE AND FLOOR WIRE (LEFT CENTER PILLAR)
BR2	REAR DOOR LH WIRE AND FLOOR WIRE (LEFT CENTER PILLAR)
BS1	FLOOR WIRE AND LUGGAGE ROOM NO. 2 WIRE (BEHIND THE FUEL TANK)
BT1	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)
BT2	REAR DOOR RH WIRE AND FLOOR NO. 2 WIRE (RIGHT CENTER PILLAR)
BU1	FLOOR NO. 3 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BU2	FLOOR NO. 3 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BV1	LUGGAGE ROOM NO.1 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BV2	LUGGAGE ROOM NO.1 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BW1	BACK DOOR NO.1 WIRE AND LUGGAGE ROOM NO.1 WIRE (LEFT REAR SIDE OF ROOF)
BW2	BACK DOOR NO.1 WIRE AND LUGGAGE ROOM NO.1 WIRE (LEFT REAR SIDE OF ROOF)

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

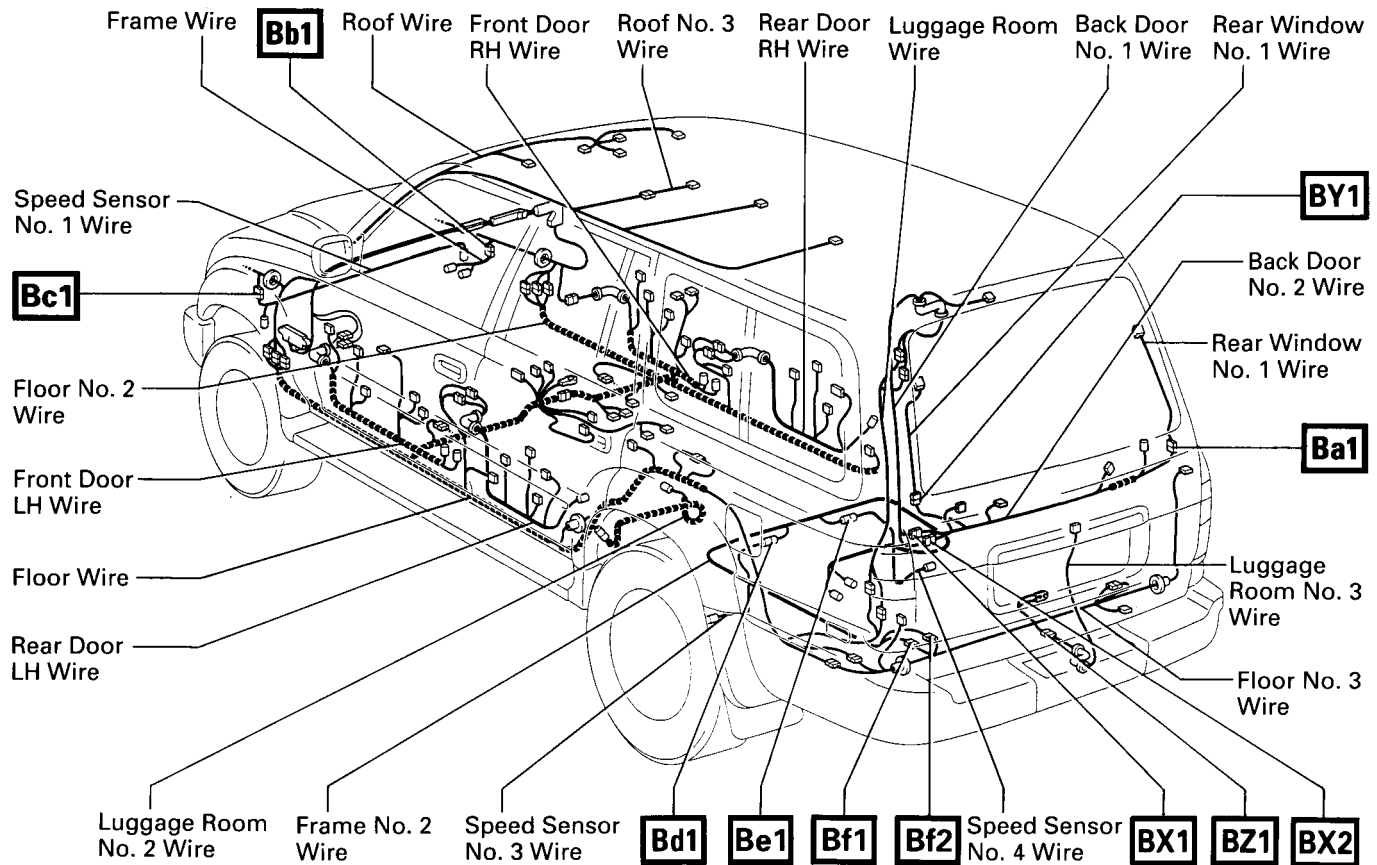

○ : Location of Splice Points

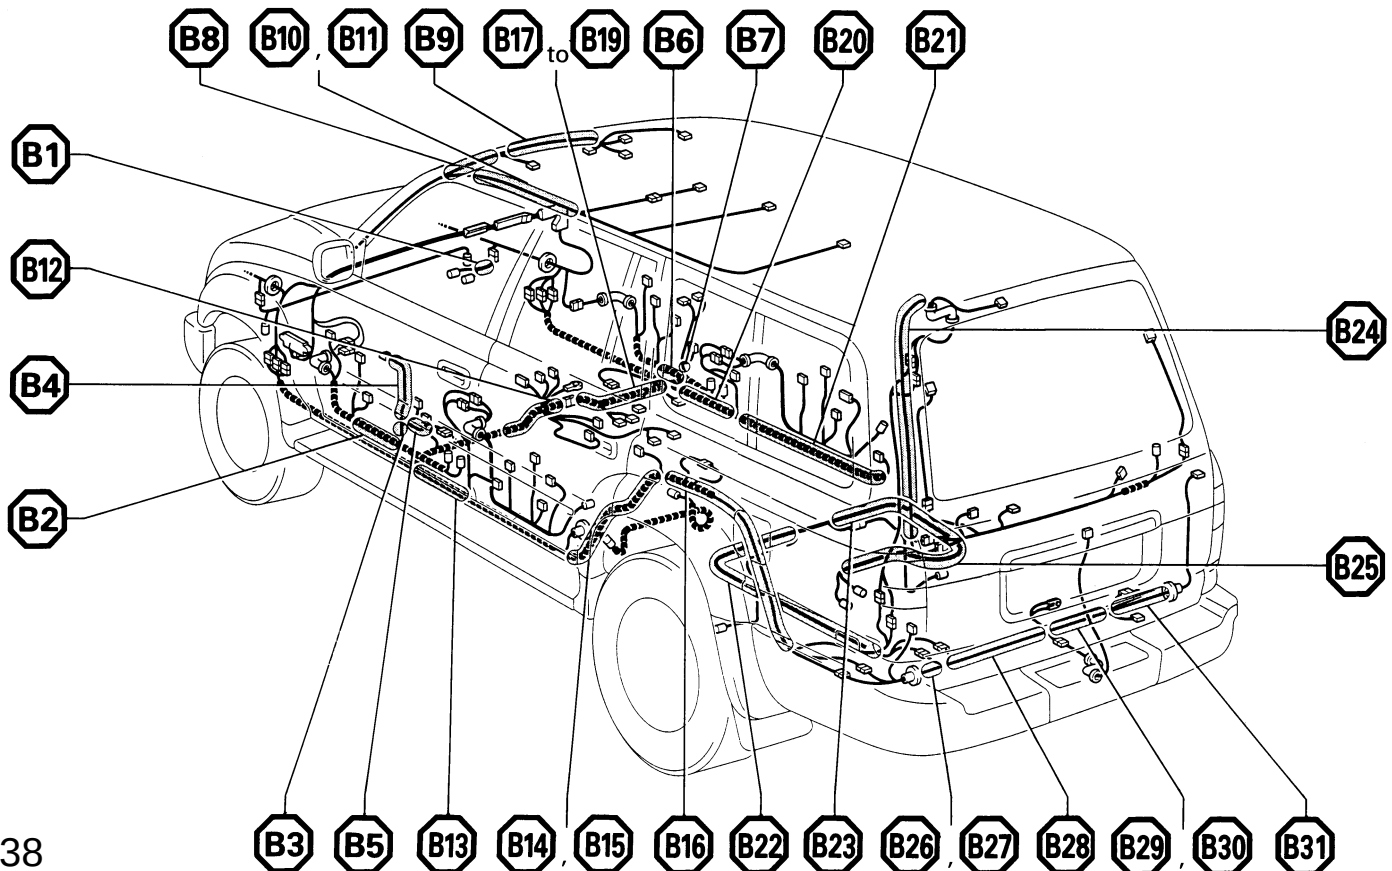


Connector Joining Wire Harness and Wire Harness

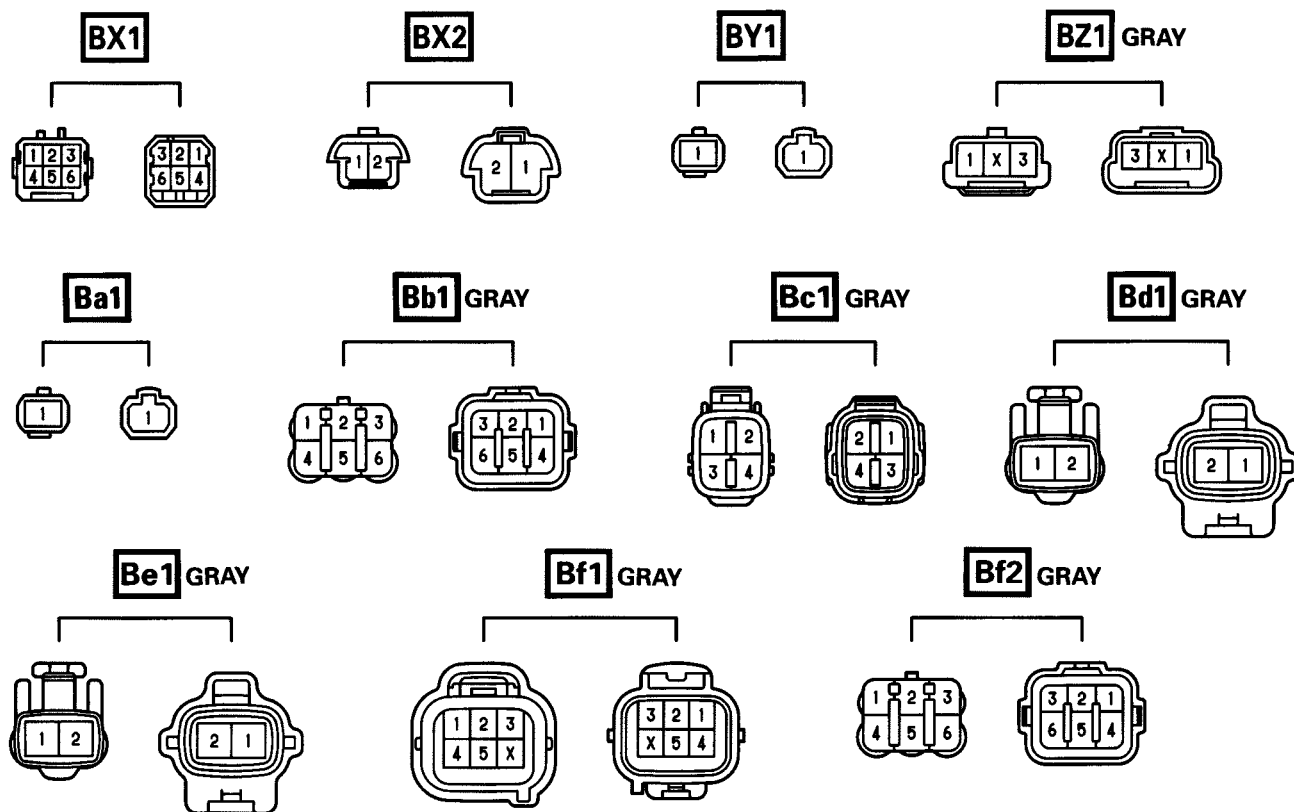


CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BX1	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BX2	
BY1	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BZ1	LUGGAGE ROOM NO. 3 WIRE AND FLOOR NO. 3 WIRE (UNDER THE LOWER BACK PANEL)
Ba1	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT)
Bb1	COWL WIRE AND FRAME WIRE (RIGHT FENDER)
Bc1	COWL WIRE AND SPEED SENSOR NO. 1 WIRE (LEFT KICK PANEL)
Bd1	FRAME NO. 2 WIRE AND SPEED SENSOR NO. 3 WIRE (REAR AXLE HOUSING LH)
Be1	FRAME NO. 2 WIRE AND SPEED SENSOR NO. 4 WIRE (REAR AXLE HOUSING RH)
Bf1	FLOOR NO. 3 WIRE AND FRAME NO. 2 WIRE (LEFT QUARTER PANEL INNER)
Bf2	

G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

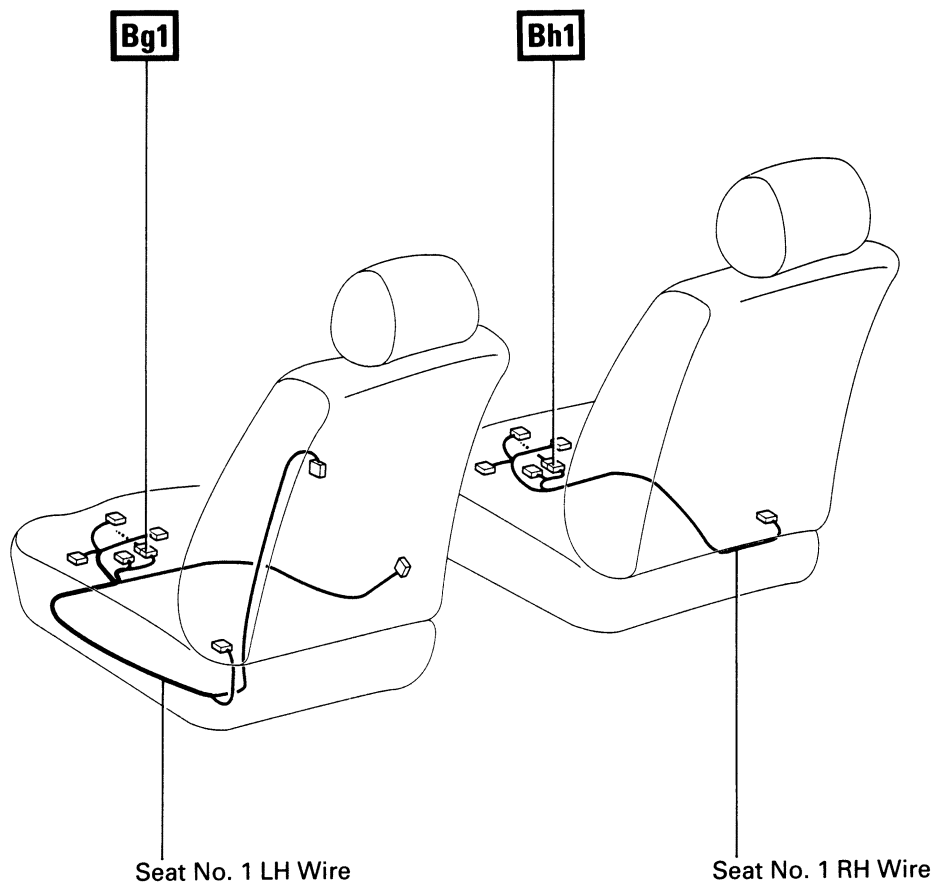

○ : Location of Splice Points

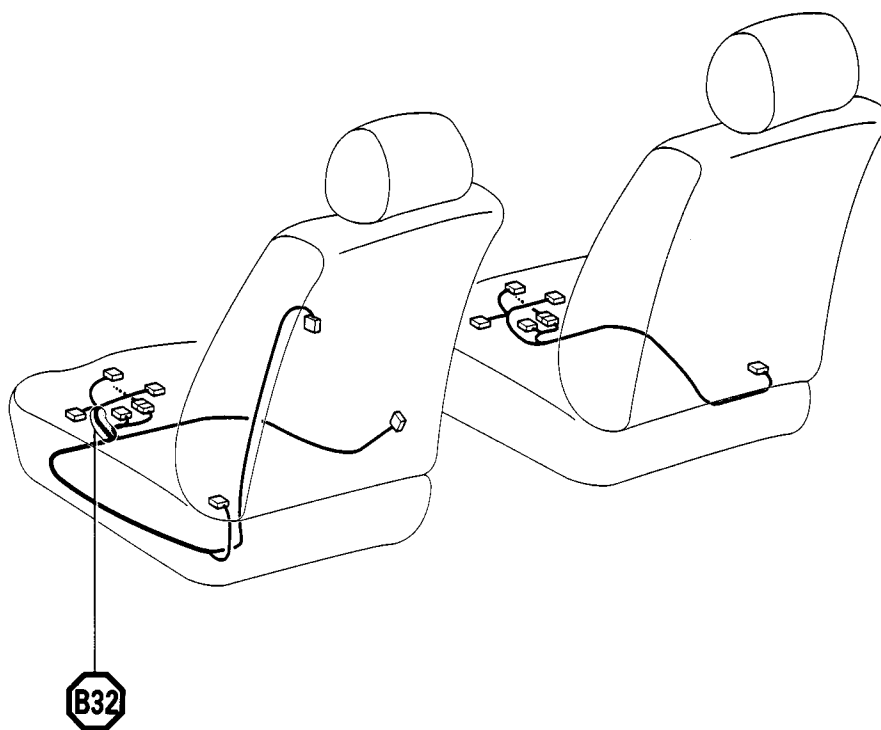

Connector Joining Wire Harness and Wire Harness

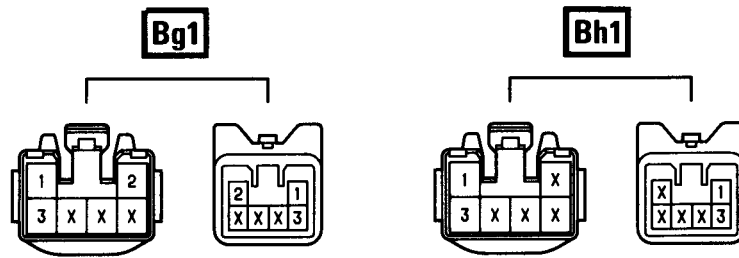

CODE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
Bg1	FLOOR NO. 1 WIRE AND SEAT NO. 1 LH WIRE (UNDER THE DRIVER'S SEAT)
Bh1	FLOOR NO. 2 WIRE AND SEAT NO. 1 RH WIRE (UNDER THE PASSENGER'S SEAT)