



H POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

The next page and following pages show the parts to which each electrical source outputs current.

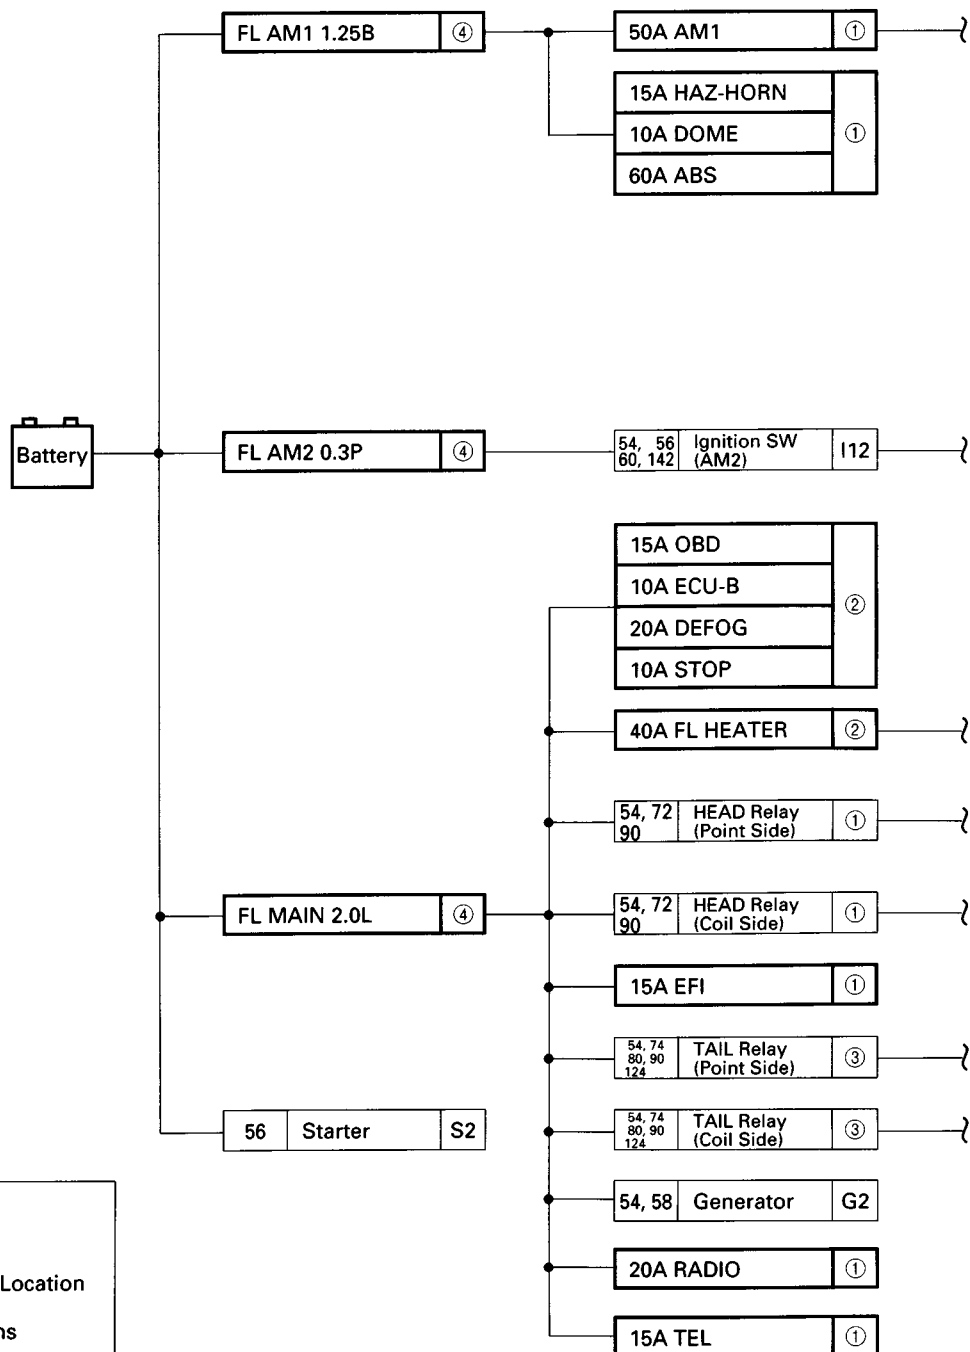

Example

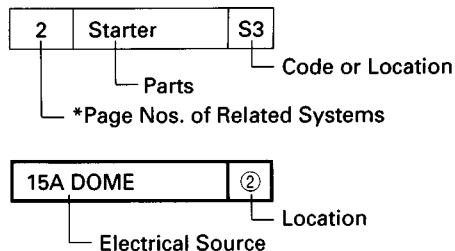


* These are the page numbers of the first page on which the related system is shown.

The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)

② : Fuse Block (F11 See page 20)

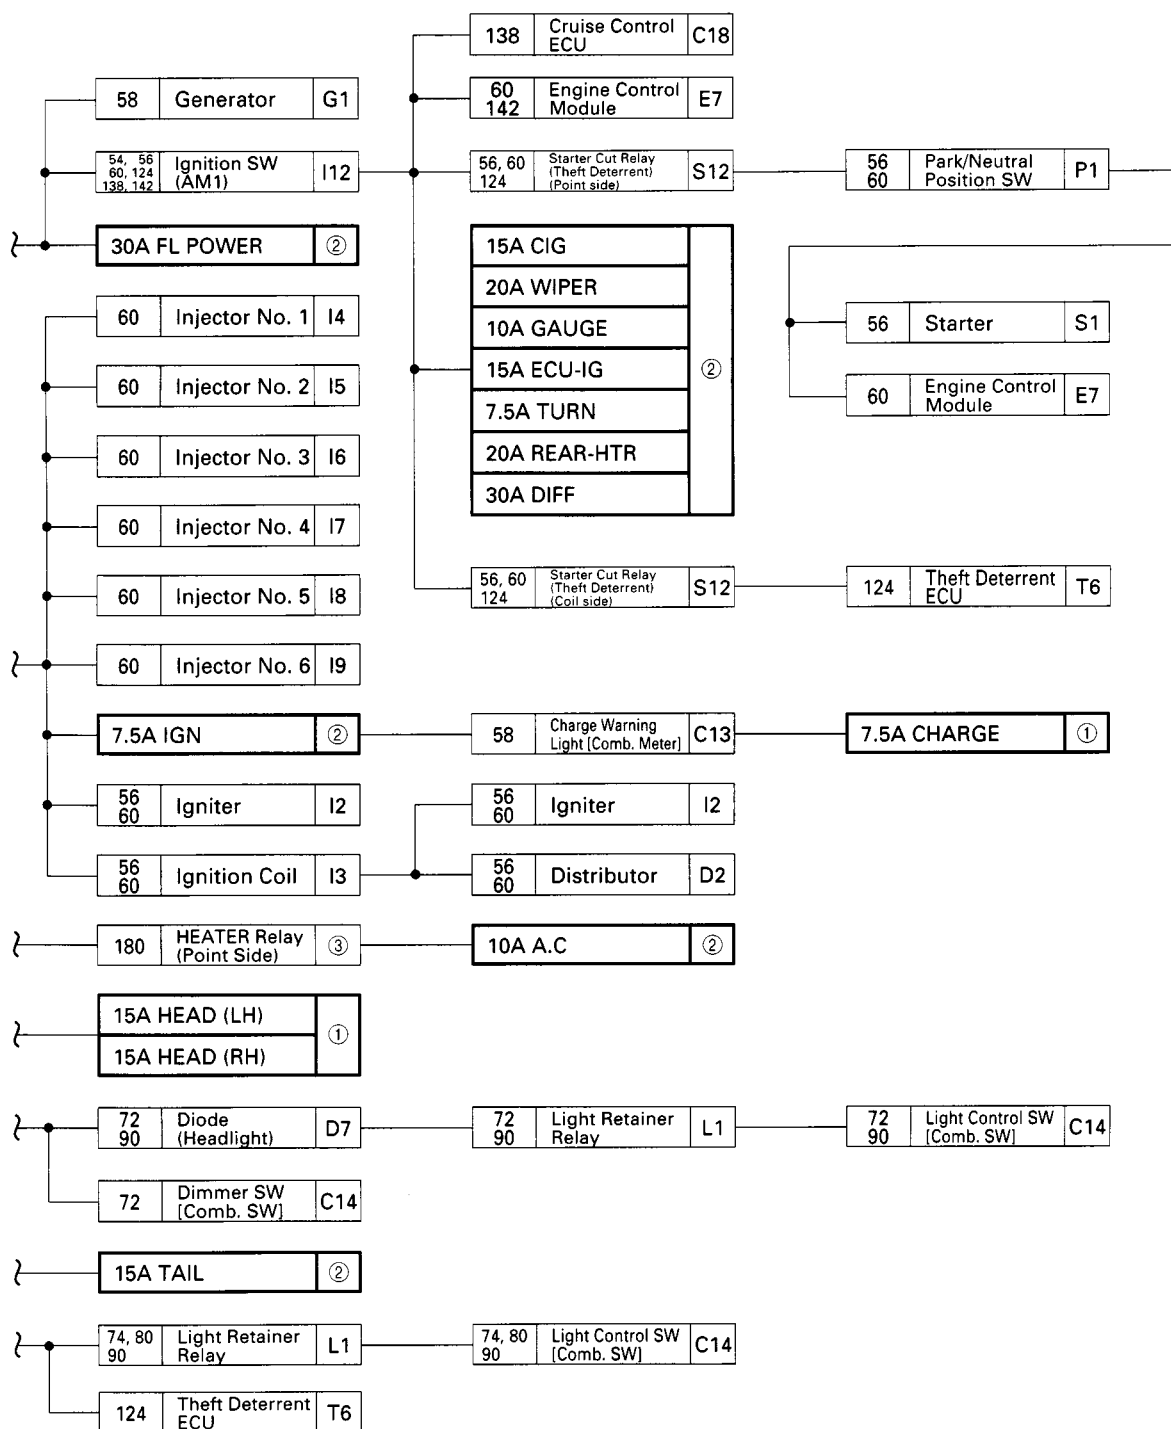

③ : R/B No. 1 (See page 20)

④ : Fusible Link (F6, F7, F8 See page 22)

H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		180		133		128		180				133		180		155	80	80 128	128 168	133	174																
			Parts		A/C Dual Pressure SW		ABS Actuator		ABS Relay		Auto Antenna Relay		Auto Antenna Motor		A/C Amplifier		A/C Automatic Amplifier		A/C Power Transistor (Blower Control)		A/C System Amplifier		ABS ECU		Air Inlet Control Servo Motor		Air Vent Mode Control Servo Motor		Airbag Sensor Assembly		Ashtray Illumination		Auto Antenna Control SW		Auto Antenna ECU		ABS Deceleration Sensor		Brake Fluid Level Warning SW	
			Code or Location		CB or Fuse		A 2	A 5	A 7	A 8	A 9	A10	A11	A12	A14	A15	A18	A20	A21	A22	A24	A25	A28	A29	A30	A31	B 1													
①	7.5A	CHARGE																																						
	10A	DOME																																						
	15A	EFI																																						
	15A	TEL																																						
	15A	HEAD (LH)																																						
	15A	HEAD (RH)																																						
	15A	HAZ-HORN																																						
	20A	RADIO																																						
	60A	ABS		●	●	●												●																						
②	15A	CIG										●									●																			
	15A	TAIL																																						
	10A	STOP															●																							
	20A	DEFOG																																						
	20A	WIPER																																						
	10A	GAUGE	●	●		●					●	●	●			●	●	●	●	●																	●			
	7.5A	TURN																																						
	15A	ECU-IG						●	●									●																	●					
	20A	REAR-HTR																																						
	7.5A	IGN																										●												
	10A	A.C																																						
	30A	DIFF																																						
	30A	FL POWER																																						
	40A	FL HEATER											●	●	●																									
	10A	ECU-B										●							●																					
	15A	OBD																																						

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18) ② : Fuse Block (F11 See page 20) ③ : R/B No. 1 (See page 20)

[illegible]

H POWER SOURCE (Current Flow Chart)

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18) ② : Fuse Block (F11 See page 20) ③ : R/B No. 1 (See page 20)

[illegible]

H POWER SOURCE (Current Flow Chart)

Location	*Page Nos. of Related Systems		99	80 88	80 180	180	76	60	84	90	74	60	106	100	84	100	174	80 142	78 142 162			
			Parts																			
			Code or Location																			
	CB or Fuse		H 7	H 8	H 9	H 10	H 11	H 12	I 1	I 10	I 11	L 1	L 2	M 1	M 3	M 4	M 5	M 6	O 1	O 2	O 4	P 1
①	7.5A	CHARGE																				
	10A	DOME																				
	15A	EFI																				
	15A	TEL																				
	15A	HEAD (LH)																				
	15A	HEAD (RH)																				
	15A	HAZ-HORN	●	●	●																	
	20A	RADIO																				
60A	ABS																					
②	15A	CIG																				
	15A	TAIL			●	●							●							●		
	10A	STOP						●														
	20A	DEFOG																				
	20A	WIPER																				
	10A	GAUGE				●	●												●	●	●	●
	7.5A	TURN																				
	15A	ECU-IG											●		●							
	20A	REAR-HTR																				
	7.5A	IGN																				
	10A	A.C					●															
	30A	DIFF																				
	30A	FL POWER														●		●				
	40A	FL HEATER																				
	10A	ECU-B										●										
15A	OBD																					

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18) ② : Fuse Block (F11 See page 20) ③ : R/B No. 1 (See page 20)

74	174	114												130												80 128	80 172	80 150	110	80 174	78	76
Parking Light LH	Parking Light RH	Parking Brake SW	Power Window Master SW	Power Window Motor Front LH	Power Window Motor Front RH	Power Window Motor Rear LH	Power Window Motor Rear RH	Power Window SW Front RH	Power Window SW Rear LH	Power Window SW Rear RH	Power Seat Control SW (Driver's Seat)	Power Seat Control SW (Front Passenger's Seat)	Power Seat Motor (Driver's Seat Front Vertical Control)	Power Seat Motor (Driver's Seat Lumbar Support Control)	Power Seat Motor (Driver's Seat Rear Vertical Control)	Power Seat Motor (Driver's Seat Reclining Control)	Power Seat Motor (Driver's Seat Slide Control)	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)	Power Seat Motor (Front Passenger's Seat Reclining Control)	Power Seat Motor (Front Passenger's Seat Slide Control)	Radio and Player	Rear Heater SW	Rear Window Defogger SW	Remote Control Mirror SW	Rheostat	Back-Up Light LH [Rear Comb. Light LH]	Stop Light LH [Rear Comb. Light LH]				
P 2	P 3	P 4	P 5	P 6	P 7	P 8	P 9	P 10	P 11	P 12	P 13	P 14	P 15	P 16	P 17	P 18	P 19	P 20	P 21	P 22	P 23	R 1	R 3	R 4	R 5	R 6	R 7					

H POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																					
			Rear Turn Signal Light LH [Rear Comb. Light LH]		Taillight LH [Rear Comb. Light LH]		Back-Up light RH [Rear Comb. Light RH]		Stop Light RH [Rear Comb. Light RH]		Rear Turn Signal Light RH [Rear Comb. Light RH]		Taillight RH [Rear Comb. Light RH]		Rear Diff. Lock Position SW		Rear Heater		Rear Heater Relay		Rear Interior Light		Rear Window Defogger (+)		Rear Wiper Motor		Rear Wiper Relay		Remote Control Mirror LH		Remote Control Mirror RH		Seat Belt Warning Relay		Starter Cut Relay (A/C)		Stereo Component Amplifier		Stop Light SW		Shift Lock ECU		Transfer L4 Position SW		Transfer Neutral Position SW																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																	
R 7		R 8		R 10		R 13		R 14		R 15		R 16		R 18		R 19		R 20		R 21		S 3		S 11		S 15		S 18		S 19		T 3		T 4																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												
①	7.5A	CHARGE																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												</

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18) ② : Fuse Block (F11 See page 20) ③ : R/B No. 1 (See page 20)

[illegible]

