



FROM POWER SOURCE SYSTEM (SEE PAGE 54)



SERVICE HINTS

C 5 CENTER DIFF. LOCK CONTROL RELAY

3-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

2-GROUND : ALWAYS CONTINUITY

7-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION AND FOUR-WHEEL DRIVE CONTROL LEVER AT **L4** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C 1	22	D11	24	P 1	23
C 2	22	E 7	24	S10	25
C 5	24	F11	25	T 3	23
C10	A 24	J 1	25	T 4	23
C11	B 24	J 2	25		
C13	D 24	J 4	25		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EC1	30	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
IJ1	34	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
IL1	34	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IL2		


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	30	AIR INTAKE CHAMBER
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E18	30	ENGINE WIRE	I12	34	COWL WIRE
E22	30	TRANSMISSION WIRE	I13		
I 7	34	COWL WIRE			


C 1

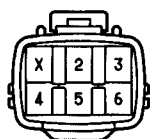


C 2 GRAY




C 5

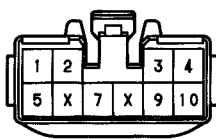


C10 A GRAY

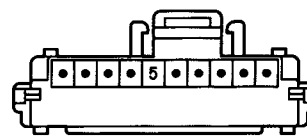

C11 B BLUE

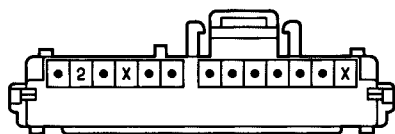


C13 D

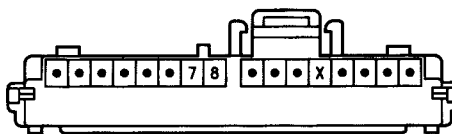

D11 BLACK




E 7 DARK GRAY

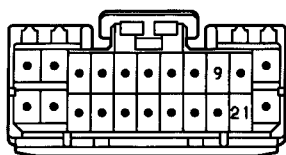

F11

(SEE PAGE 20)

J 1

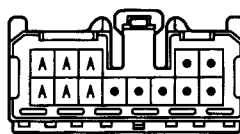


(HINT:SEE PAGE 7)

J 2 BLUE




(HINT:SEE PAGE 7)

J 4

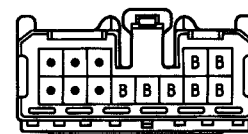


(HINT:SEE PAGE 7)

P 1 GRAY

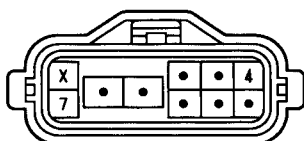

S10

 

T 3 GRAY



T 4 GRAY

