





ILLUMINATION

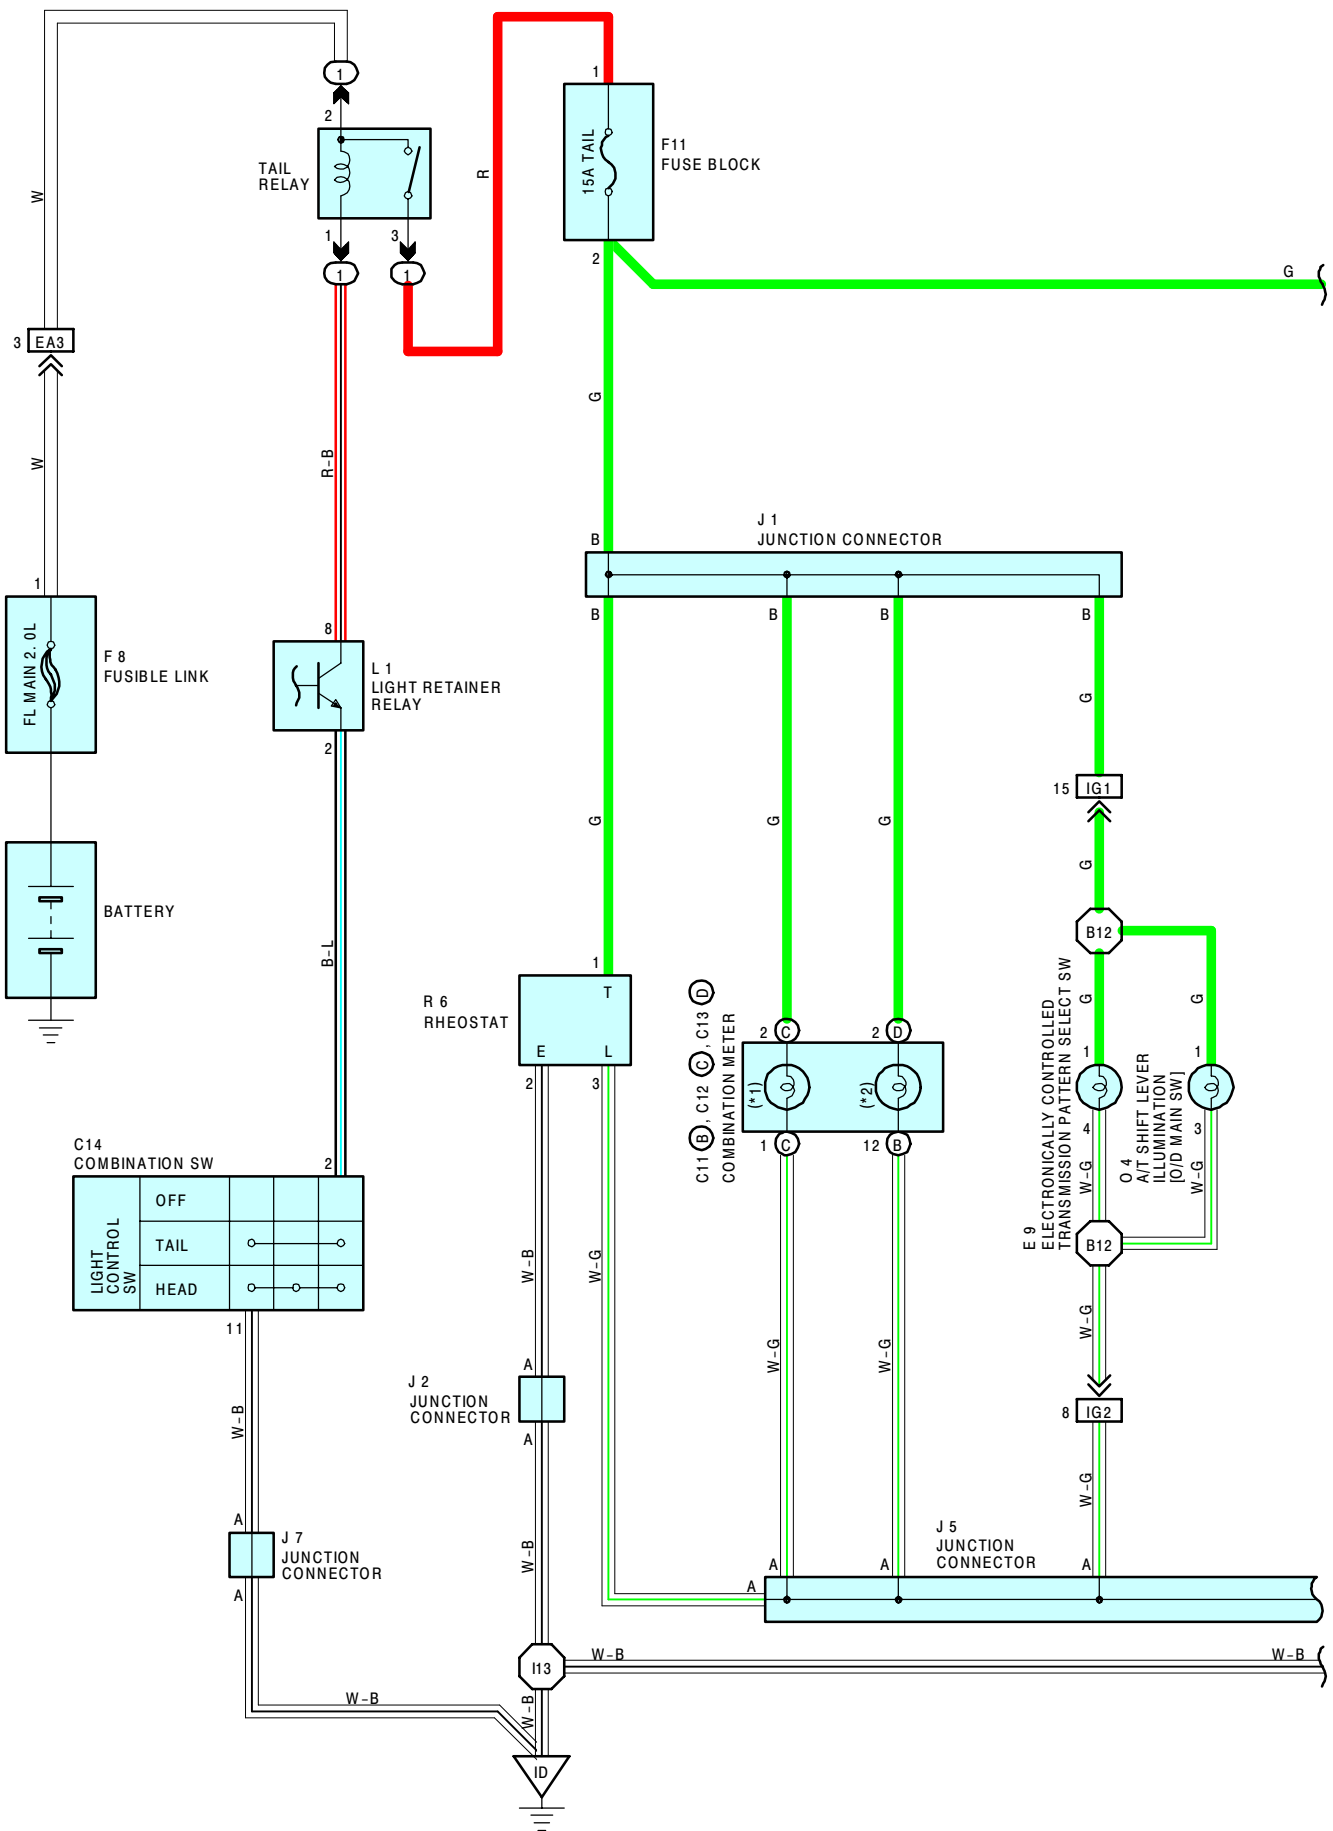

*1 : A/T INDICATOR ILLUMINATION
 *2 : METER ILLUMINATION

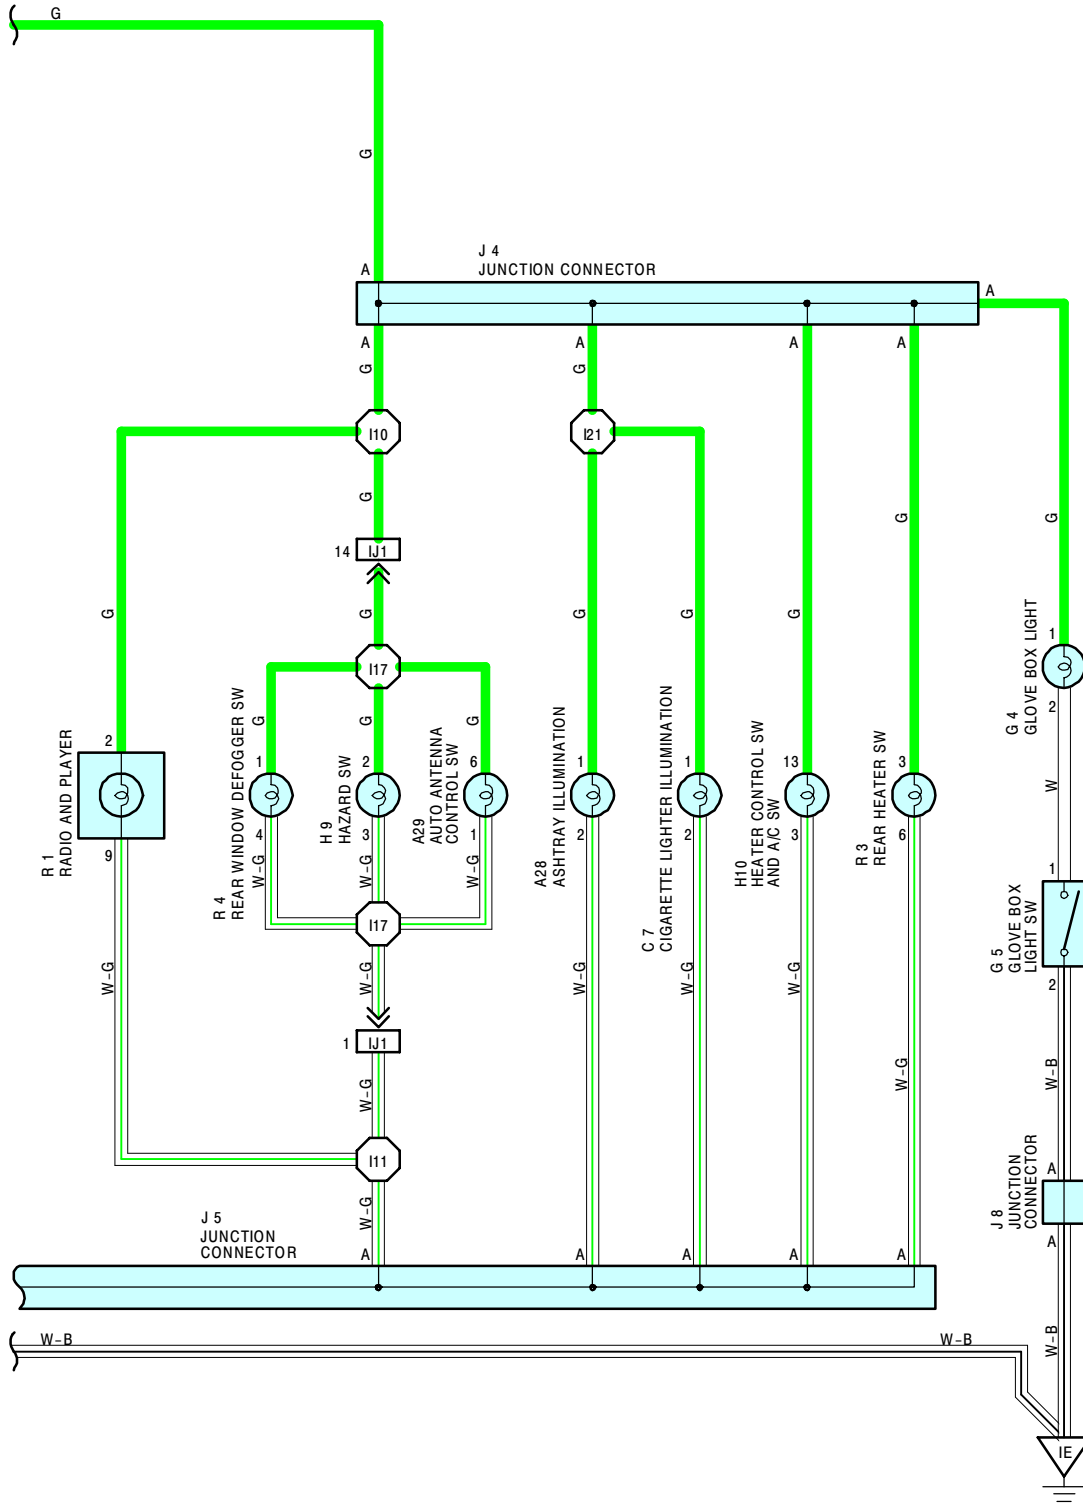



ILLUMINATION

SERVICE HINTS

TAIL RELAY

(1) 2 – (1) 3 : CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
(WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

R 6 RHEOSTAT

1-2 : APPROX. **12** VOLTS WITH THE RHEOSTAT FULLY TURNED COUNTERCLOCKWISE AND **0** VOLTS WITH IT FULLY TURNED CLOCKWISE

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A28	24	F11	25	J 7	25
A29	24	G 4	25	J 8	25
C 7	24	G 5	25	L 1	25
C11 B	24	H 9	25	O 4	27
C12 C	24	H10	25	R 1	25
C13 D	24	J 1	25	R 3	25
C14	24	J 2	25	R 4	25
E 9	26	J 4	25	R 6	25
F 8	22	J 5	25		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO.1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IG1	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IG2	34	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I10	34	COWL WIRE	I17	34	INSTRUMENT PANEL WIRE
I11			I21	34	COWL WIRE
I13			B12	38	FLOOR WIRE

 A28




A29 BLACK

 


C 7 GRAY




C11 ⑧ BLUE

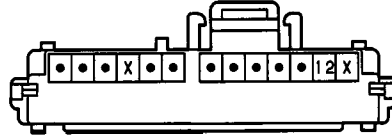


C12 ③ BROWN

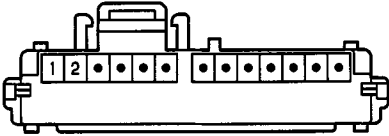


C13 ④

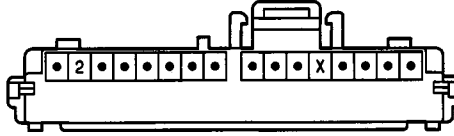

C14 BLACK

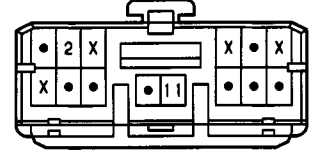

E 9

 

F 8



F11

(SEE PAGE 20)


G 4 GRAY




G 5




H 9 BLACK

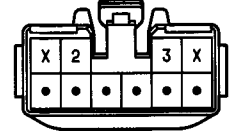

H10

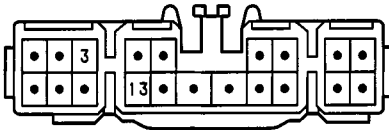

J 1

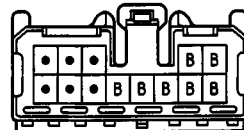


(HINT:SEE PAGE 7)

J 2 BLUE



(HINT:SEE PAGE 7)

J 4

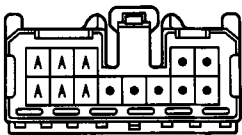

(HINT:SEE PAGE 7)

J 5 BLUE



(HINT:SEE PAGE 7)

J 7 BLUE



(HINT:SEE PAGE 7)

J 8 BLUE

 


(HINT:SEE PAGE 7)


L 1



O 4 BLUE




R 1

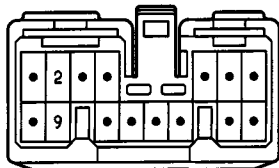

R 3 BLACK



R 4 BLACK

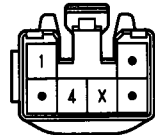

R 6

