


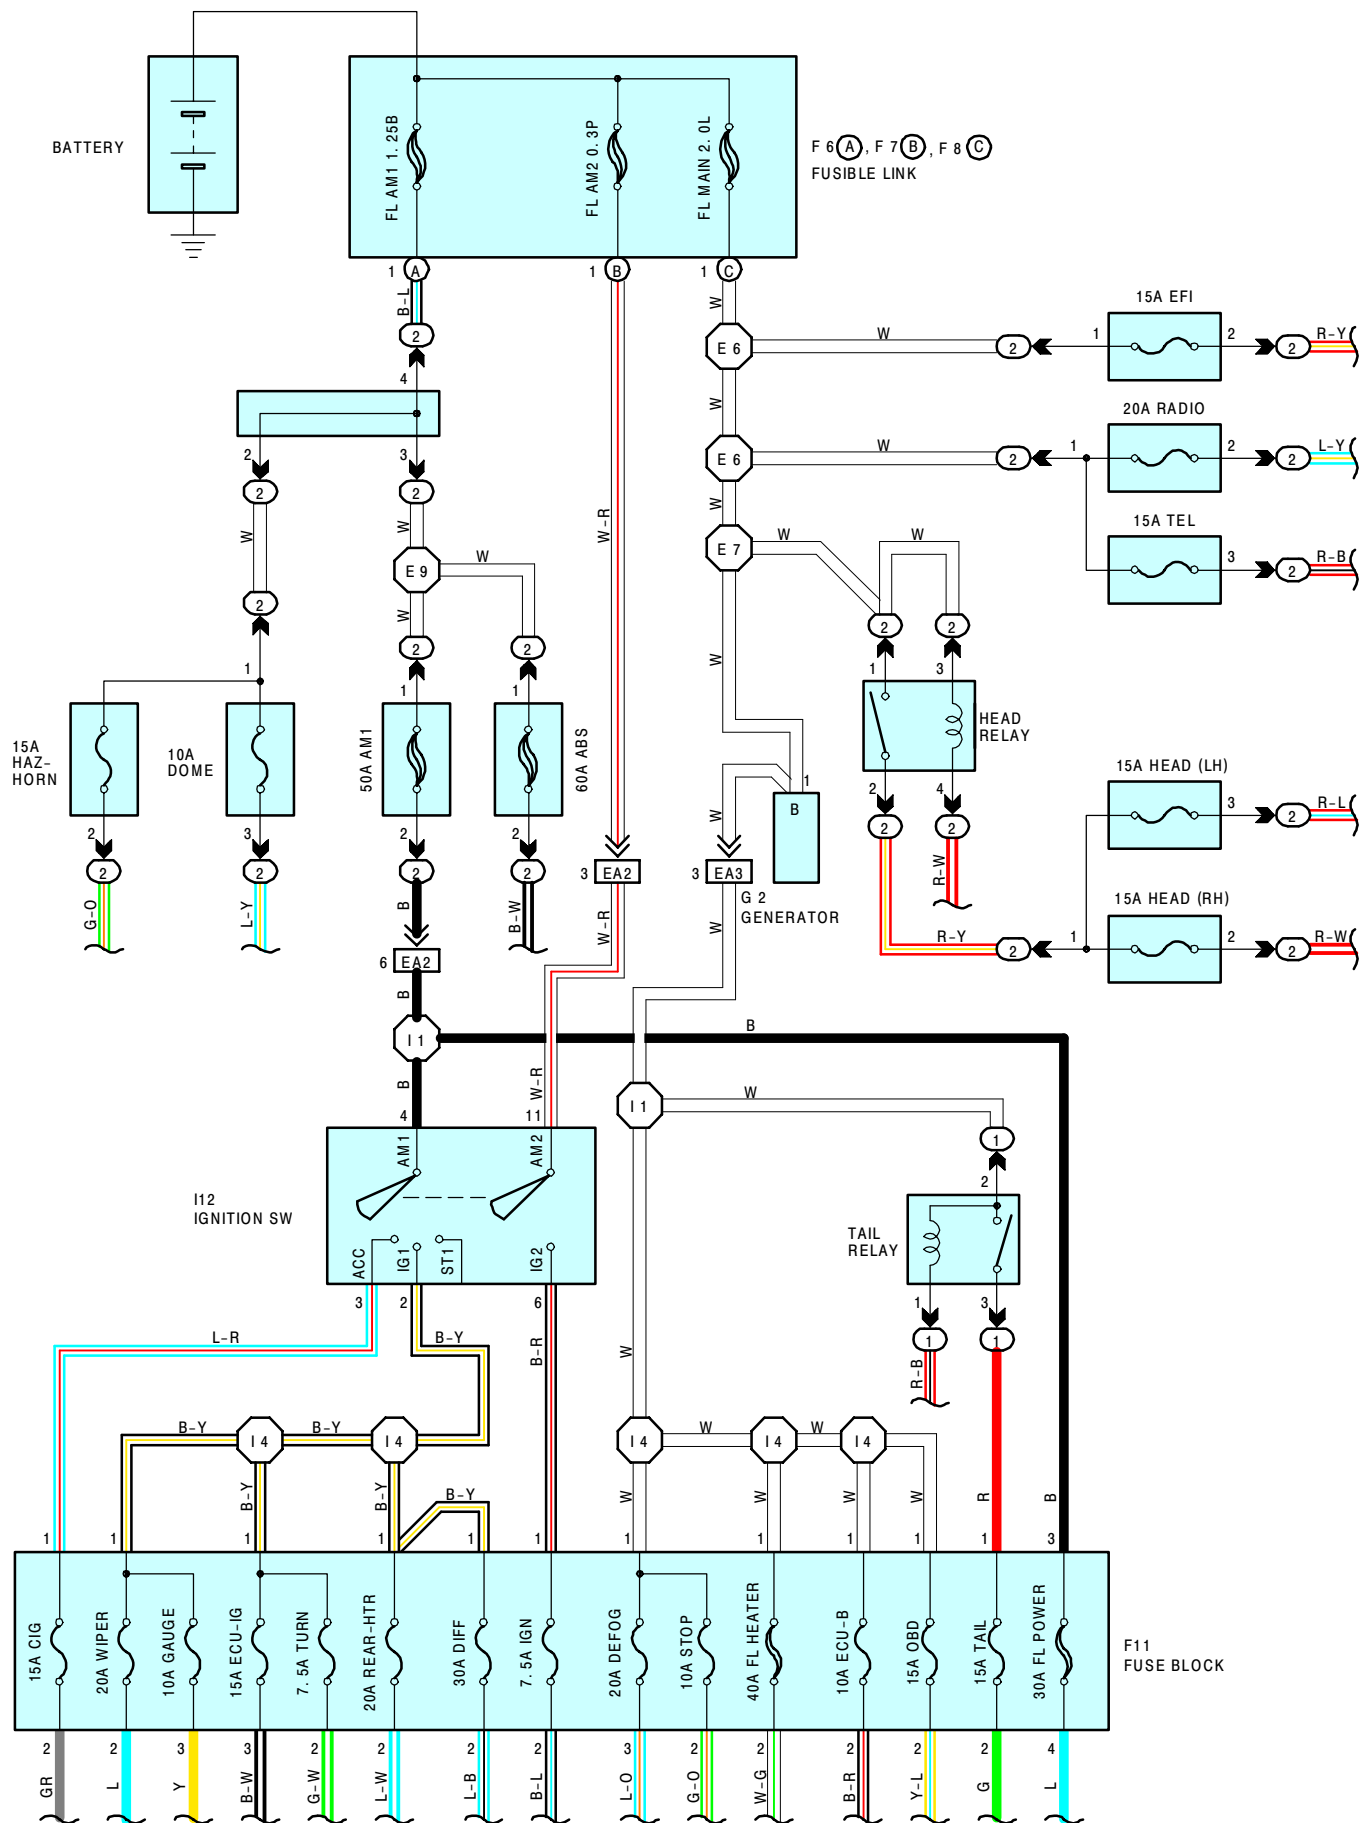

POWER SOURCE



SERVICE HINTS

HEAD RELAY

(2) 1 – (2) 2 : CLOSED WITH THE LIGHT CONTROL SW AT **HEAD** POSITION OR THE DIMMER SW AT **FLASH** POSITION
(WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

I12 IGNITION SW

4-3 : CLOSED WITH THE IGNITION SW AT **ACC** OR **ON** POSITION
4-2 : CLOSED WITH THE IGNITION SW AT **ON** OR **ST** POSITION
11-6 : CLOSED WITH THE IGNITION SW AT **ON** OR **ST** POSITION

TAIL RELAY

(1) 2 – (1) 3 : CLOSED WITH THE LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION
(WHEN THE LIGHT AUTO TURN OFF SYSTEM DOES NOT OPERATE)

○ : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE	SEE PAGE
F 6	A	22	F 8	C	22	G 2	22
F 7	B	22	F11		25	I12	25

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)


□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3		

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 6	30	ENGINE ROOM MAIN WIRE	I 1	34	COWL WIRE
E 7			I 4		
E 9					

 F 6 (A), F 8 (C)




F 7 (B) GRAY



F11

(SEE PAGE 20)

 G 2



I12 BLACK

