





POWER SEAT

FROM POWER SOURCE SYSTEM (SEE PAGE 54)

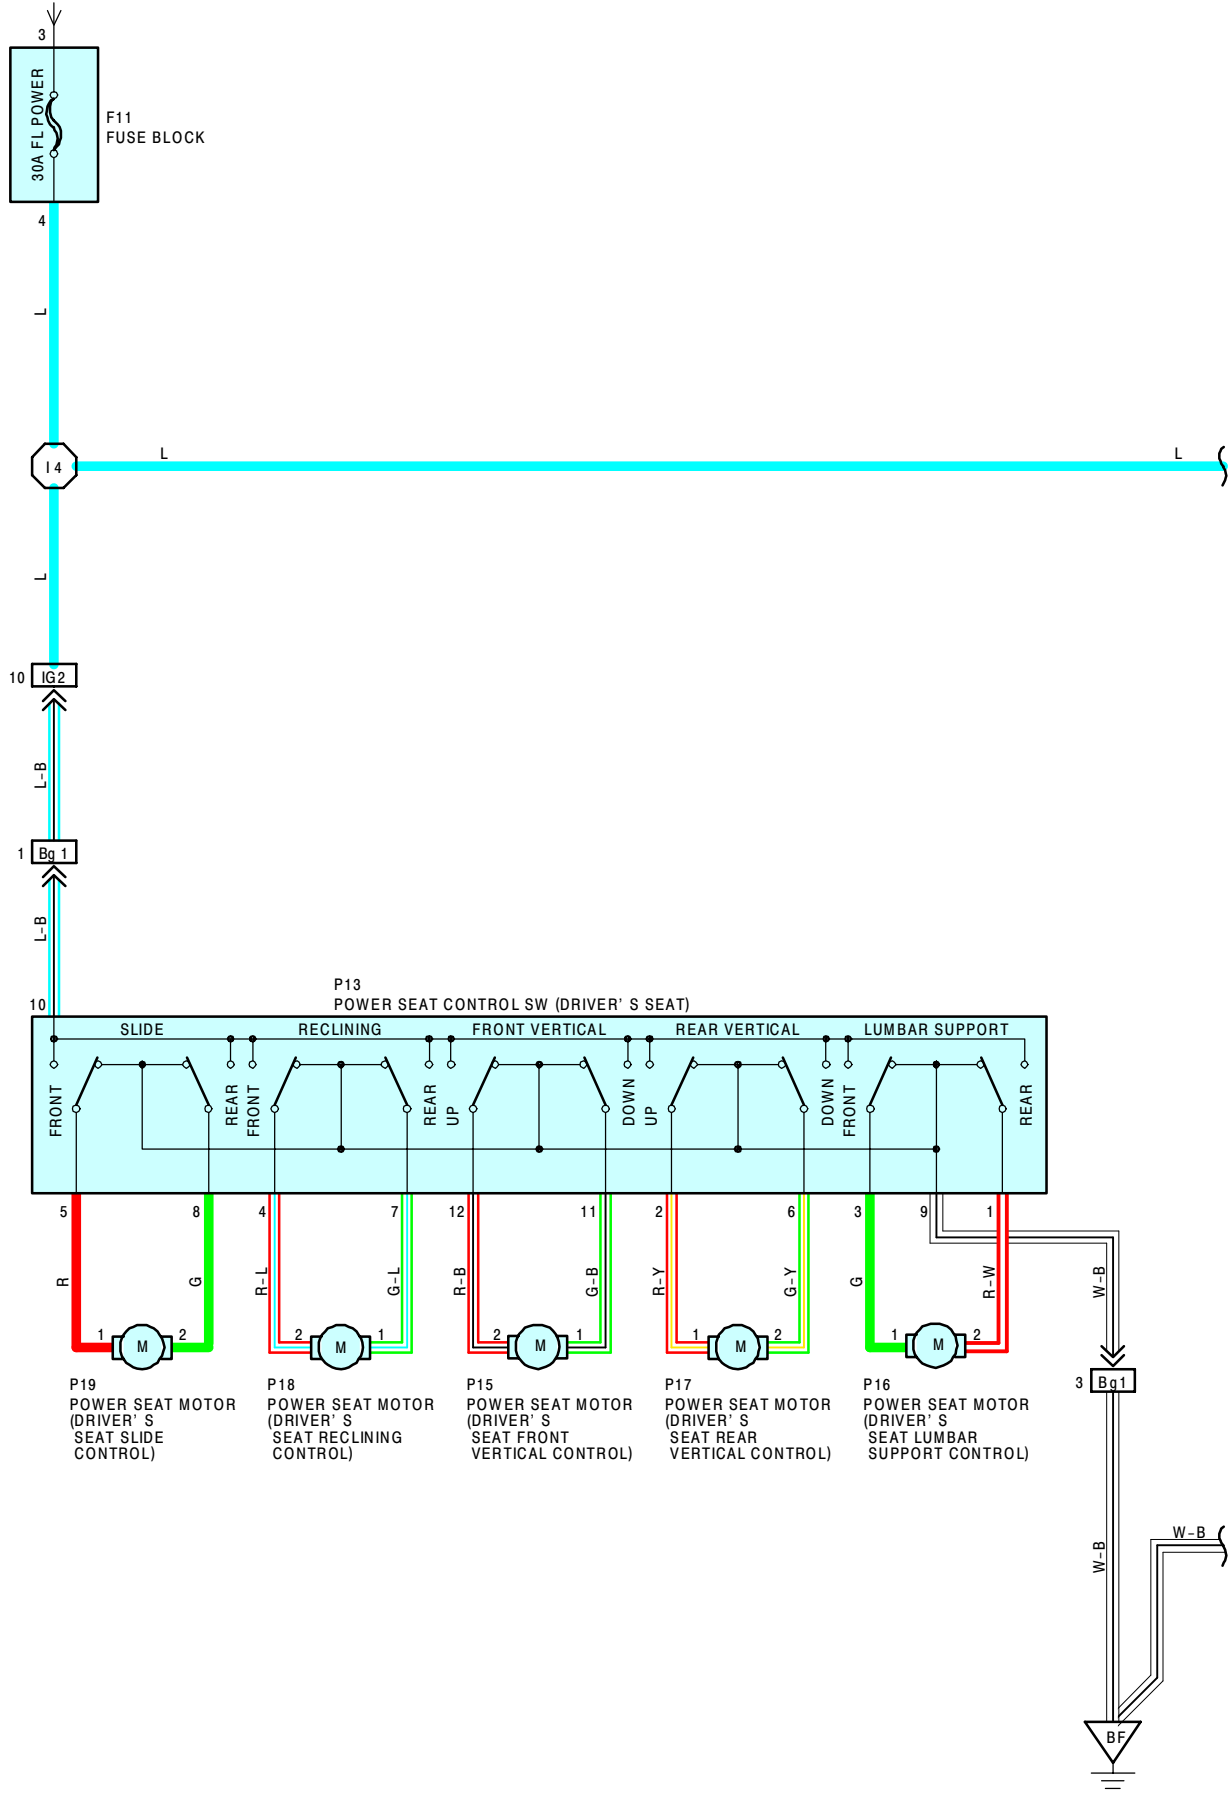

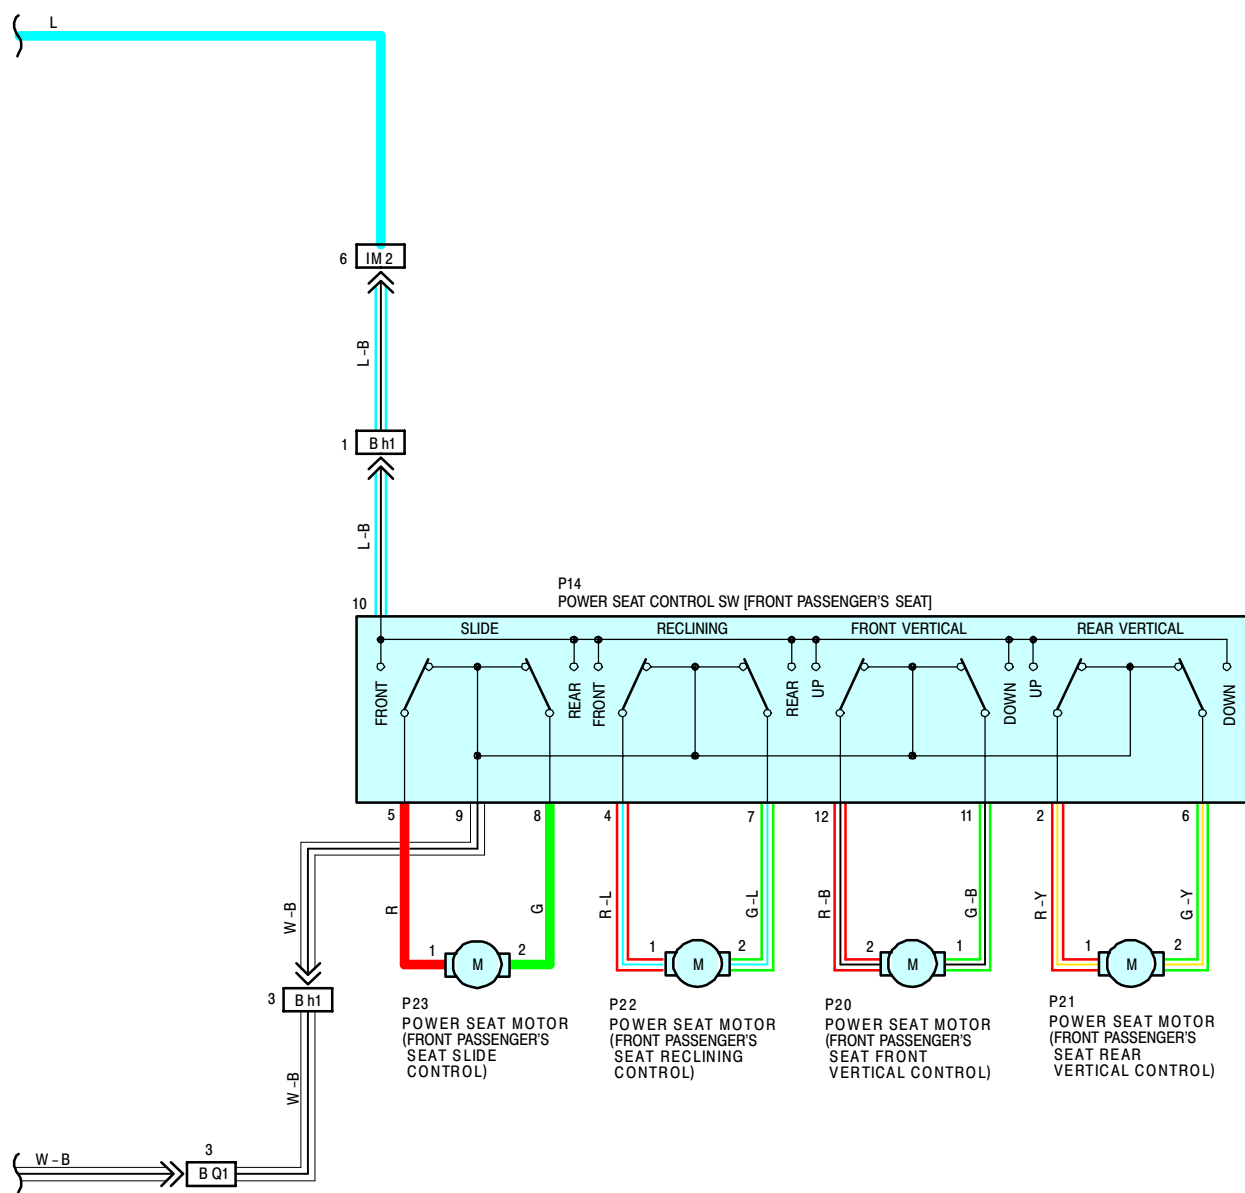



POWER SEAT

SERVICE HINTS

P13 POWER SEAT CONTROL SW (DRIVER'S SEAT)

- 10-5 : CLOSED WITH THE DRIVER'S SEAT AT FRONT SLIDE OPERATION
- 10-8 : CLOSED WITH THE DRIVER'S SEAT AT REAR SLIDE OPERATION
- 10-4 : CLOSED WITH THE DRIVER'S SEAT AT FRONT RECLINING OPERATION
- 10-7 : CLOSED WITH THE DRIVER'S SEAT AT REAR RECLINING OPERATION
- 10-12 : CLOSED WITH THE DRIVER'S SEAT AT FRONT VERTICAL UP OPERATION
- 10-11 : CLOSED WITH THE DRIVER'S SEAT AT FRONT VERTICAL DOWN OPERATION
- 10-2 : CLOSED WITH THE DRIVER'S SEAT AT REAR VERTICAL UP OPERATION
- 10-6 : CLOSED WITH THE DRIVER'S SEAT AT REAR VERTICAL DOWN OPERATION
- 10-3 : CLOSED WITH THE DRIVER'S SEAT AT LUMBAR SUPPORT FRONT OPERATION
- 10-1 : CLOSED WITH THE DRIVER'S SEAT AT LUMBAR SUPPORT REAR OPERATION
- 9-GROUND : ALWAYS CONTINUITY

P14 POWER SEAT CONTROL SW (FRONT PASSENGER'S SEAT)

- 10-5 : CLOSED WITH THE FRONT PASSENGER'S SEAT AT FRONT SLIDE OPERATION
- 10-8 : CLOSED WITH THE FRONT PASSENGER'S SEAT AT REAR SLIDE OPERATION
- 10-4 : CLOSED WITH THE FRONT PASSENGER'S SEAT AT FRONT RECLINING OPERATION
- 10-7 : CLOSED WITH THE FRONT PASSENGER'S SEAT AT REAR RECLINING OPERATION
- 10-12 : CLOSED WITH THE FRONT PASSENGER'S SEAT AT FRONT VERTICAL UP OPERATION
- 10-11 : CLOSED WITH THE FRONT PASSENGER'S SEAT AT FRONT VERTICAL DOWN OPERATION
- 10-2 : CLOSED WITH THE FRONT PASSENGER'S SEAT AT REAR VERTICAL UP OPERATION
- 10-6 : CLOSED WITH THE FRONT PASSENGER'S SEAT AT REAR VERTICAL DOWN OPERATION
- 9-GROUND : ALWAYS CONTINUITY

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	P16	28	P20	28
P13	28	P17	28	P21	28
P14	28	P18	28	P22	28
P15	28	P19	28	P23	28

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IM2	34	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BQ1	36	FLOOR NO. 2 WIRE AND FLOOR WIRE (UNDER THE CENTER CONSOLE)
Bg1	40	FLOOR NO. 1 WIRE AND SEAT NO. 1 LH WIRE (UNDER THE DRIVER'S SEAT)
Bh1	40	FLOOR NO. 2 WIRE AND SEAT NO. 1 RH WIRE (UNDER THE PASSENGER'S SEAT)

: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BF	36	UNDER THE CENTER CONSOLE BOX


: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 4	34	COWL WIRE			


F11

(SEE PAGE 20)


P13

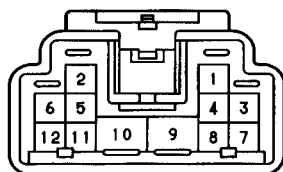

P14

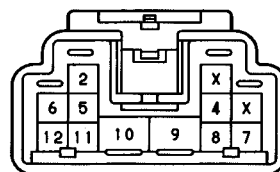

P15, P20 BLUE

 

P16



P17, P21 ORANGE



**P18, P19
P22, P23**

