



SERVICE HINTS

R 3 REAR HEATER SW

- 2-1 : CLOSED WITH THE IGNITION SW AT ON AND THE REAR HEATER SW AT **LO** POSITION
 4-1 : CLOSED WITH THE IGNITION SW AT ON AND THE REAR HEATER SW AT **HI** POSITION

R14 REAR HEATER RELAY

- 4-1 : CLOSED WITH THE IGNITION SW AT **ON** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	J 7	25	R13	27
J 4	25	R 3	25	R14	27

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IM2	34	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BQ1	36	FLOOR NO. 2 WIRE AND FLOOR WIRE (UNDER THE CENTER CONSOLE)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
BF	36	UNDER THE CENTER CONSOLE BOX


⬡ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B19	38	FLOOR NO. 2 WIRE			

F11


(SEE PAGE 20)

J 4

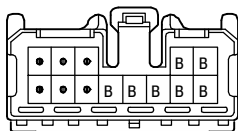

(HINT : SEE PAGE 7)

 J 7 BLUE



(HINT : SEE PAGE 7)

R 3 BLACK



R13



R14

