



SERVICE HINTS

DEFOG RELAY

(1) 4 – **(1)** 2 : CLOSED WITH THE IGNITION SW ON AND THE REAR WINDOW DEFOGGER SW ON

R 4 REAR WINDOW DEFOGGER SW

2, 6 GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ON** POSITION

3–GROUND : ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	J 8	25	R17 B	25
J 1	25	R 4	25		
J 4	25	R16 A	25		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
IJ1	34	COWL WIRE AND INSTRUMENT PANEL WIRE (INSTRUMENT PANEL CENTER)
BV1	36	LUGGAGE ROOM NO. 1 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BV2		
BW1	36	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BW2		
BX1	38	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BX2		
BY1	38	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
Ba1	38	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
IE	32	RIGHT KICK PANEL
BF	36	UNDER THE CENTER CONSOLE BOX

F11


(SEE PAGE 20)

J 1

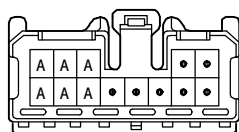


(HINT : SEE PAGE 7)

J 4

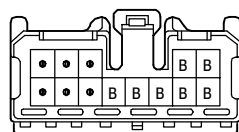

(HINT : SEE PAGE 7)

 J 8 BLUE



(HINT : SEE PAGE 7)

R 4 BLACK

R16 (A), R17 (B) BLACK

