




# STOP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 54)

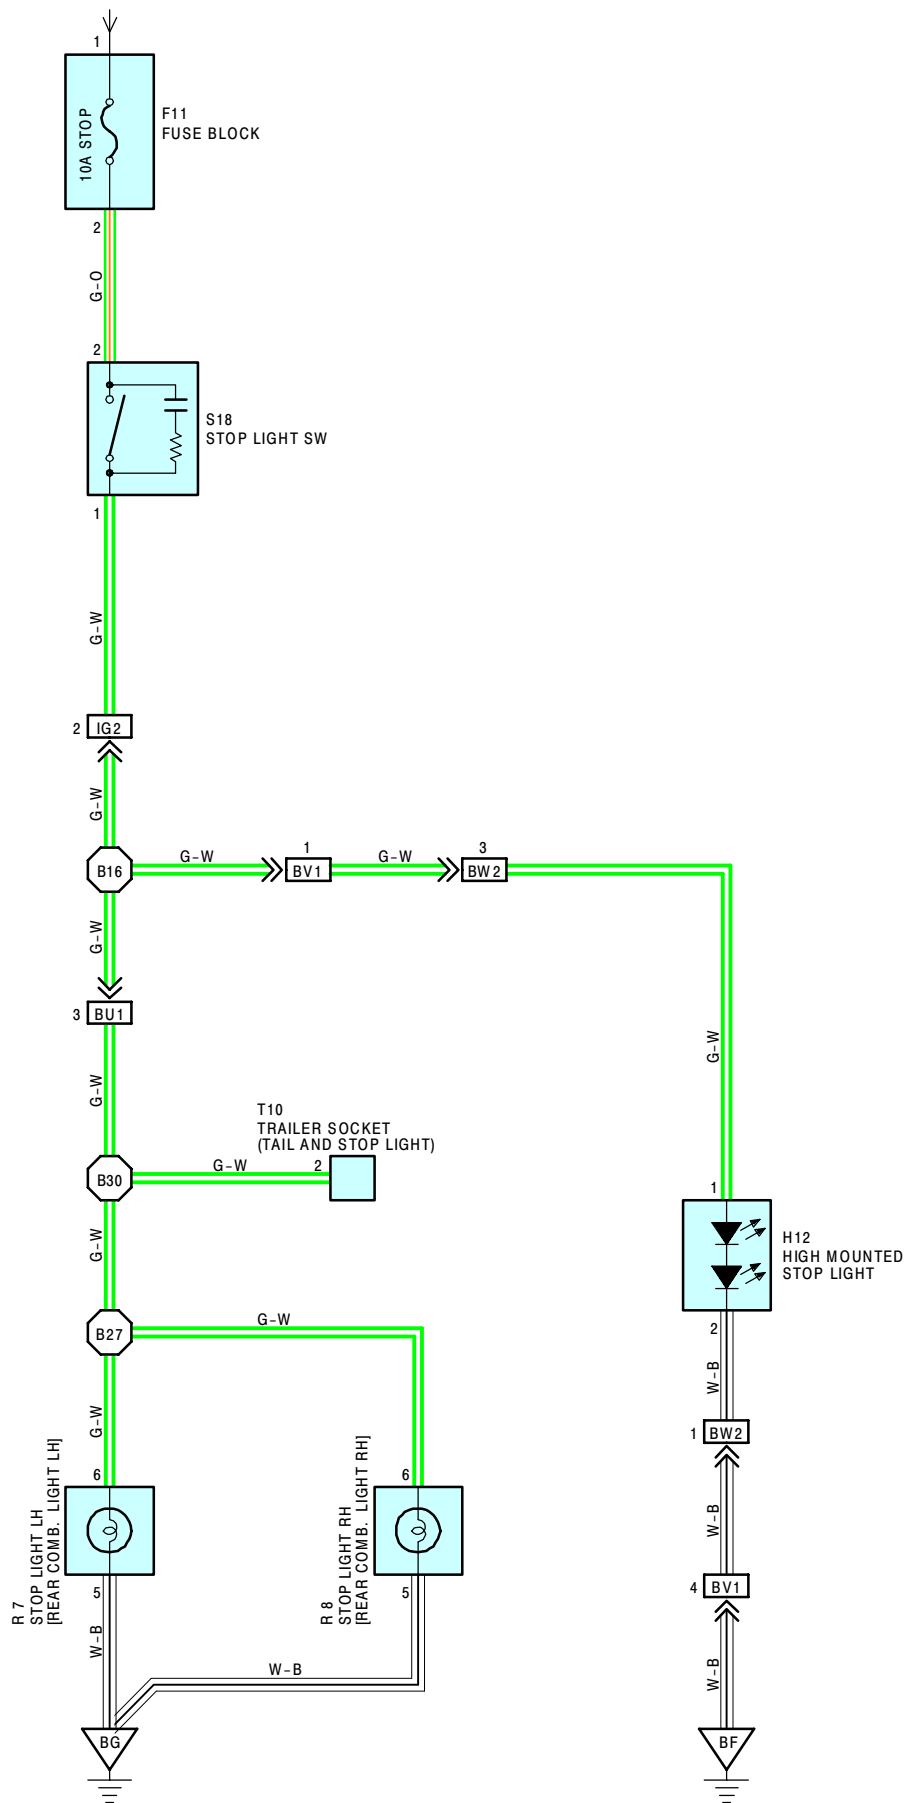

## SERVICE HINTS

### S18 STOP LIGHT SW

2-1 : CLOSED WITH THE BRAKE PEDAL DEPRESSED

## ○ : PARTS LOCATION

| CODE       | SEE PAGE | CODE       | SEE PAGE | CODE       | SEE PAGE |
|------------|----------|------------|----------|------------|----------|
| <b>F11</b> | 25       | <b>R 7</b> | 27       | <b>S18</b> | 25       |
| <b>H12</b> | 26       | <b>R 8</b> | 27       | <b>T10</b> | 27       |

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| CODE       | SEE PAGE | JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)                |
|------------|----------|---------------------------------------------------------------------------|
| <b>IG2</b> | 32       | COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)                                |
| <b>BU1</b> | 36       | FLOOR NO. 3 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)                |
| <b>BV1</b> | 36       | LUGGAGE ROOM NO. 1 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)         |
| <b>BW2</b> | 36       | BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF) |

## ▽ : GROUND POINTS

| CODE      | SEE PAGE | GROUND POINTS LOCATION       |
|-----------|----------|------------------------------|
| <b>BF</b> | 36       | UNDER THE CENTER CONSOLE BOX |
| <b>BG</b> | 36       | LOWER BACK PANEL CENTER      |

## ○ : SPLICE POINTS

| CODE       | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS | CODE       | SEE PAGE | WIRE HARNESS WITH SPLICE POINTS |
|------------|----------|---------------------------------|------------|----------|---------------------------------|
| <b>B16</b> | 38       | FLOOR WIRE                      | <b>B30</b> | 38       | FLOOR NO. 3 WIRE                |
| <b>B27</b> | 38       | FLOOR NO. 3 WIRE                |            |          |                                 |

F11

H12

R 7, R 8

S18 BLACK

T10 BLACK

(SEE PAGE 20)

