


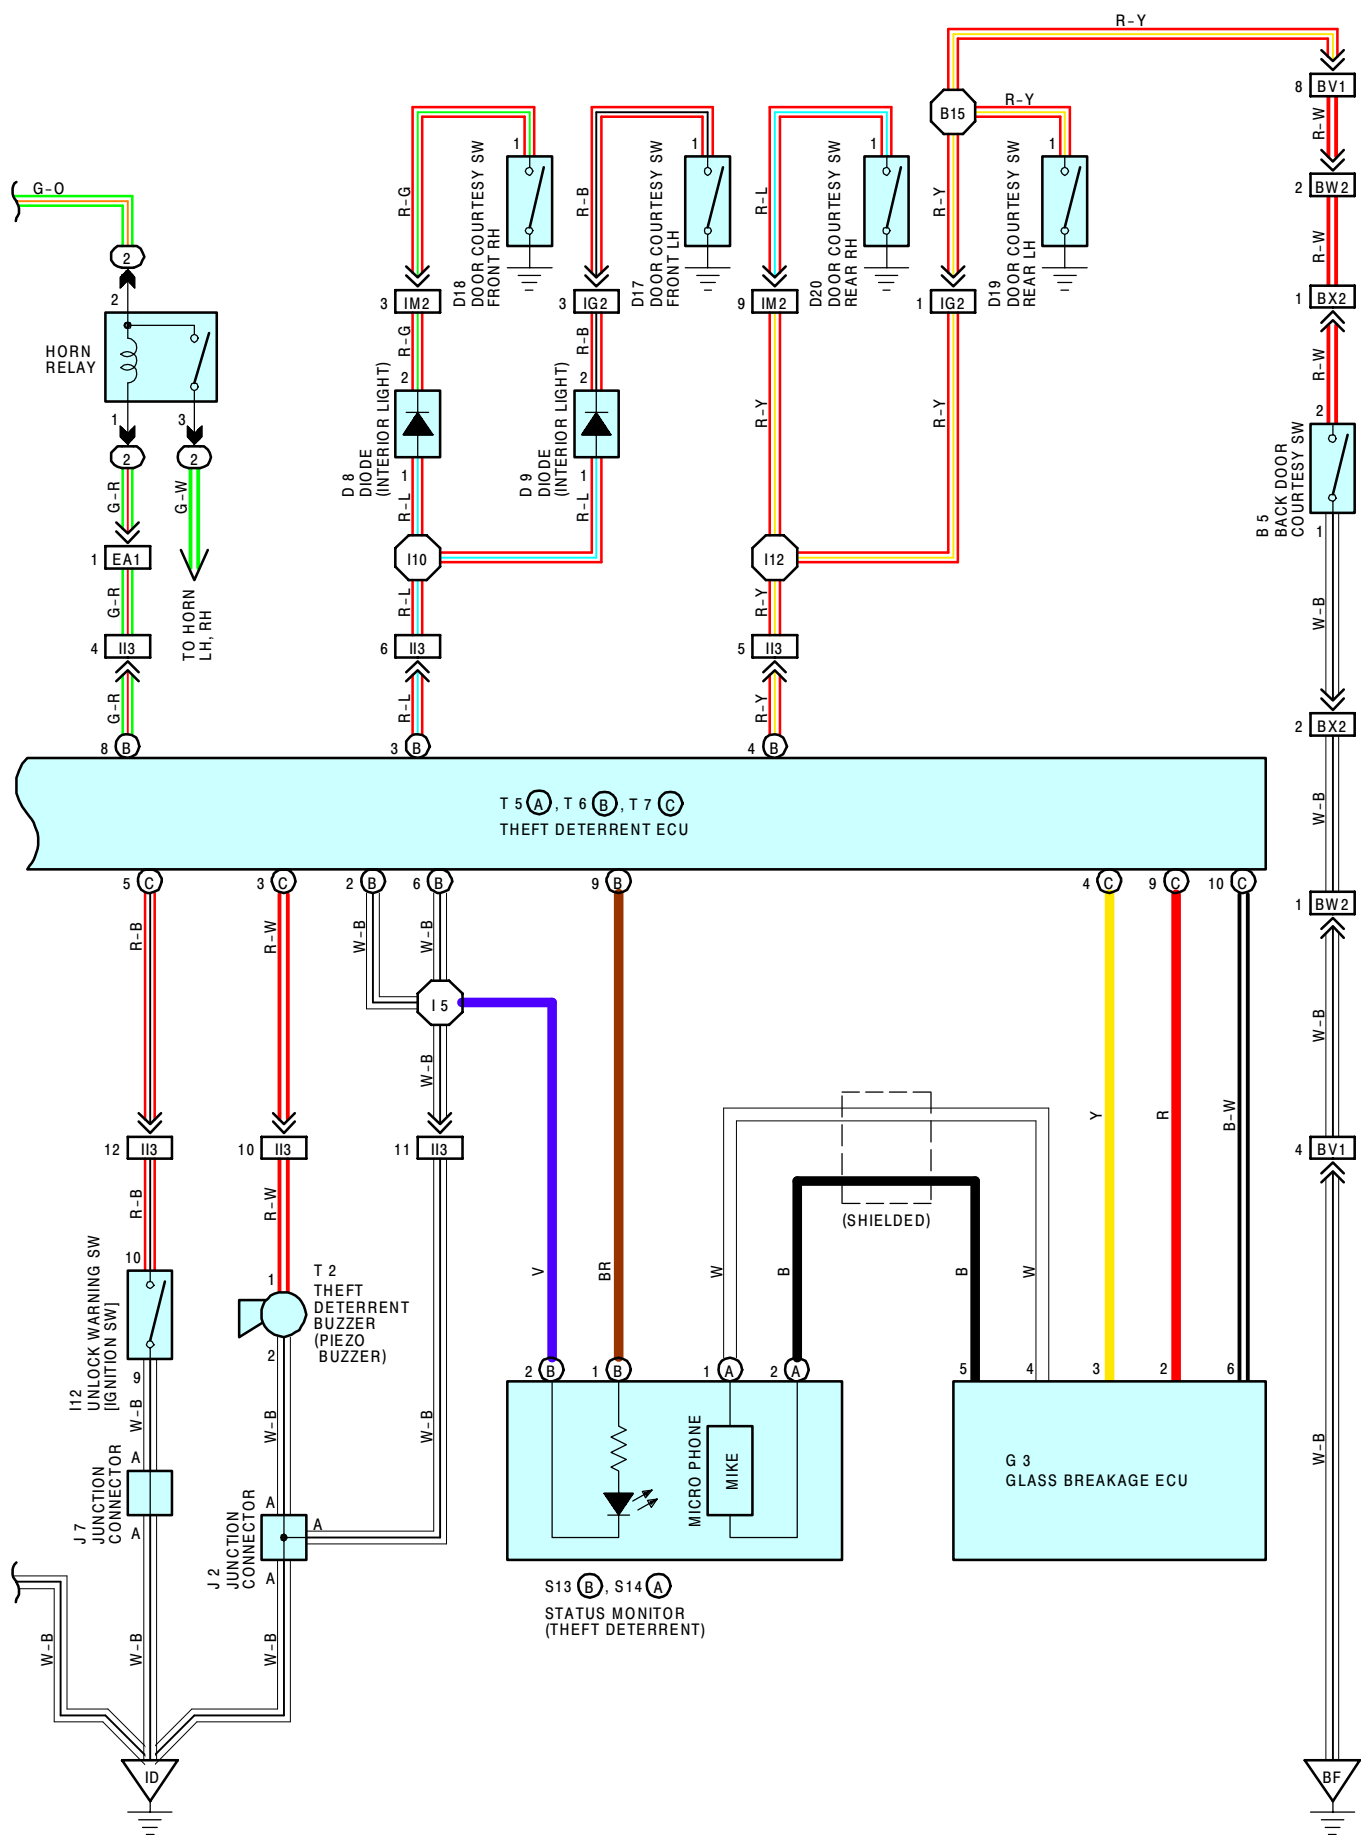



THEFT DETERRENT

SERVICE HINTS

B 5 BACK DOOR COURTESY SW

2-1 : CLOSED WITH THE BACK DOOR OPENED

D17, D18, D19, D20 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH

1-GROUND : CONTINUITY WITH EACH OF THE DOOR OPENED

D21, D22 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH

2-3 : CLOSED WITH THE DOOR KEY CYLINDER UNLOCKED WITH THE KEY

1-3 : CLOSED WITH THE DOOR KEY CYLINDER LOCKED WITH THE KEY

D24 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH

3-4 : CLOSED WITH THE DOOR LOCK CONTROL SW RH AT **UNLOCK** POSITION

2-4 : CLOSED WITH THE DOOR LOCK CONTROL SW RH AT **LOCK** POSITION

D25 DOOR UNLOCK DETECTION SW FRONT LH

1-3 : CLOSED WITH THE DOOR UNLOCK DETECTION SW LH AT **UNLOCK** POSITION

P 5 DOOR LOCK CONTROL SW LH [POWER WINDOW MASTER SW]

3-1 : CLOSED WITH THE DOOR LOCK CONTROL SW AT **UNLOCK** POSITION

2-4 : CLOSED WITH THE DOOR LOCK CONTROL SW AT **LOCK** POSITION

T 5 (A), T 6 (B), T 7 (C) THEFT DETERRENT ECU

(B) 1-GROUND : APPROX. **12** VOLTS WITH THE IGNITION SW AT **ST** POSITION

(B) 2, (B) 6-GROUND : ALWAYS CONTINUITY

(B) 3-GROUND : APPROX. **12** VOLTS WITH THE FRONT DOOR LH OR RH OPENED

(B) 4-GROUND : APPROX. **12** VOLTS WITH THE REAR DOOR LH, RH OR BACK DOOR OPENED OR BACK DOOR LOCK AT **UNLOCK** POSITION

(B) 5, (B) 7, (B) 8-GROUND : ALWAYS APPROX. **12** VOLTS

(B) 10-GROUND : APPROX. **12** VOLTS WITH THE IGNITION SW AT **ACC** OR **ON** POSITION

(C) 1-GROUND : CONTINUITY WITH THE FRONT DOOR TO **UNLOCK** POSITION

(C) 2-GROUND : CONTINUITY WITH THE DOOR KEY CYLINDER LOCKED WITH THE KEY

(C) 6-GROUND : CONTINUITY WITH THE DOOR LOCK CONTROL SW LH OR RH TO **UNLOCK** POSITION OR FRONT DOOR RH KEY CYLINDER UNLOCKED WITH THE KEY

: PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 5	26	D25	26	P 5	27
D 8	24	F 6 A	22	S12	25
D 9	24	F 8 C	22	S13 B	25
D17	26	F11	25	S14 A	25
D18	26	G 3	25	T 2	23
D19	26	I12	25	T 5 A	25
D20	26	J 2	25	T 6 B	25
D21	26	J 6	25	T 7 C	25
D22	26	J 7	25		
D24	26	J 8	25		

: RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		
EA3		
IG2	32	COWL WIRE AND FLOOR WIRE (LEFT KICK PANEL)
I12	32	SECURITY WIRE AND COWL WIRE (LEFT KICK PANEL)
I13	32	COWL WIRE AND SECURITY WIRE (LEFT KICK PANEL)
IM2	34	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BN1	36	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BN2		
BO1	36	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BV1	36	LUGGAGE ROOM NO. 1 WIRE AND FLOOR WIRE (LEFT QUARTER PANEL INNER)
BW2	36	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BX2	36	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)



: GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL
BF	36	UNDER THE CENTER CONSOLE BOX



: SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I5	34	SECURITY WIRE	B 2	38	FRONT DOOR LH WIRE
I6	34	COWL WIRE	B 6	38	FRONT DOOR RH WIRE
I10			B 7		
I12			B15	38	FLOOR WIRE
I15					

B 5



D 8, D 9 GRAY



D17, D18, D19, D20 BLUE



D21, D22



D24



D25



 
F 6 (A), F 8 (C)




F11

(SEE PAGE 20)


G 3



I12 BLACK

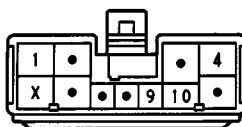


J 2, J 7, J 8 BLUE

 


(HINT:SEE PAGE 7)

 J 6



(HINT:SEE PAGE 7)

 P 5




S12 BLACK




S13 (B), S14 (A)




T 2

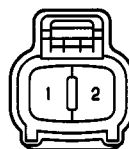

T 5 (A)

 

T 6 (B)

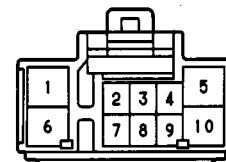

T 7 (C)

